KE-50XS910

SERVICE MANUAL

US Model
Canadian Model

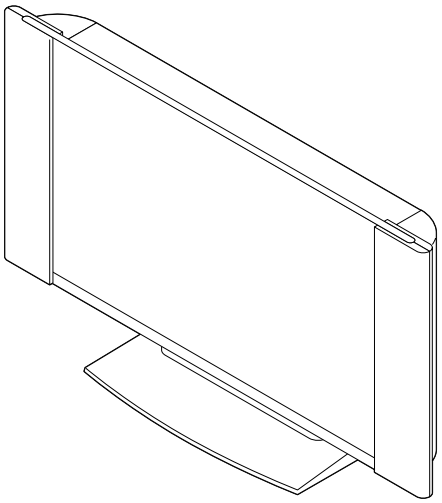

SPECIFICATIONS

Panel System	Plasma Display panel	
Resolution	1280 pixels (horizontal) × 768 pixels (vertical)	
Antenna	75 ohm external terminal for VHF/UHF	
Television System	NTSC, American TV Standard	
Channel Coverage	VHF	2-13
	UHF	14-69
	CATV	1-125
Power Requirements	120V, 60 Hz	
Inputs/Outputs		
DVI-HDTV	1 terminal, 3.3V T.M.D.S., 50 ohms The DVI-HDTV input terminal is compliant with the EIA-861 standard and is not intended for use with personal computers.	
Video (IN)	3 total (1 on side panel)	1 Vp-p, 75 ohms unbalanced, sync negative
S Video (IN)	3 total (1 on side panel)	Y: 1 Vp-p, 75 ohms unbalanced, sync negative C: 0.286 Vp-p (Burst signal), 75 ohms
Audio (IN)	6 total (1 on side panel)	500 mVrms (100% modulation) Impedance: 47 kilohms
Component Video Input	2 (Y, PB, PR)	Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative; PB: 0.7 Vp-p, 75 ohms PR: 0.7 Vp-p, 75 ohms
CONTROL S (IN/OUT)	1	
Variable/Fixed Audio (OUT)	1	More than 408 mVrms at the maximum volume setting (Variable) More than 408 mVrms (Fixed) Impedance (output): 2 kilohms
Sub woofer (OUT)	1	phono jack
RF Inputs	2	

Flat Panel Color TV

SONY®

Screen Size (measured diagonally)	50 inches	
Speaker Output	15W × 2	
Dimensions (W × H × D)	1435 × 881 × 347 mm (56 1/2 × 34 3/4 × 13 3/4 in)	
Mass	61.0 kg (134 lbs 8 oz)	
Power Consumption	In Use	430 W
	In Standby	Under 1.5 W
Supplied Accessories	Remote Control (1)	RM-Y1001
	AA Batteries (2)	
	AC power code (1)	
	Antenna cable (1)	
	Cable clamp (1)	
	Clamp rivets (4)	
	Clamp screws (2)	
	Cleaning cloth (1)	

Design and specifications are subject to change without notice.

WARNING AND CAUTIONS

CAUTION

These servicing instructions are for use by qualified service personnel only To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

WARNING!!

An isolation transformer should be used during any service to avoid possible shock hazard, because of live chassis. The chassis of this receiver is directly connected to the ac power line.

⚠ SAFETY-RELATED COMPONENT WARNING!!

Components identified by shading and ⚠ mark on the schematic diagrams, exploded views, and in the parts list are critical for safe operation. Replace these components with Sony parts whose part numbers appear as shown in this manual or in supplements published by Sony. Circuit adjustments that are critical for safe operation are identified in this manual. Follow these procedures whenever critical components are replaced or improper operation is suspected.

ATTENTION!!

Ces instructions de service sont à l'usage du personnel de service qualifié seulement. Pour prévenir le risque de choc électrique, ne pas faire l'entretien autre que celui contenu dans le Mode d'emploi à moins que vous soyez qualifié faire ainsi.

Afin d'eviter tout risque d'electrocution provenant d'un châssis sous tension, un transformateur d'isolement doit etre utilisé lors de tout dépannage. Le châssis de ce récepteur est directement raccordé à l'alimentation du secteur

⚠ ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

Les composants identifies par une trame et par une marque ⚠ sur les schemas de principe, les vues explosees et les listes de pieces sont d'une importance critique pour la securite du fonctionnement. Ne les remplacer que par des composants Sony dont le numero de piece est indique dans le present manuel ou dans des supplements publies par Sony. Les reglages de circuit dont l'importance est critique pour la securite du fonctionnement sont identifies dans le present manuel. Suivre ces procedures lors de chaque remplacement de composants critiques, ou lorsqu'un mauvais fonctionnement suspecte.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the B+ and HV to see if they are specified values. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
8. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described right.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

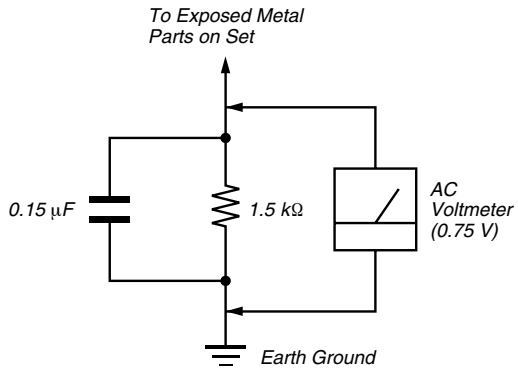

Fig. A. Using an AC voltmeter to check AC leakage.

WARNING!!

SAFETY-RELATED COMPONENT WARNING!!
COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

AVERTISSEMENT!!
ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!
LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE ! SONT CRITIQUES POUR LA SÉCURITÉ. NE LES REMPLACER QUE PAR UNE PIÈCE PORTANT LE NUMÉRO SPECIFIÉ. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

TABLE OF CONTENTS

1. DISASSEMBLY 1-1

1-1. REAR COVER REMOVAL 1-1
1-2. UD BOARD REMOVAL 1-2
1-3. A1 AND J2 BOARDS REMOVAL 1-2
1-4. DE3, DIC2, J1 AND MS2A BOARDS REMOVAL 1-3
1-5. K BOARD REMOVAL 1-3
1-6. H2 BOARD REMOVAL 1-4
1-7. HM AND H1 BOARDS REMOVAL 1-4
1-8. SPEAKER BOX REMOVAL 1-5
1-9. SWITCHING REGULATOR REMOVAL 1-5
1-10. SHIELD ASSY REMOVAL 1-6
1-11. PLASMA DISPLAY PANEL REMOVAL 1-6
1-12. H3 AND H4 BOARDS REMOVAL 1-7

2. ADJUSTMENTS 2-1

2-1. WHITE BALANCE ADJUSTMENT 2-1

3. DIAGRAMS 3-1

3-1. BLOCK DIAGRAMS 3-1
3-2. FRAME DIAGRAM 3-7
3-3. CIRCUIT BOARDS LOCATION 3-8
3-4. SCHEMATIC DIAGRMS 3-8
(1) Schematic Diagrams of A1 Board 3-9
(2) Schematic Diagrams of DE3 Board 3-13
(3) Schematic Diagrams of DIC2 Board 3-19
(4) Schematic Diagram of H1 and H2 Boards 3-25
(5) Schematic Diagram of H3 and H4 Boards 3-26
(6) Schematic Diagram of HM Board 3-27
(7) Schematic Diagram of J1 Board 3-28
(8) Schematic Diagram of J2 Board 3-29
(9) Schematic Diagrams of K Board 3-30
(10) Schematic Diagram of UD Board 3-31
3-5.SEMICONDUCTORS 3-32

4. EXPLODED VIEWS 4-1

4-1. COVER AND STAND 4-2
4-2. SPEAKER 4-3
4-3. CHASSIS-1 4-4
4-4. CHASSIS-2 4-5
4-5. PACKING MATERIALS 4-6

5. ELECTRICAL PARTS LIST 5-1

SECTION 1
DISASSEMBLY

1-1. REAR COVER REMOVAL

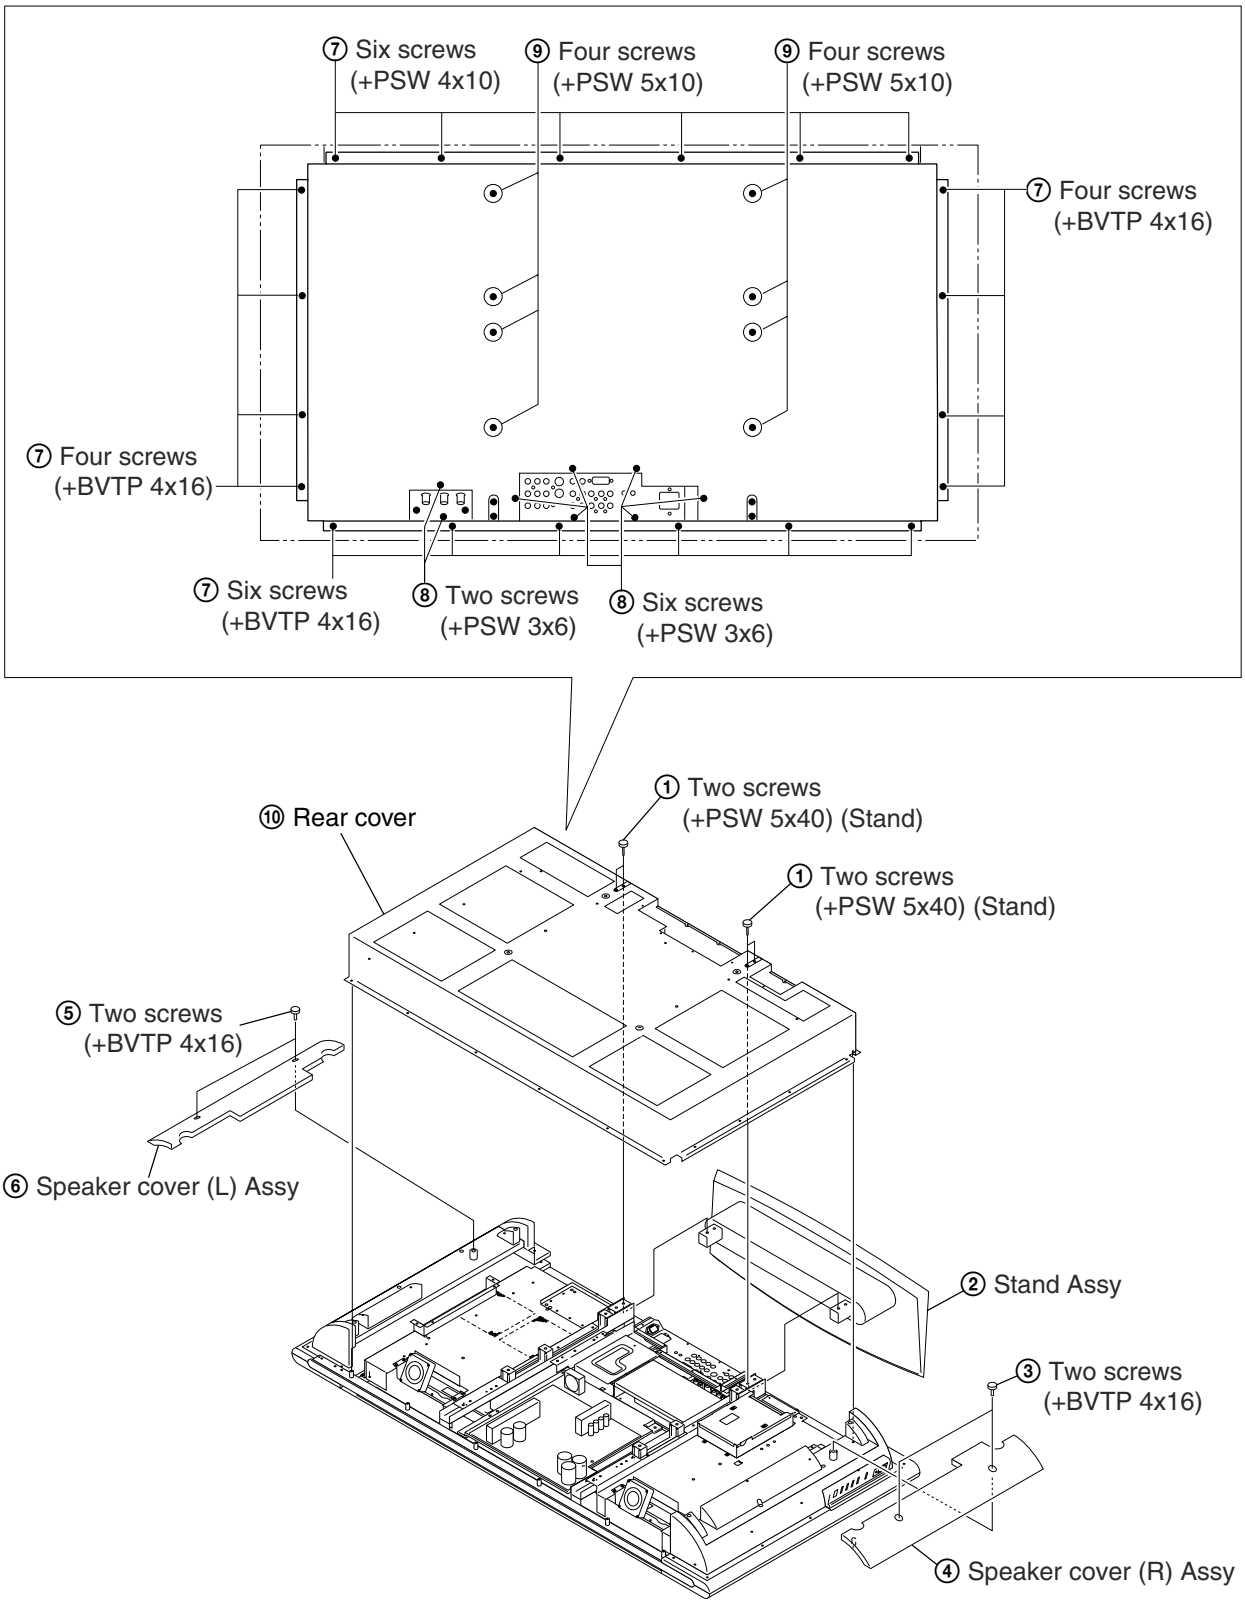
⑦ Six screws (+PSW 4x10)
⑨ Four screws (+PSW 5x10)
⑨ Four screws (+PSW 5x10)
⑦ Four screws (+BVTP 4x16)
⑦ Four screws (+BVTP 4x16)
⑦ Six screws (+BVTP 4x16)
⑧ Two screws (+PSW 3x6)
⑧ Six screws (+PSW 3x6)
⑩ Rear cover
① Two screws (+PSW 5x40) (Stand)
① Two screws (+PSW 5x40) (Stand)
⑤ Two screws (+BVTP 4x16)
⑥ Speaker cover (L) Assy
② Stand Assy
③ Two screws (+BVTP 4x16)
④ Speaker cover (R) Assy

1-2. UD BOARD REMOVAL

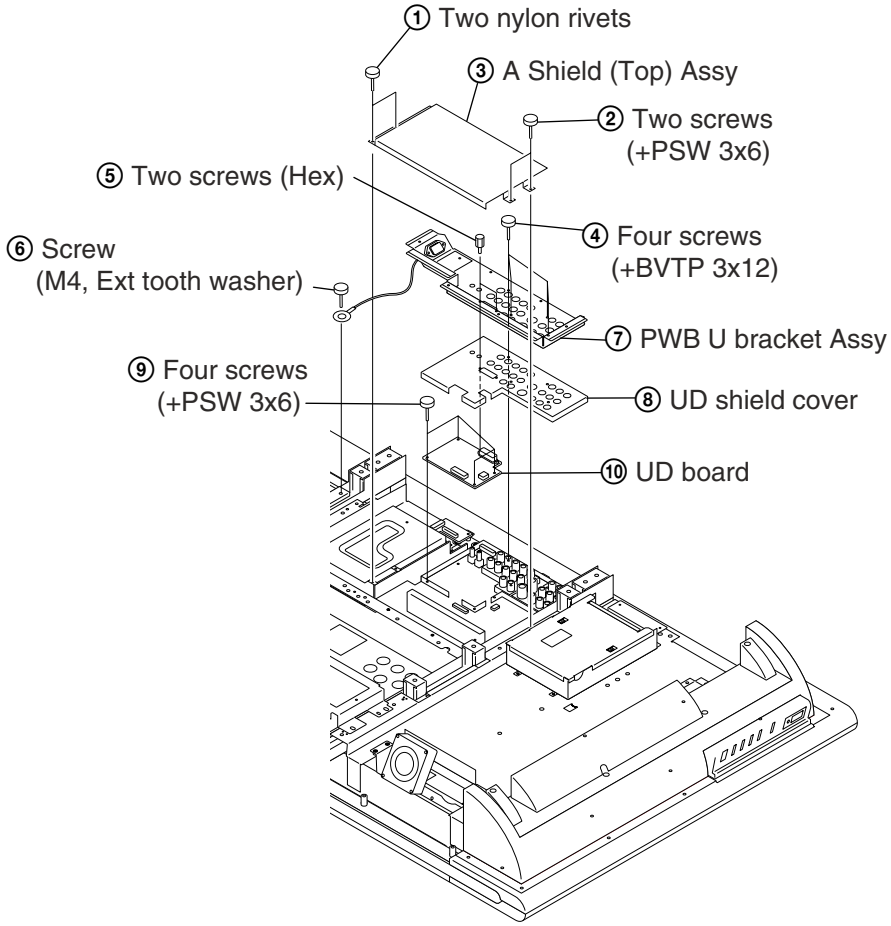

1-3. A1 AND J2 BOARDS REMOVAL

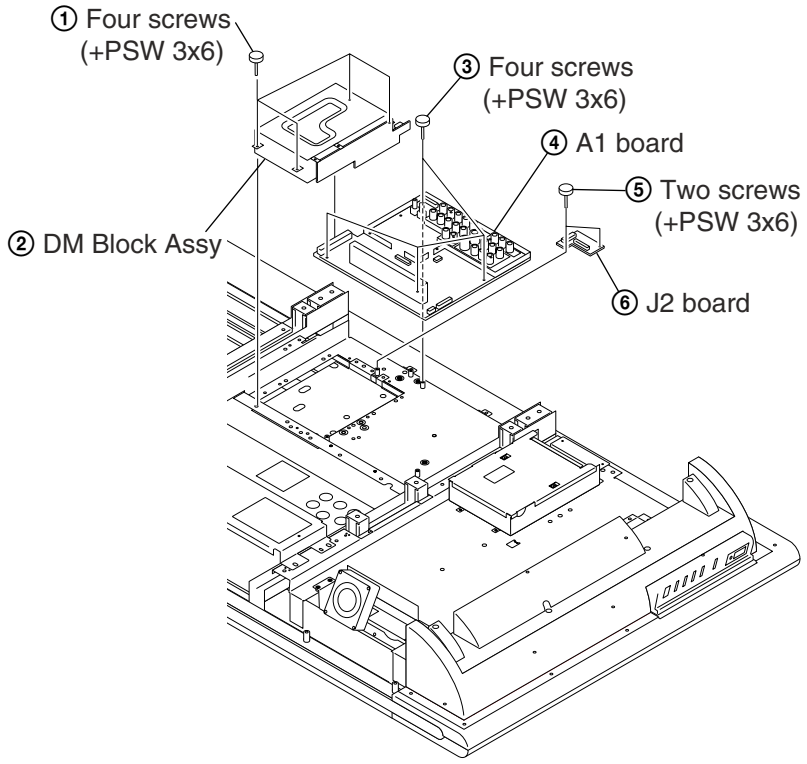

1-4. DE3, DIC2, J1 AND MS2A BOARDS REMOVAL

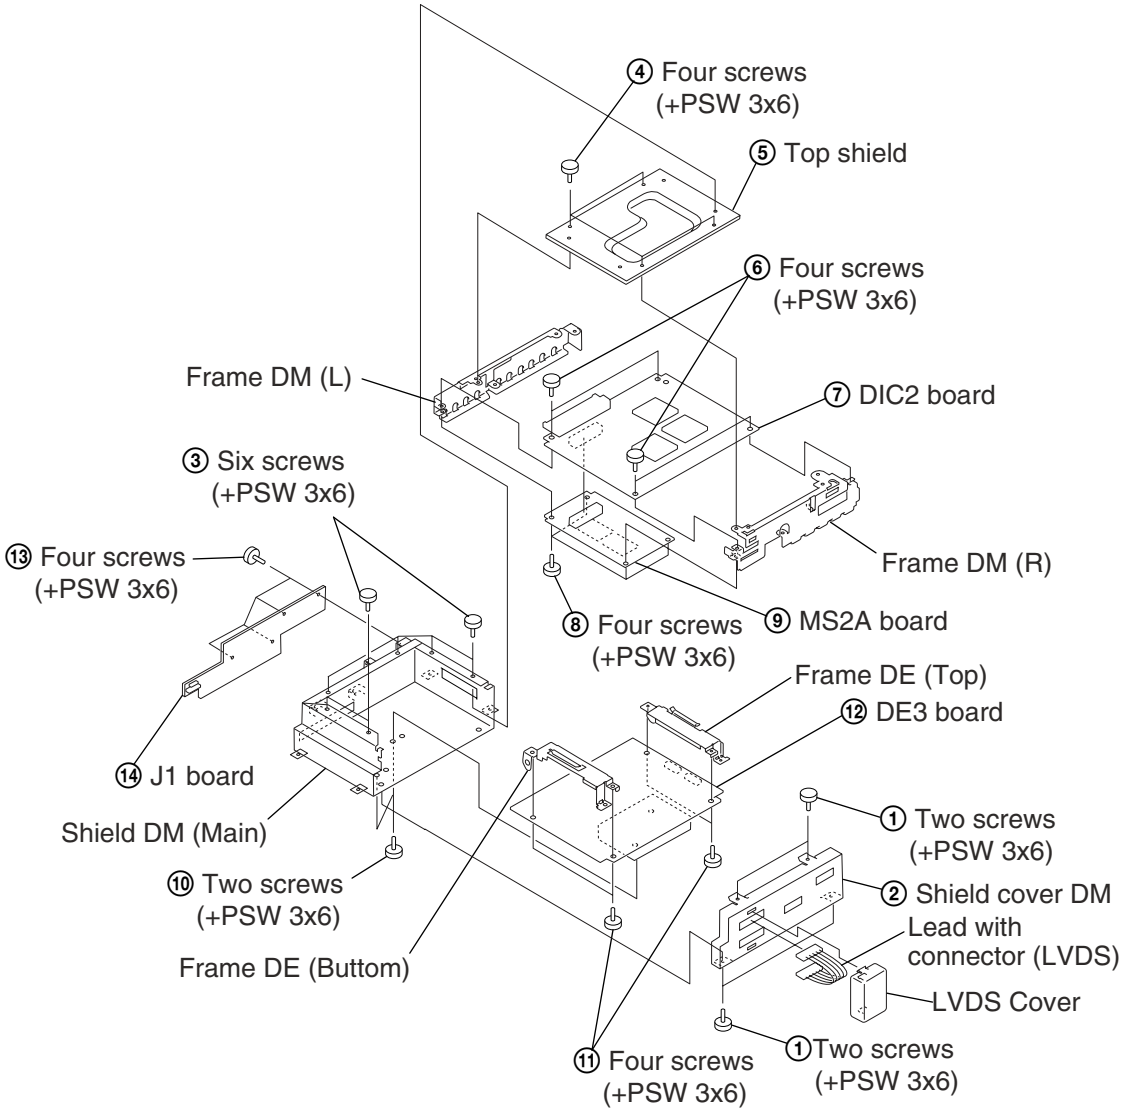

1-5. K BOARD REMOVAL

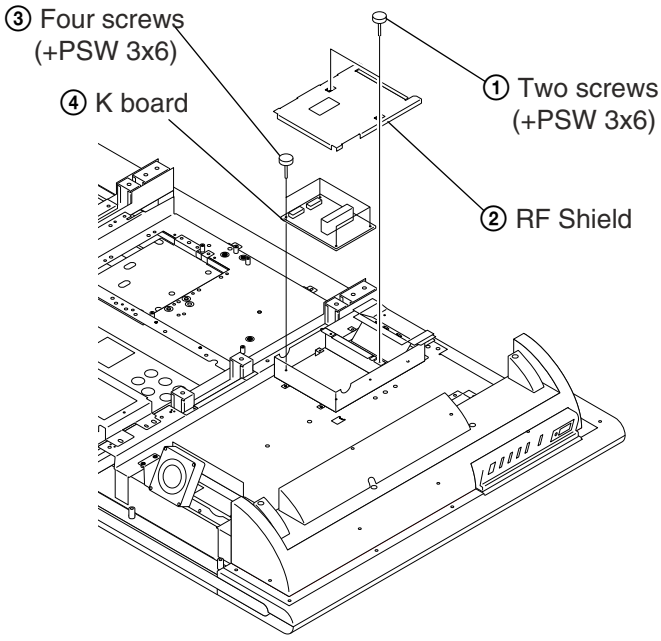

1-6. H2 BOARD REMOVAL

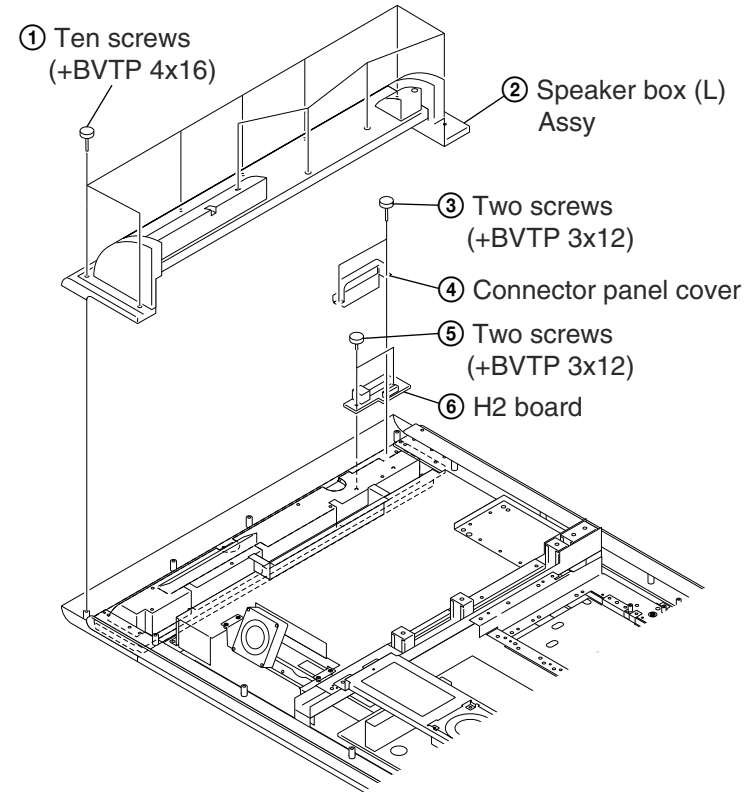

1-7. HM AND H1 BOARDS REMOVAL

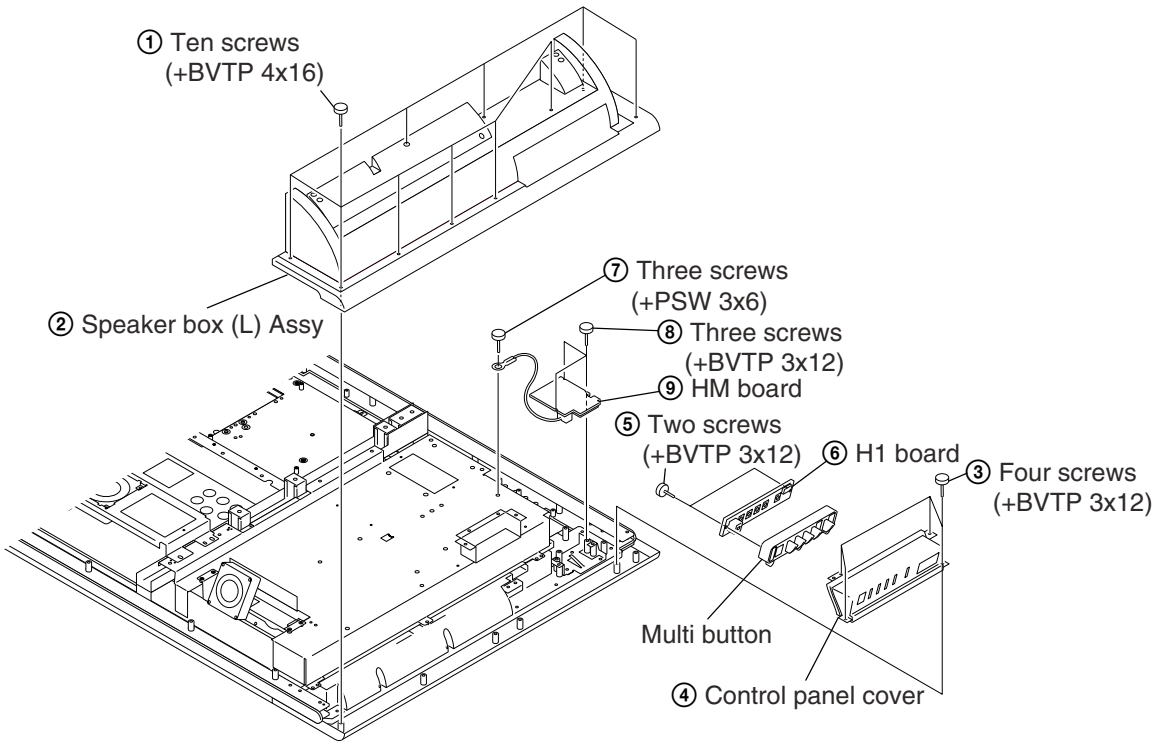

1-8. SPEAKER BOX REMOVAL

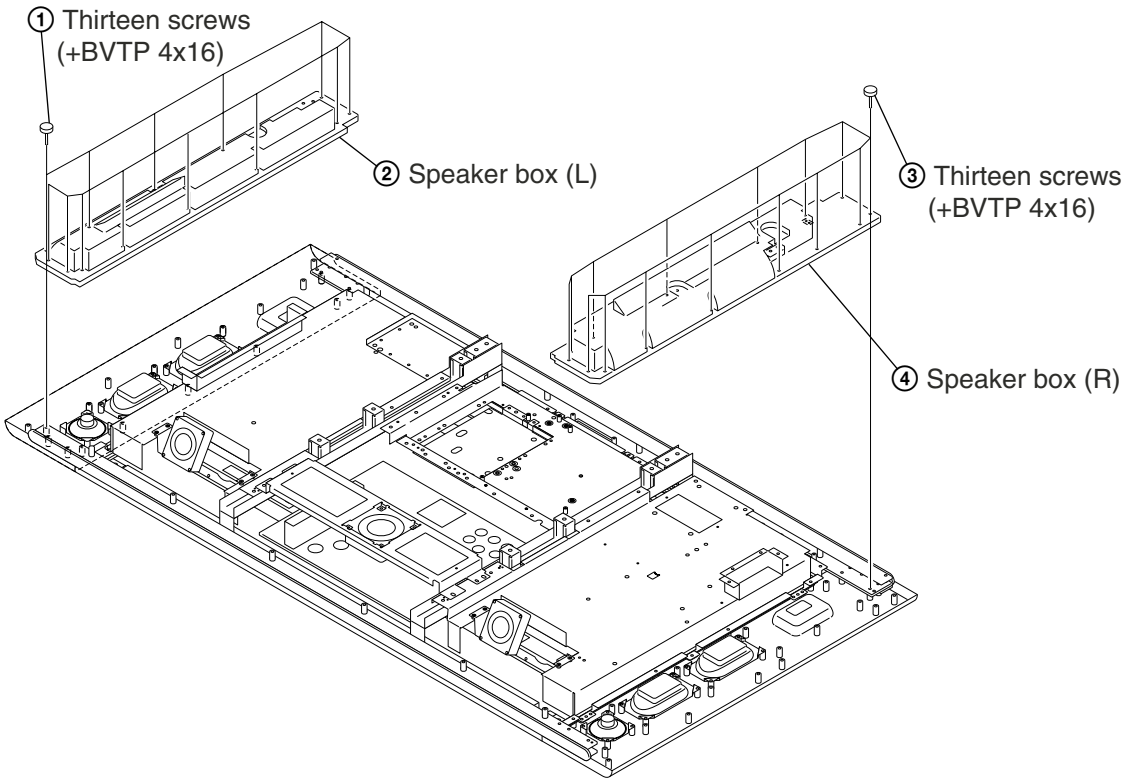

1-9. SWITCHING REGULATOR REMOVAL

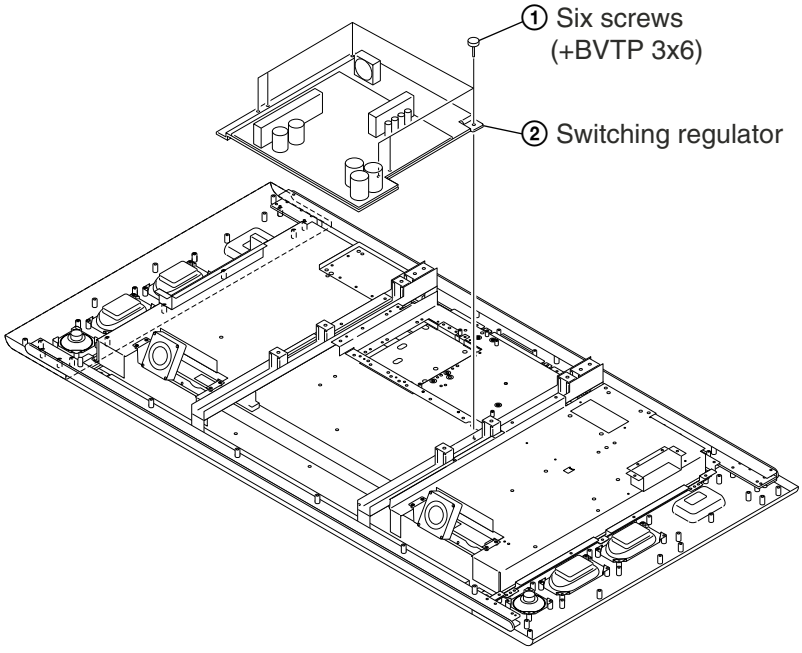

1-10. SHIELD ASSY REMOVAL

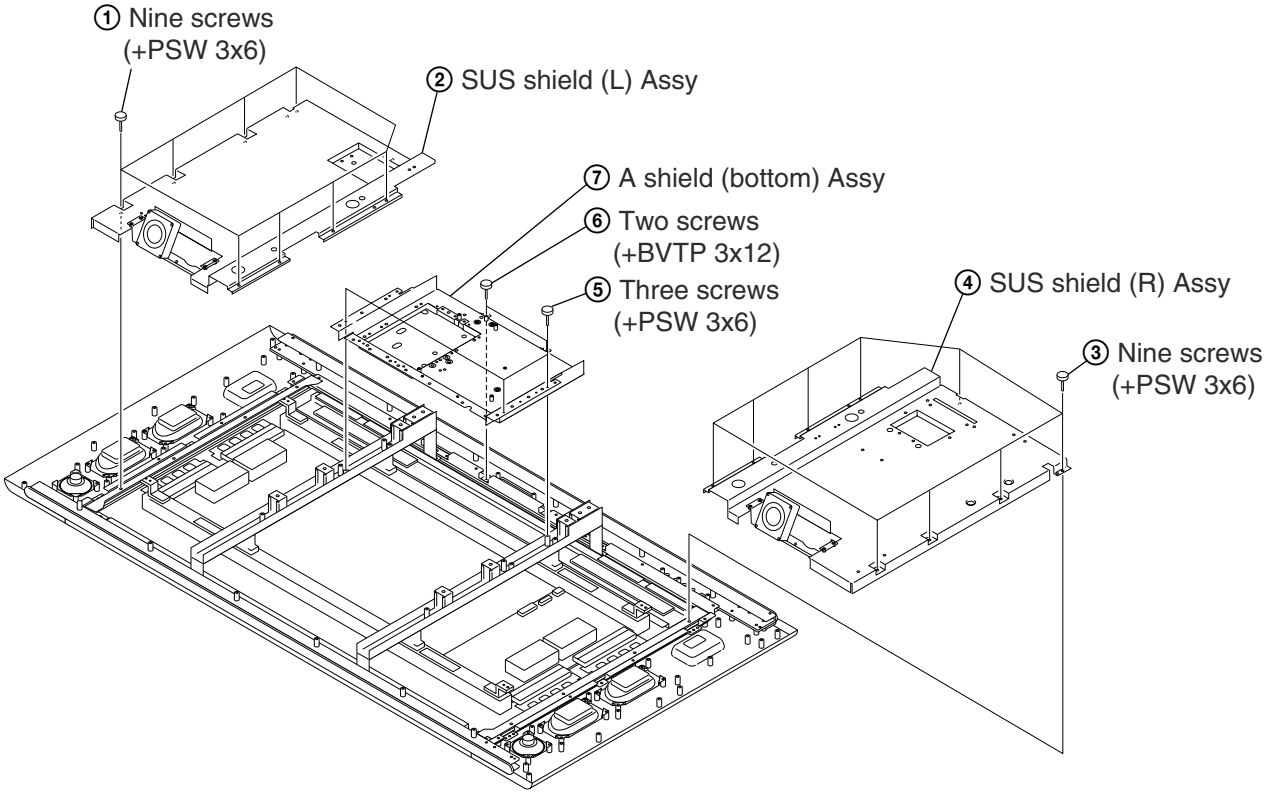

1-11. PLASMA DISPLAY PANEL REMOVAL

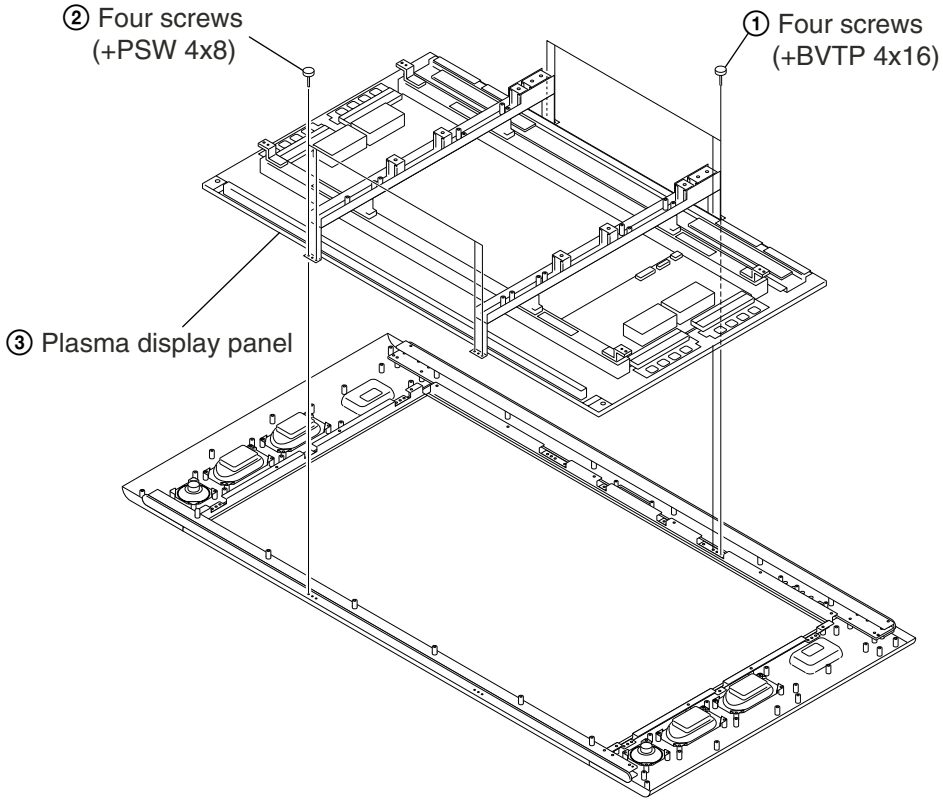

1-12. H3 AND H4 BOARDS REMOVAL

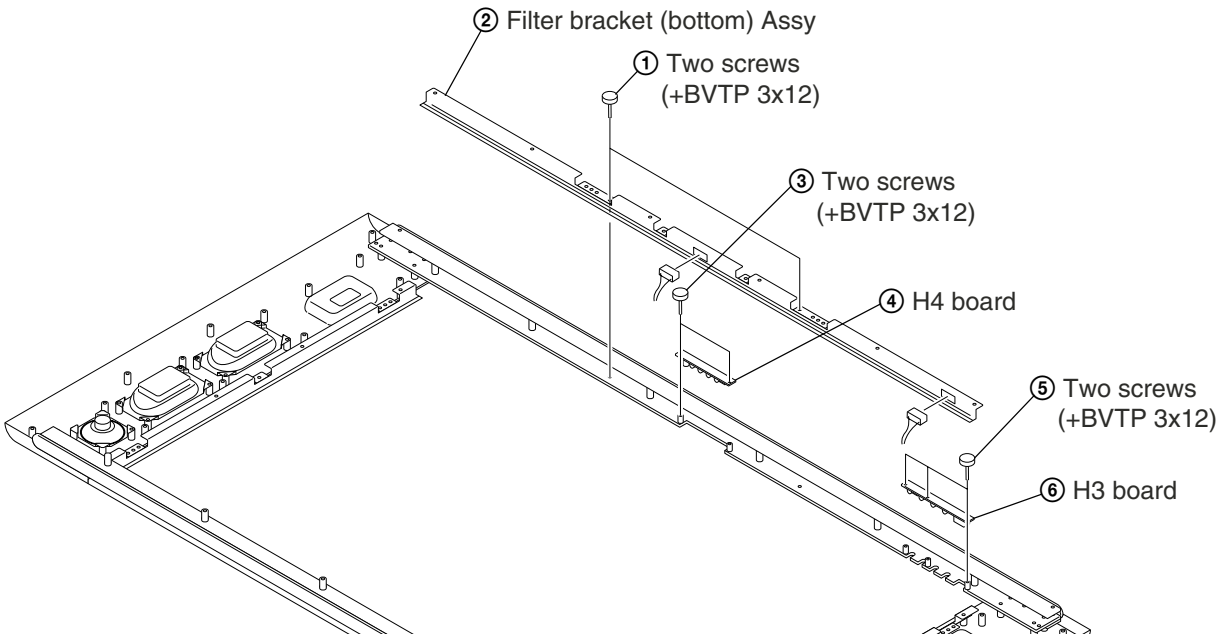

SECTION 2
ADJUSTMENTS

2-1. White Balance Adjustment

• Measurement equipment

1.Color analyzer (CA-100 manufactured by MINOLTA)
2.Signal generator (ASTRO DESIGN VG-828D)

• Measuring procedure

1.Dab the W/B adjustment jig (CA-100) at the glass face of the panel.
2.Connect the Signal generator (VG-828D) to the DVI terminal.
3. Input All-white signal (70%).
4. Make the settings as follows.
- set the quality mode to PRO.
- Set the PICTURE to MAX.
- SEt the color temp. be adjusted cool.

W/B standardized values:

	6500K+8MPCD	8000K+8MPCD	9300K+8MPCD
W/B	0	1	2
X	0.3133±0.003	0.2944±0.003	0.2838±0.003
Y	0.3297±0.003	0.3100±0.003	0.2981±0.003

	10000K	13550K
W/B	3	4
X	0.2806±0.003	0.2684±0.003
Y	0.2883±0.003	0.2700±0.003

Comparison Table between the Color Temp name and the adjustment color temperature:

COOL	13550K
NUETRAL	9300K+8MPCD
WARM	8000K+8MPCD

5. Execute the following control with UART control from the JIG PC.
5-1. Set as follows:
R_GAIN_OFFSET = 31
G_GAIN_OFFSET = 31
B_GAIN_OFFSET = 31
(Unnecessary because NVM has been set)
5-2. Set as follows:
R_BIAS_OFFSET = 31
G_BIAS_OFFSET = 31
B_BIAS_OFFSET = 31
(Unnecessary because NVM has been set)
5-3. Set as follows:
SUBBRIGHT_R = 920
SUBBRIGHT_G = 880
SUBBRIGHT_B = 950
(Unnecessary because NVM has been set)
5-4. Set RKOF = 0, GKOF = 0, BKOF = 0.
5-5. Set as follows:
PDRV_SUBCONT_R = 512
PDRV_SUBCONT_G = 512
PDRV_SUBCONT_B = 512
(Unnecessary because NVM has been set)
5-6. Adjust RKOF and BKOF with the color values inTable 2 as the target.
5-7. When RKOF and BKOF cannot be adjusted:
(a) Return the smaller one of the adjusted values to 0.
(b) Readjust with the larger value and GKOF.
5-8. When the following item is not satisfied after the above adjustmetn, fix the smallest adjustment value at 0 and readjust with the rest of two values.
(a) At least one of the value among RKOF, GKOF and BKOF is 0.
5-9. Write the values determined as a result of the above adjustment into RKOF, GKOF and BKOF.
5-10. Adjust PDRV_SUBCONT_R and PDRV_SUBCONT_B with the color values among the specified values in Table 1 as the target.
5-11. When there is a value that exceeds 512 after the adjustment.
(a) Return the larger one of the adjusted values to 512.
(b) Readjust with the smaller value and PDRV_SUBCONT_G.
5-12. When the following items are not satisfied after the above adjustment, fix the largest adjustment value at 512 and readjust with the rest of two values.
(a) All PDRV_SUBCONT_R, PDRV_SUBCONT_G and PDRV_SUBCONT_B do not exceed 512.
(b) At least one of the value is 512.
5-13. Write the values determined as a result of the above adjustment into PDRV_SUBCONT_R, PDRV_SUBCONT_G and PDRV_SUBCONT_B.
6. Execute the following items with UART control from the JIG PC.
6-1. Execute the method 3 with Color Temp. set to neutral.
6-2. Execute the method 3 with Color Temp. set to warm.
7. Take off the W/B adjustment jig (MINOLTA, CA-100) from the glass surface.

Table 2:Target Color Values when adjusting RKOF/GKOF/BKOF

	6500K+8MPCD	8000K+8MPCD	9300K+8MPCD
W/B	0	1	2
X	0.3133±0.004	0.2944±0.004	0.2838±0.004
Y	0.3297±0.004	0.3100±0.004	0.2981±0.004

	10000K	13550K
W/B	3	4
X	0.2806±0.004	0.2684±0.004
Y	0.2883±0.004	0.2700±0.004

SECTION 3
DIAGRAMS

3-1. BLOCK DIAGRAMS

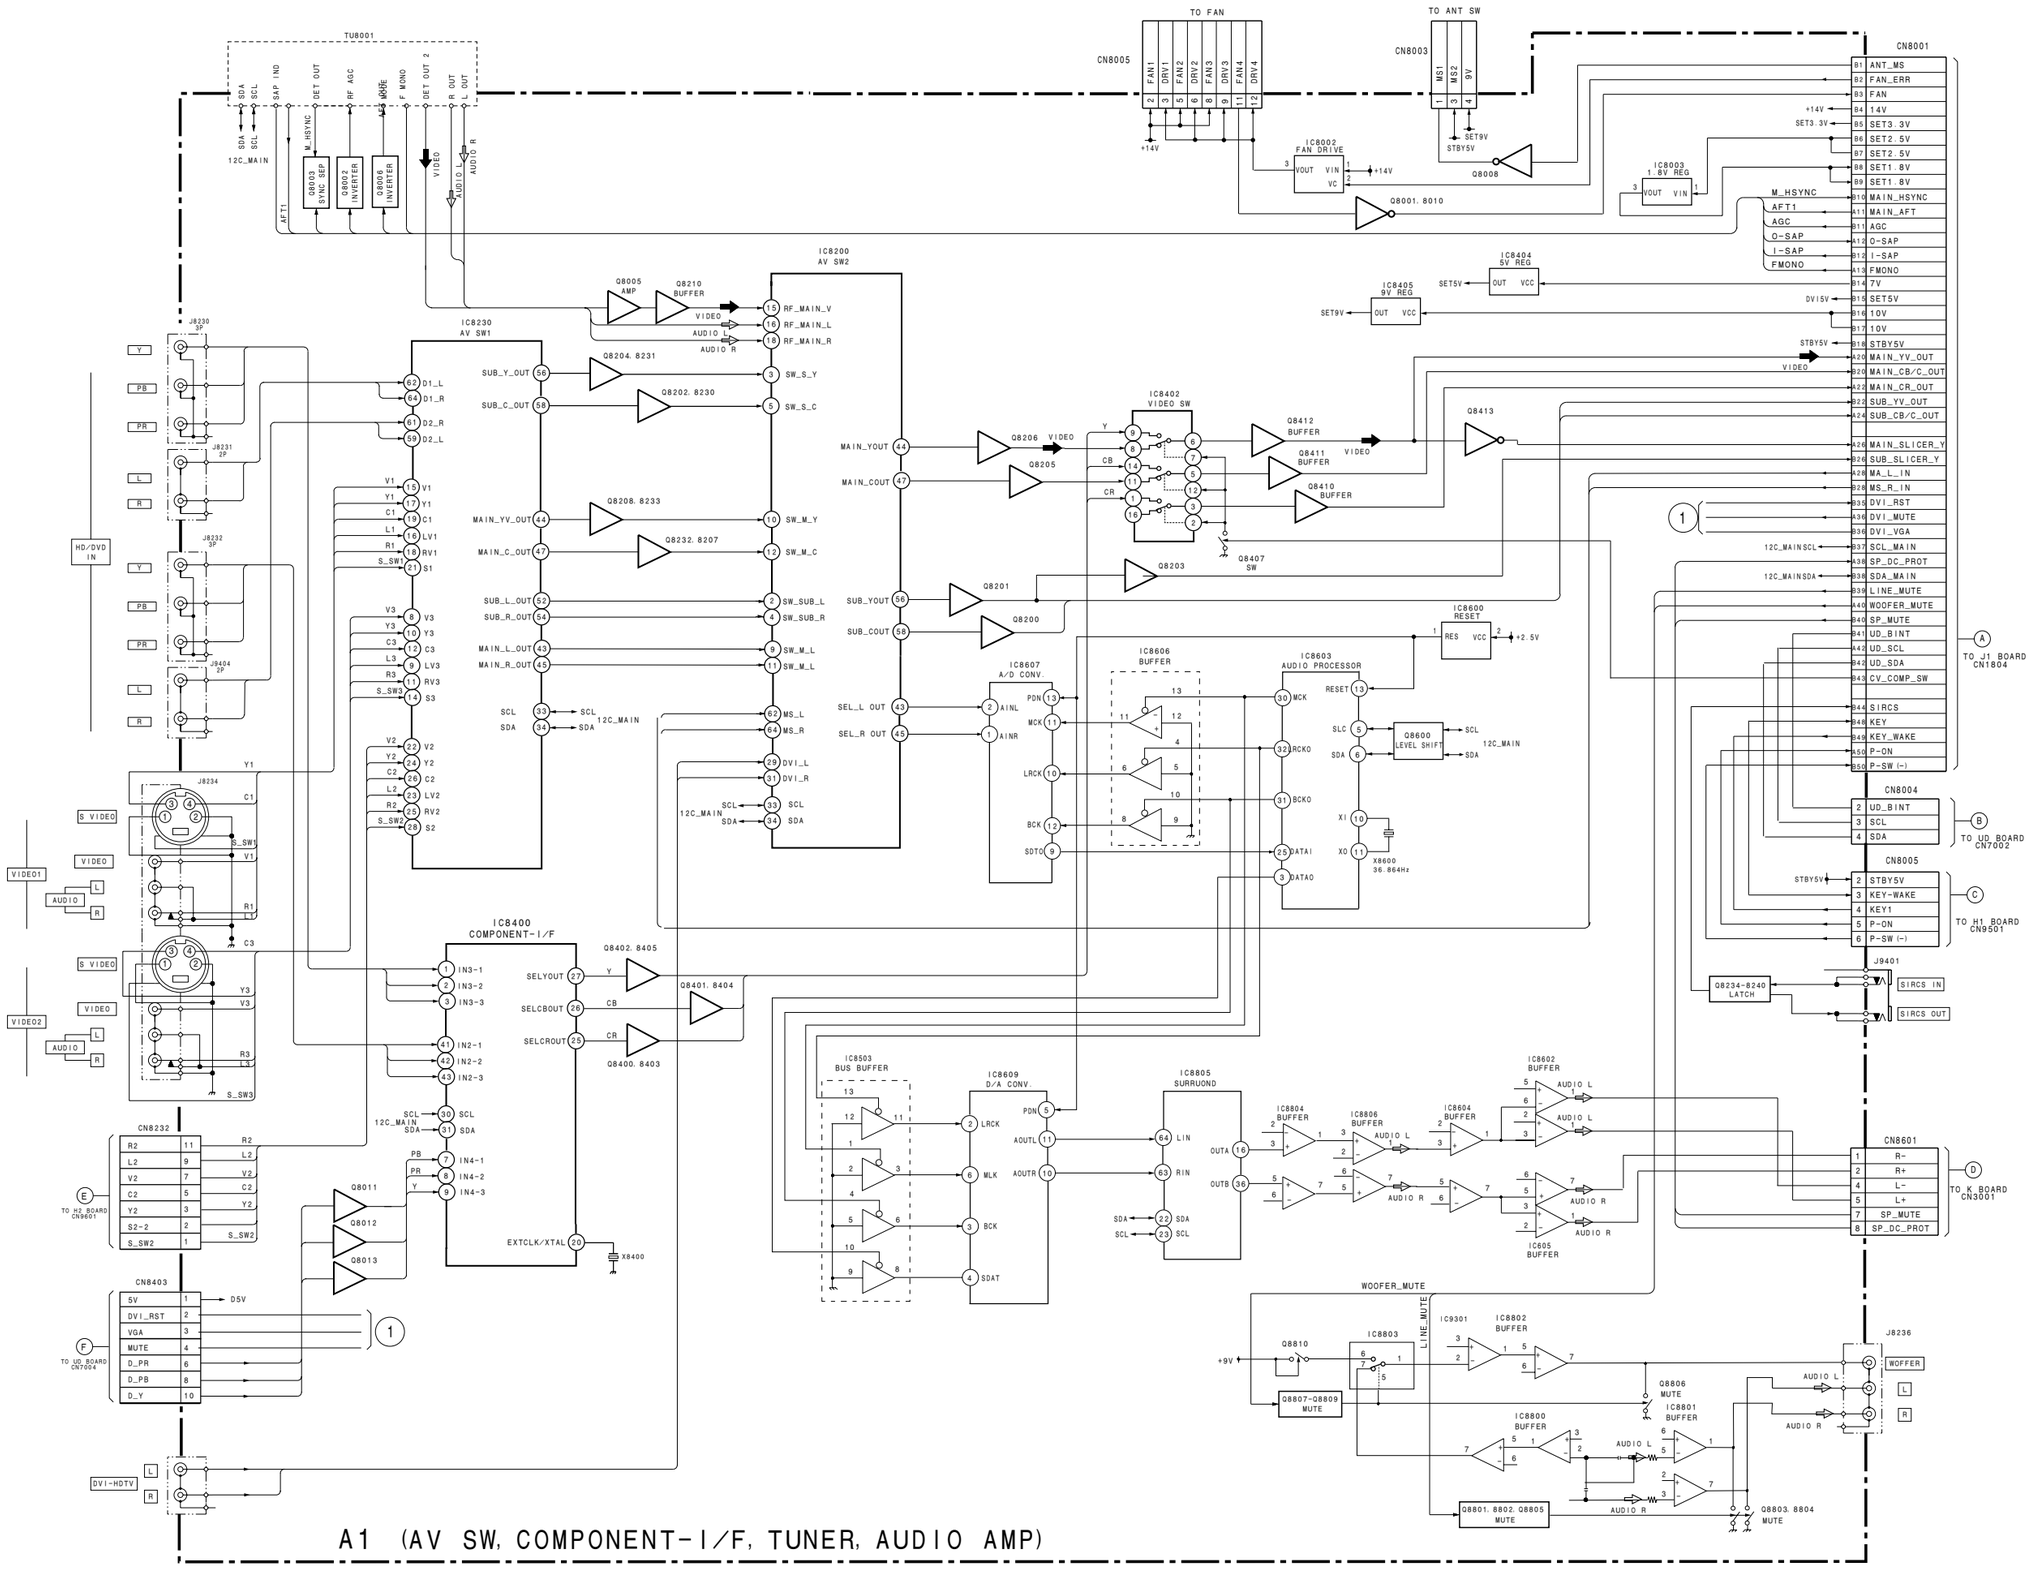

DE3 ((1/2) CPU)

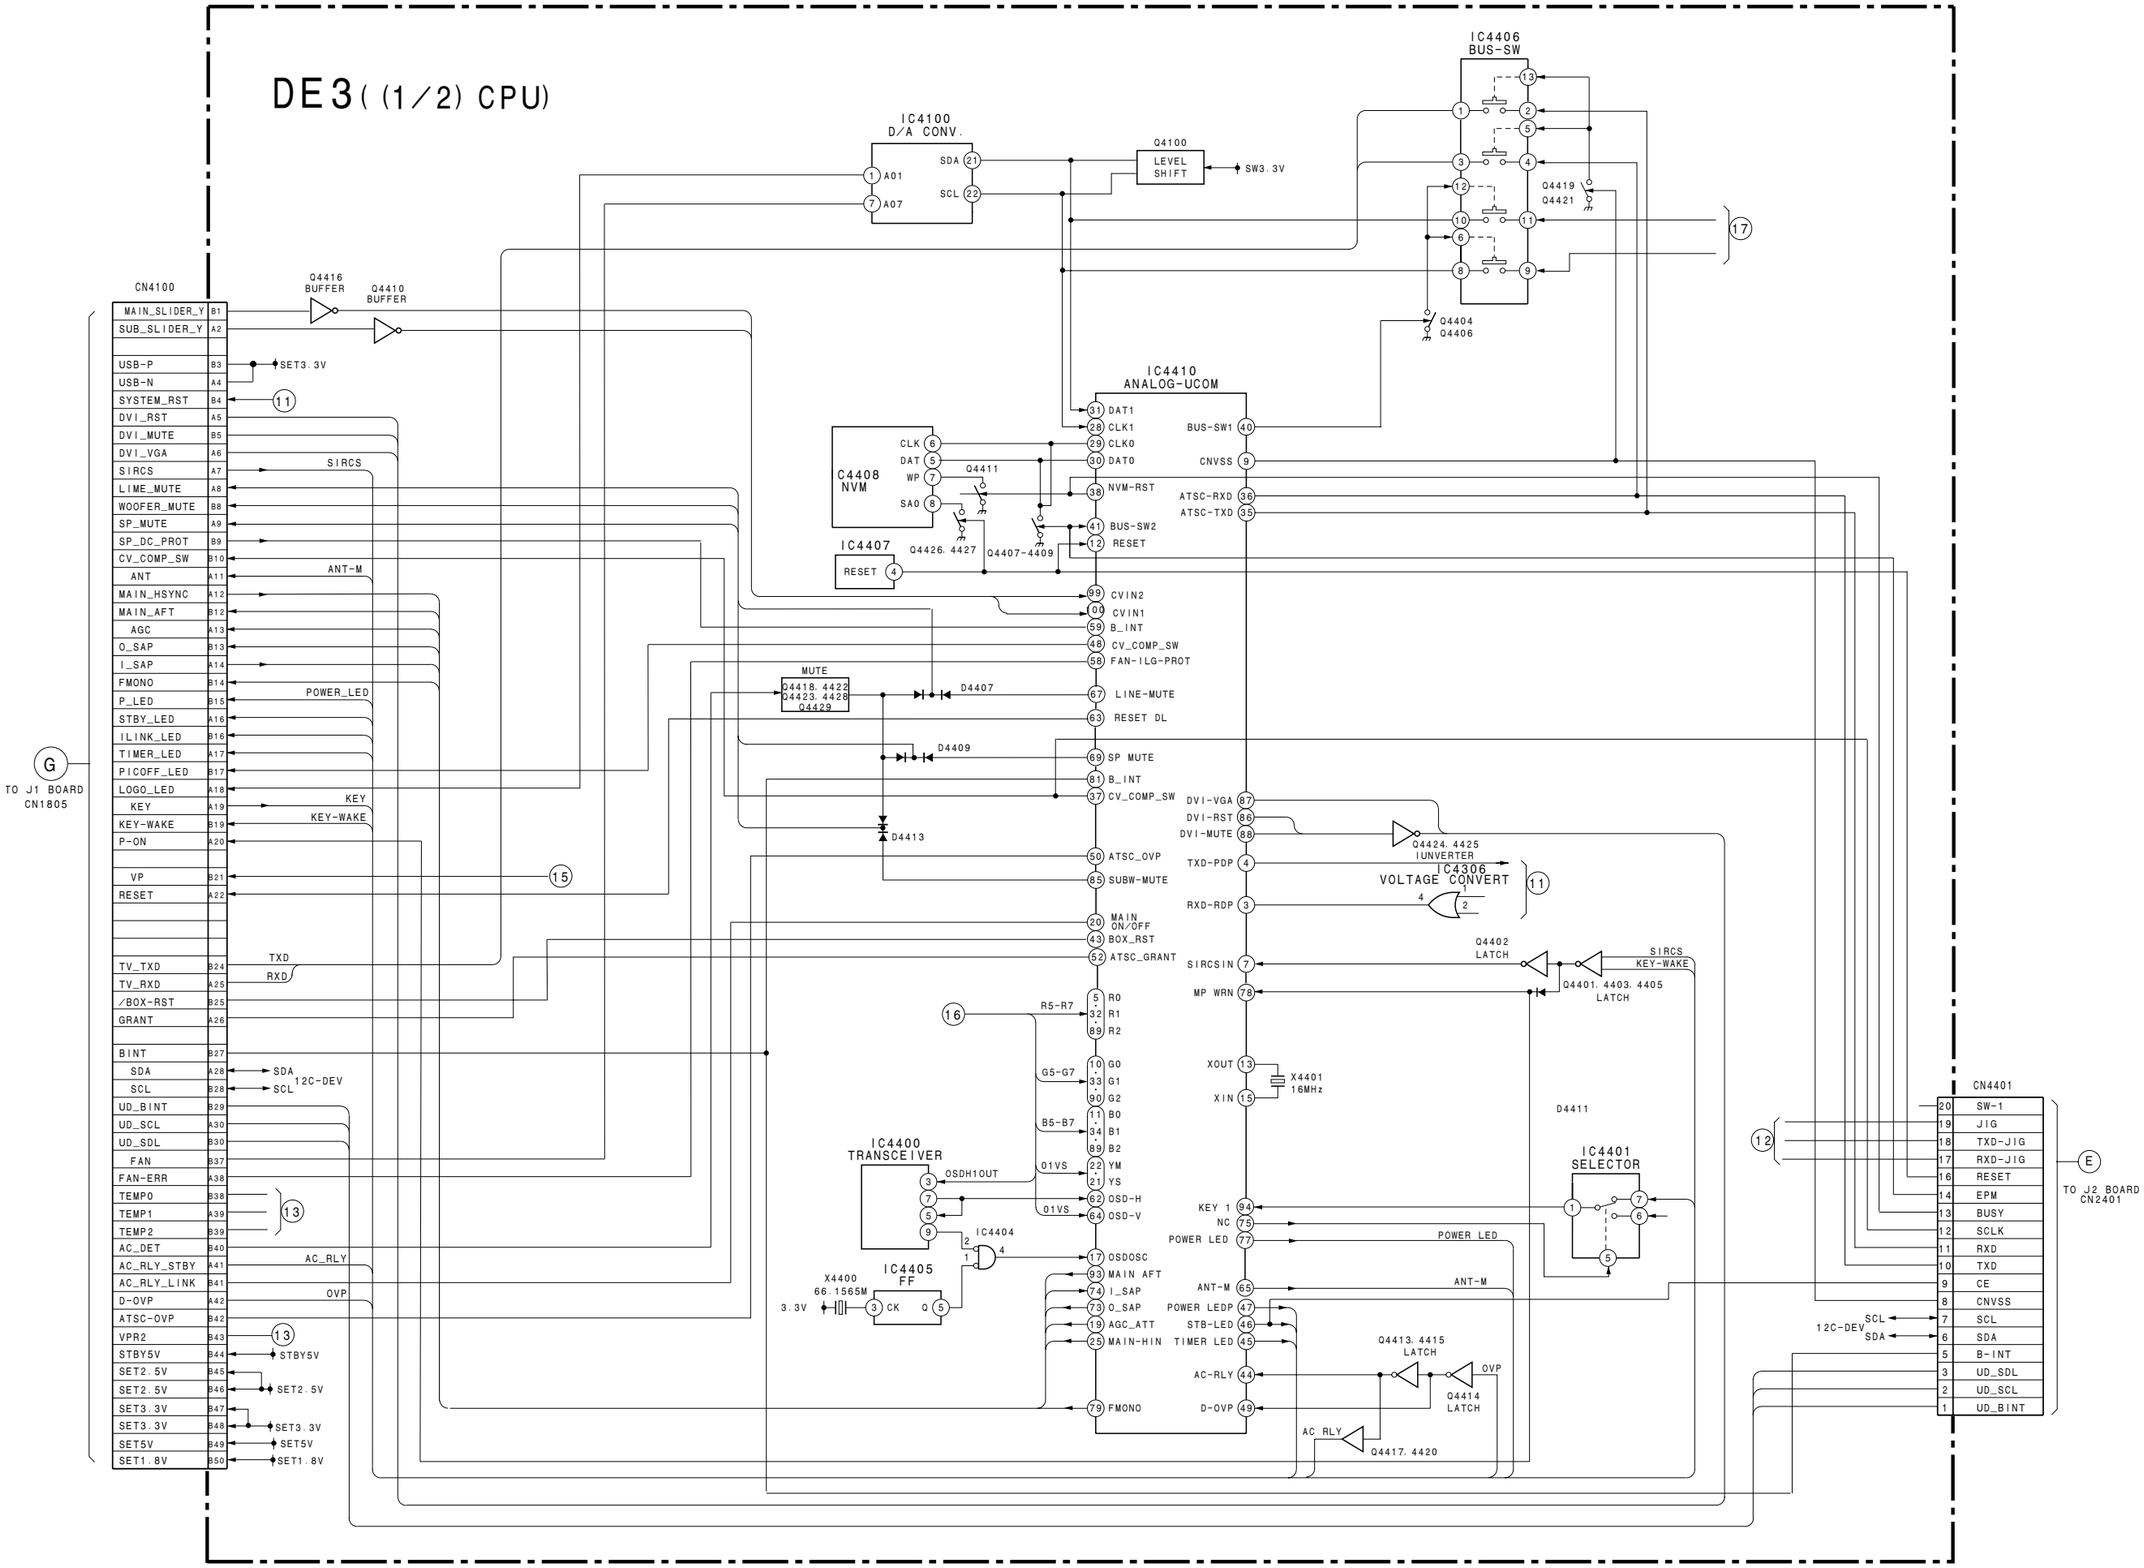
IC4406
BUS-SW
IC4100
D/A CONV.
SDA
SCL
A01
A07
Q4100
LEVEL SHIFT
SW3.3V
Q4419
Q4421
Q4404
Q4406
CN4100
Q4416
BUFFER
Q4410
BUFFER
MAIN_SLIDER_Y
SUB_SLIDER_Y
USB-P
USB-N
SYSTEM_RST
DVI_RST
DVI_MUTE
DVI_VGA
SIRCS
LIME_MUTE
WOOFER_MUTE
SP_MUTE
SP_DC_PROT
CV_COMP_SW
ANT
MAIN_HSYNC
MAIN_AFT
AGC
O_SAP
I_SAP
FMONO
P_LED
STBY_LED
ILINK_LED
TIMER_LED
PICOFF_LED
LOGO_LED
KEY
KEY-WAKE
P-ON
VP
RESET
TV_TXD
TV_RXD
/BOX-RST
GRANT
BINT
SDA
SCL
UD_BINT
UD_SCL
UD_SDL
FAN
FAN-ERR
TEMP0
TEMP1
TEMP2
AC_DET
AC_RLY_STBY
AC_RLY_LINK
D-OVP
ATSC-OVP
VPR2
STBY5V
SET2.5V
SET2.5V
SET3.3V
SET3.3V
SET5V
SET1.8V
SET3.3V
SIRCS
ANT-M
POWER_LED
KEY
KEY-WAKE
TXD
RXD
SDA
SCL
12C-DEV
AC_RLY
OVP
STBY5V
SET2.5V
SET3.3V
SET5V
SET1.8V
TO J1 BOARD
CN1805
IC4410
ANALOG-UCOM
DAT1
CLK1
CLK0
DAT0
NVM-RST
BUS-SW2
RESET
BUS-SW1
CNVSS
ATSC-RXD
ATSC-TXD
C4408
NVM
CLK
DAT
WP
SA0
Q4411
Q4426. 4427
Q4407-4409
IC4407
RESET
CVIN2
CVIN1
B_INT
CV_COMP_SW
FAN-ILG-PROT
MUTE
Q4418. 4422
Q4423. 4428
Q4429
D4407
LINE-MUTE
RESET DL
D4409
SP MUTE
B_INT
CV_COMP_SW
D4413
ATSC_OVP
SUBW-MUTE
MAIN ON/OFF
BOX_RST
ATSC_GRANT
DVI-VGA
DVI-RST
DVI-MUTE
Q4424. 4425
IUNVERTER
TXD-PDP
RXD-RDP
IC4306
VOLTAGE CONVERT
Q4402
LATCH
SIRCS
KEY-WAKE
Q4401. 4403. 4405
LATCH
MP WRN
SIRCSIN
R5-R7
G5-G7
B5-B7
R0
R1
R2
G0
G1
G2
B0
B1
B2
XOUT
XIN
X4401
16MHz
D4411
IC4400
TRANSCEIVER
O1VS
YM
YS
OSD-H
OSD-V
OSDH1OUT
IC4404
IC4405
FF
X4400
66.1565M
3.3V
CK
OSDOSC
MAIN AFT
I_SAP
O_SAP
AGC_ATT
MAIN-HIN
FMONO
KEY 1
NC
POWER LED
ANT-M
POWER LEDP
STB-LED
TIMER LED
AC-RLY
D-OVP
IC4401
SELECTOR
Q4413. 4415
LATCH
OVP
Q4414
LATCH
AC RLY
Q4417. 4420
CN4401
SW-1
JIG
TXD-JIG
RXD-JIG
RESET
EPM
BUSY
SCLK
RXD
TXD
CE
CNVSS
SCL
SDA
B-INT
UD_SDL
UD_SCL
UD_BINT
TO J2 BOARD
CN2401
12C-DEV

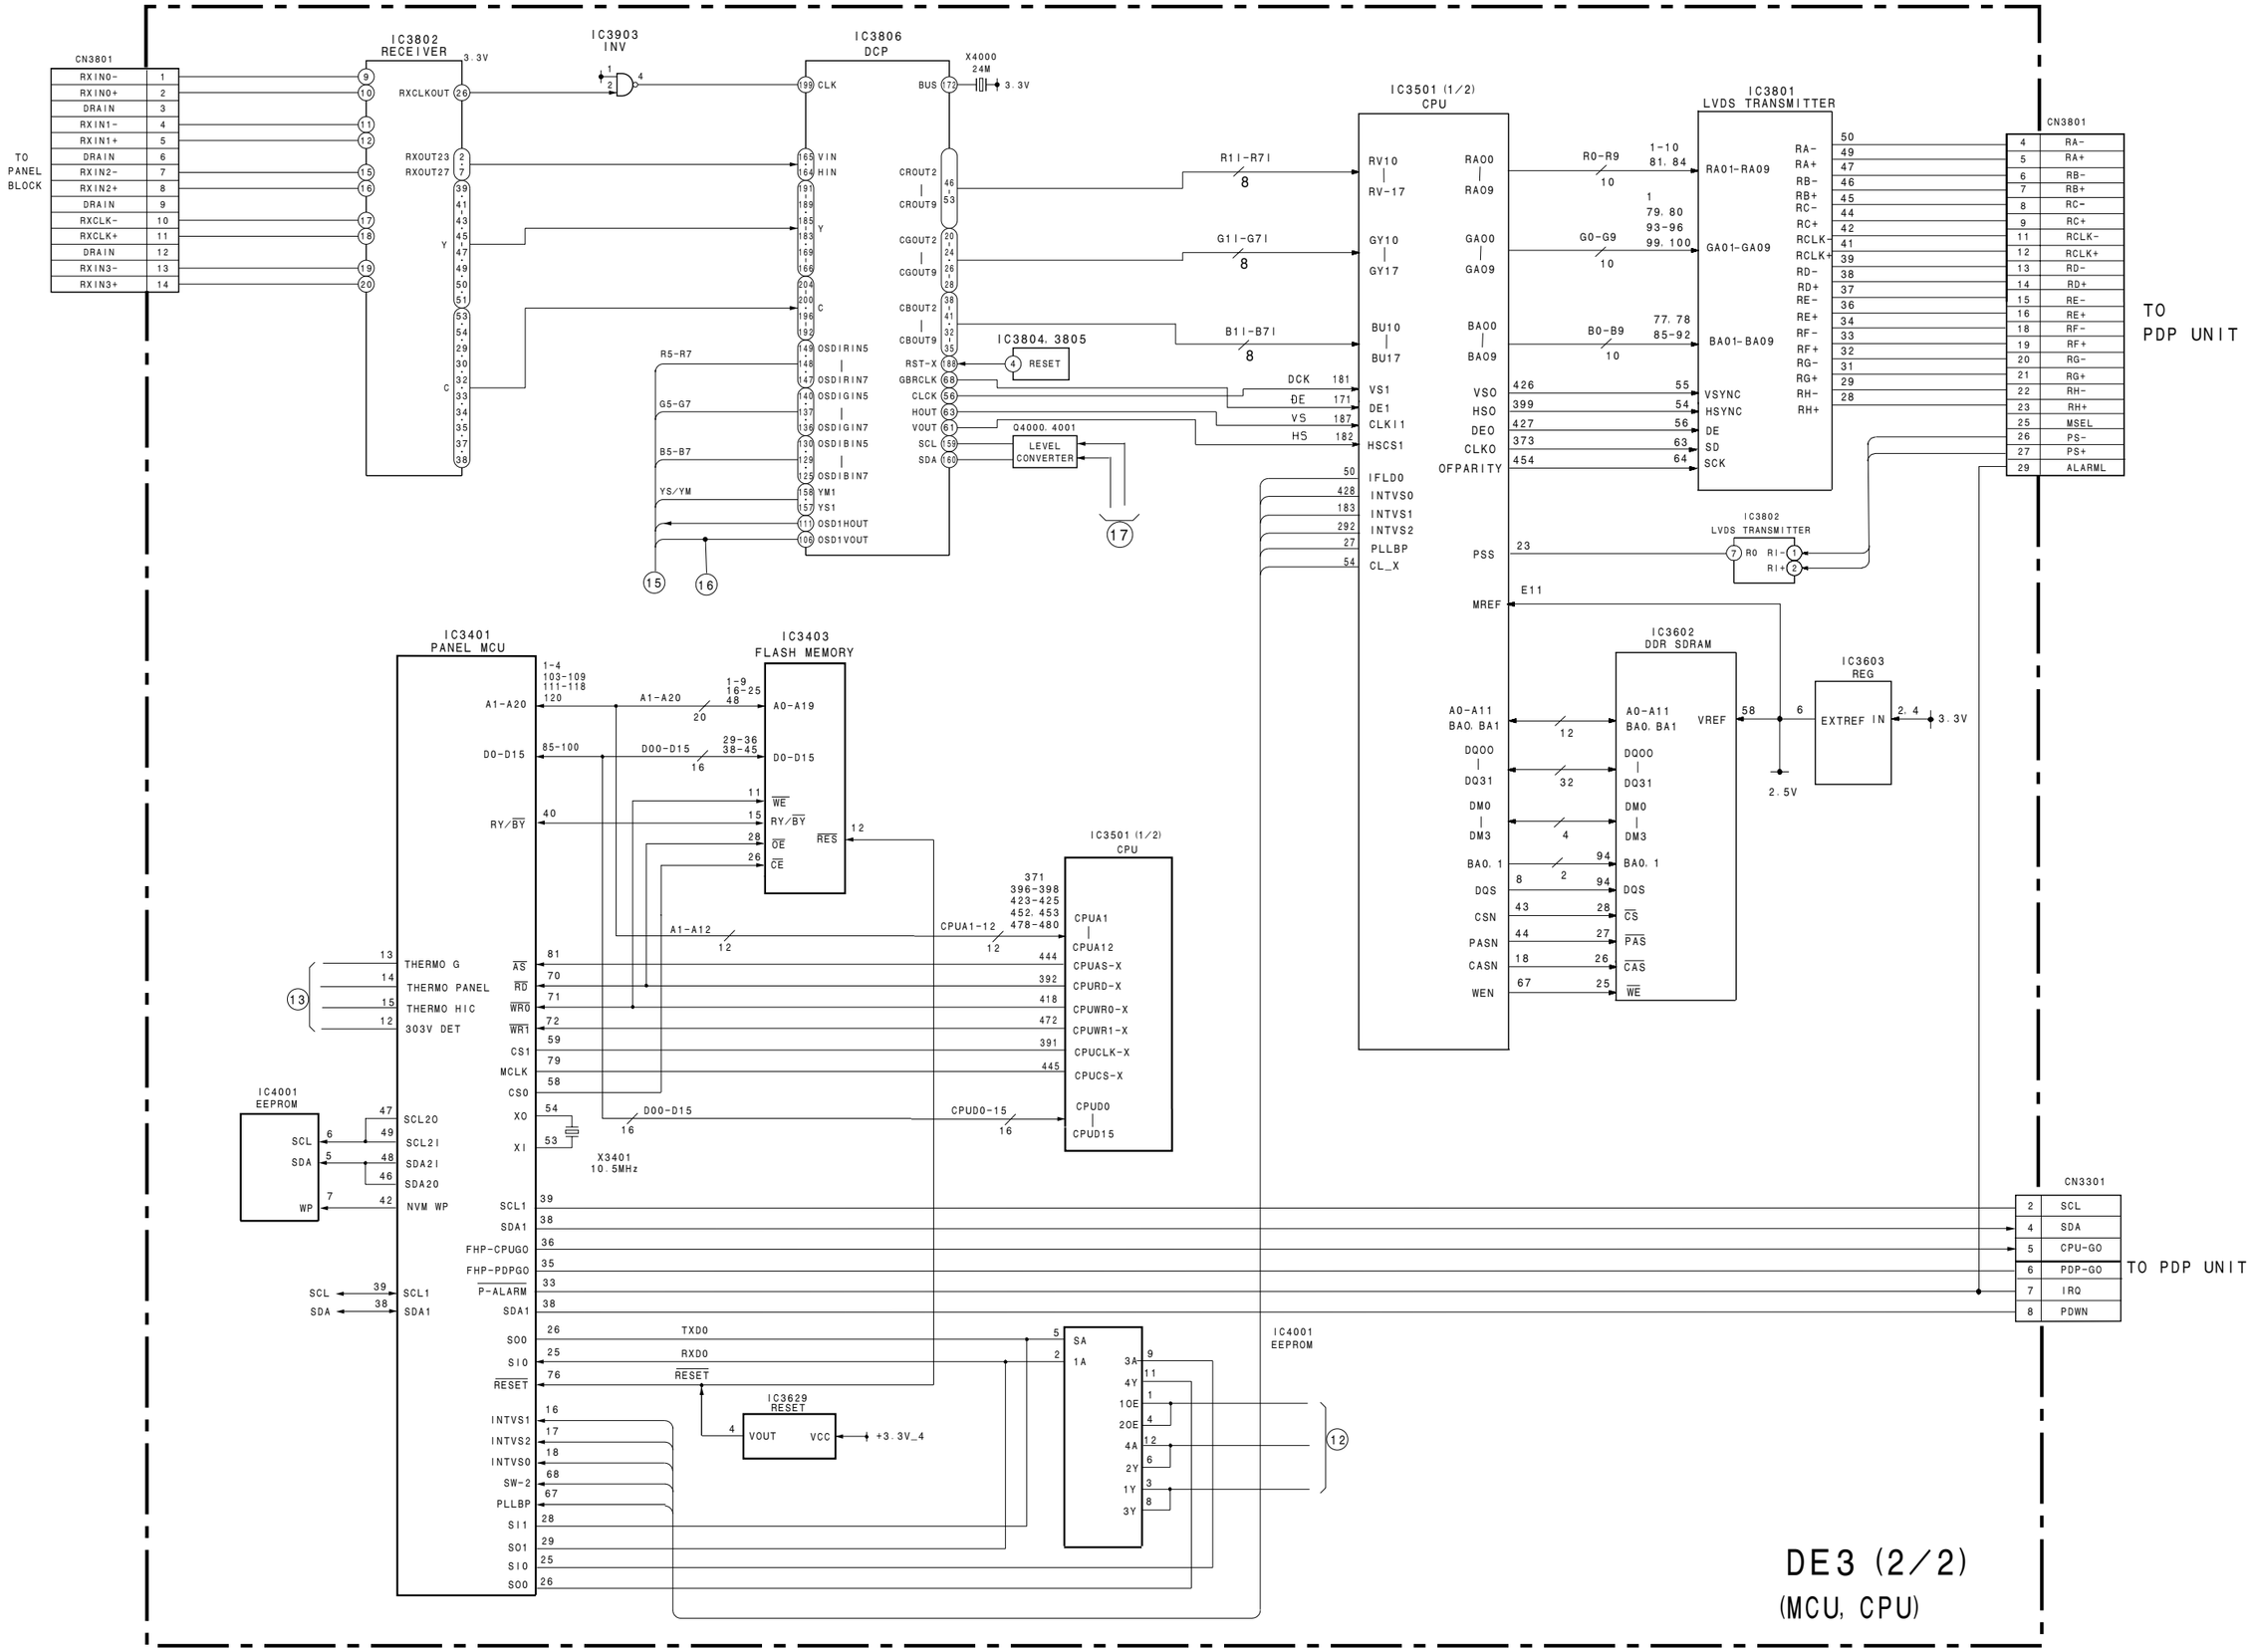
CN3801
RXIN0- 1
RXIN0+ 2
DRAIN 3
RXIN1- 4
RXIN1+ 5
DRAIN 6
RXIN2- 7
RXIN2+ 8
DRAIN 9
RXCLK- 10
RXCLK+ 11
DRAIN 12
RXIN3- 13
RXIN3+ 14
TO PANEL BLOCK
IC3802 RECEIVER
3.3V
RXCLKOUT
RXOUT23
RXOUT27
IC3903 INV
IC3806 DCP
CLK
VIN
HIN
Y
C
OSDIRIN5
OSDIRIN7
OSDIGIN5
OSDIGIN7
OSDIBIN5
OSDIBIN7
YM1
YS1
OSD1HOUT
OSD1VOUT
X4000 24M
BUS
3.3V
CROUT2
CROUT9
CGOUT2
CGOUT9
CBOUT2
CBOUT9
RST-X
GBRCLK
CLCK
HOUT
VOUT
SCL
SDA
IC3804, 3805
RESET
Q4000, 4001
LEVEL CONVERTER
R5-R7
G5-G7
B5-B7
YS/YM
R11-R71
G11-G71
B11-B71
8
DCK 181
DE 171
VS 187
HS 182
IC3501 (1/2) CPU
RV10
RV-17
GY10
GY17
BU10
BU17
VS1
DE1
CLKI1
HSCS1
IFLD0
INTVS0
INTVS1
INTVS2
PLLBP
CL_X
RAO0
RAO9
GAO0
GAO9
BAO0
BAO9
VSO
HSO
DEO
CLKO
OFPARITY
R0-R9
G0-G9
B0-B9
10
1-10
81, 84
1
79, 80
93-96
99, 100
IC3801 LVDS TRANSMITTER
RA01-RA09
GA01-GA09
BA01-BA09
VSYNC
HSYNC
DE
SD
SCK
RA-
RA+
RB-
RB+
RC-
RC+
RCLK-
RCLK+
RD-
RD+
RE-
RE+
RF-
RF+
RG-
RG+
RH-
RH+
CN3801
TO PDP UNIT
IC3802 LVDS TRANSMITTER
R0 RI-
R0 RI+
PSS
MREF
E11
IC3602 DDR SDRAM
IC3603 REG
EXTREF IN
VREF
2.5V
3.3V
A0-A11
BA0, BA1
DQ00
DQ31
DM0
DM3
BA0, 1
DQS
CSN
PASN
CASN
WEN
IC3401 PANEL MCU
IC3403 FLASH MEMORY
A1-A20
D0-D15
RY/BY
WE
OE
CE
RES
A0-A19
DQ0-D15
THERMO G
THERMO PANEL
THERMO HIC
303V DET
AS
RD
WR0
WR1
CS1
MCLK
CS0
XO
XI
X3401 10.5MHz
IC4001 EEPROM
SCL20
SCL2I
SDA2I
SDA20
NVM WP
SCL1
SDA1
FHP-CPUGO
FHP-PDPGO
P-ALARM
SO0
SI0
RESET
INTVS1
INTVS2
INTVS0
SW-2
PLLBP
SI1
SO1
SI0
SO0
TXD0
RXD0
RESET
IC3629 RESET
VOUT
VCC
+3.3V_4
IC3501 (1/2) CPU
CPUA1-12
A1-A12
CPUA1
CPUA12
CPUAS-X
CPURD-X
CPUWR0-X
CPUWR1-X
CPUCLK-X
CPUCS-X
CPUD0
CPUD15
CPUD0-15
IC4001 EEPROM
SA
1A
3A
4Y
1OE
2OE
4A
2Y
1Y
3Y
CN3301
SCL
SDA
CPU-GO
PDP-GO
IRQ
PDWN
TO PDP UNIT
DE3 (2/2)
(MCU, CPU)

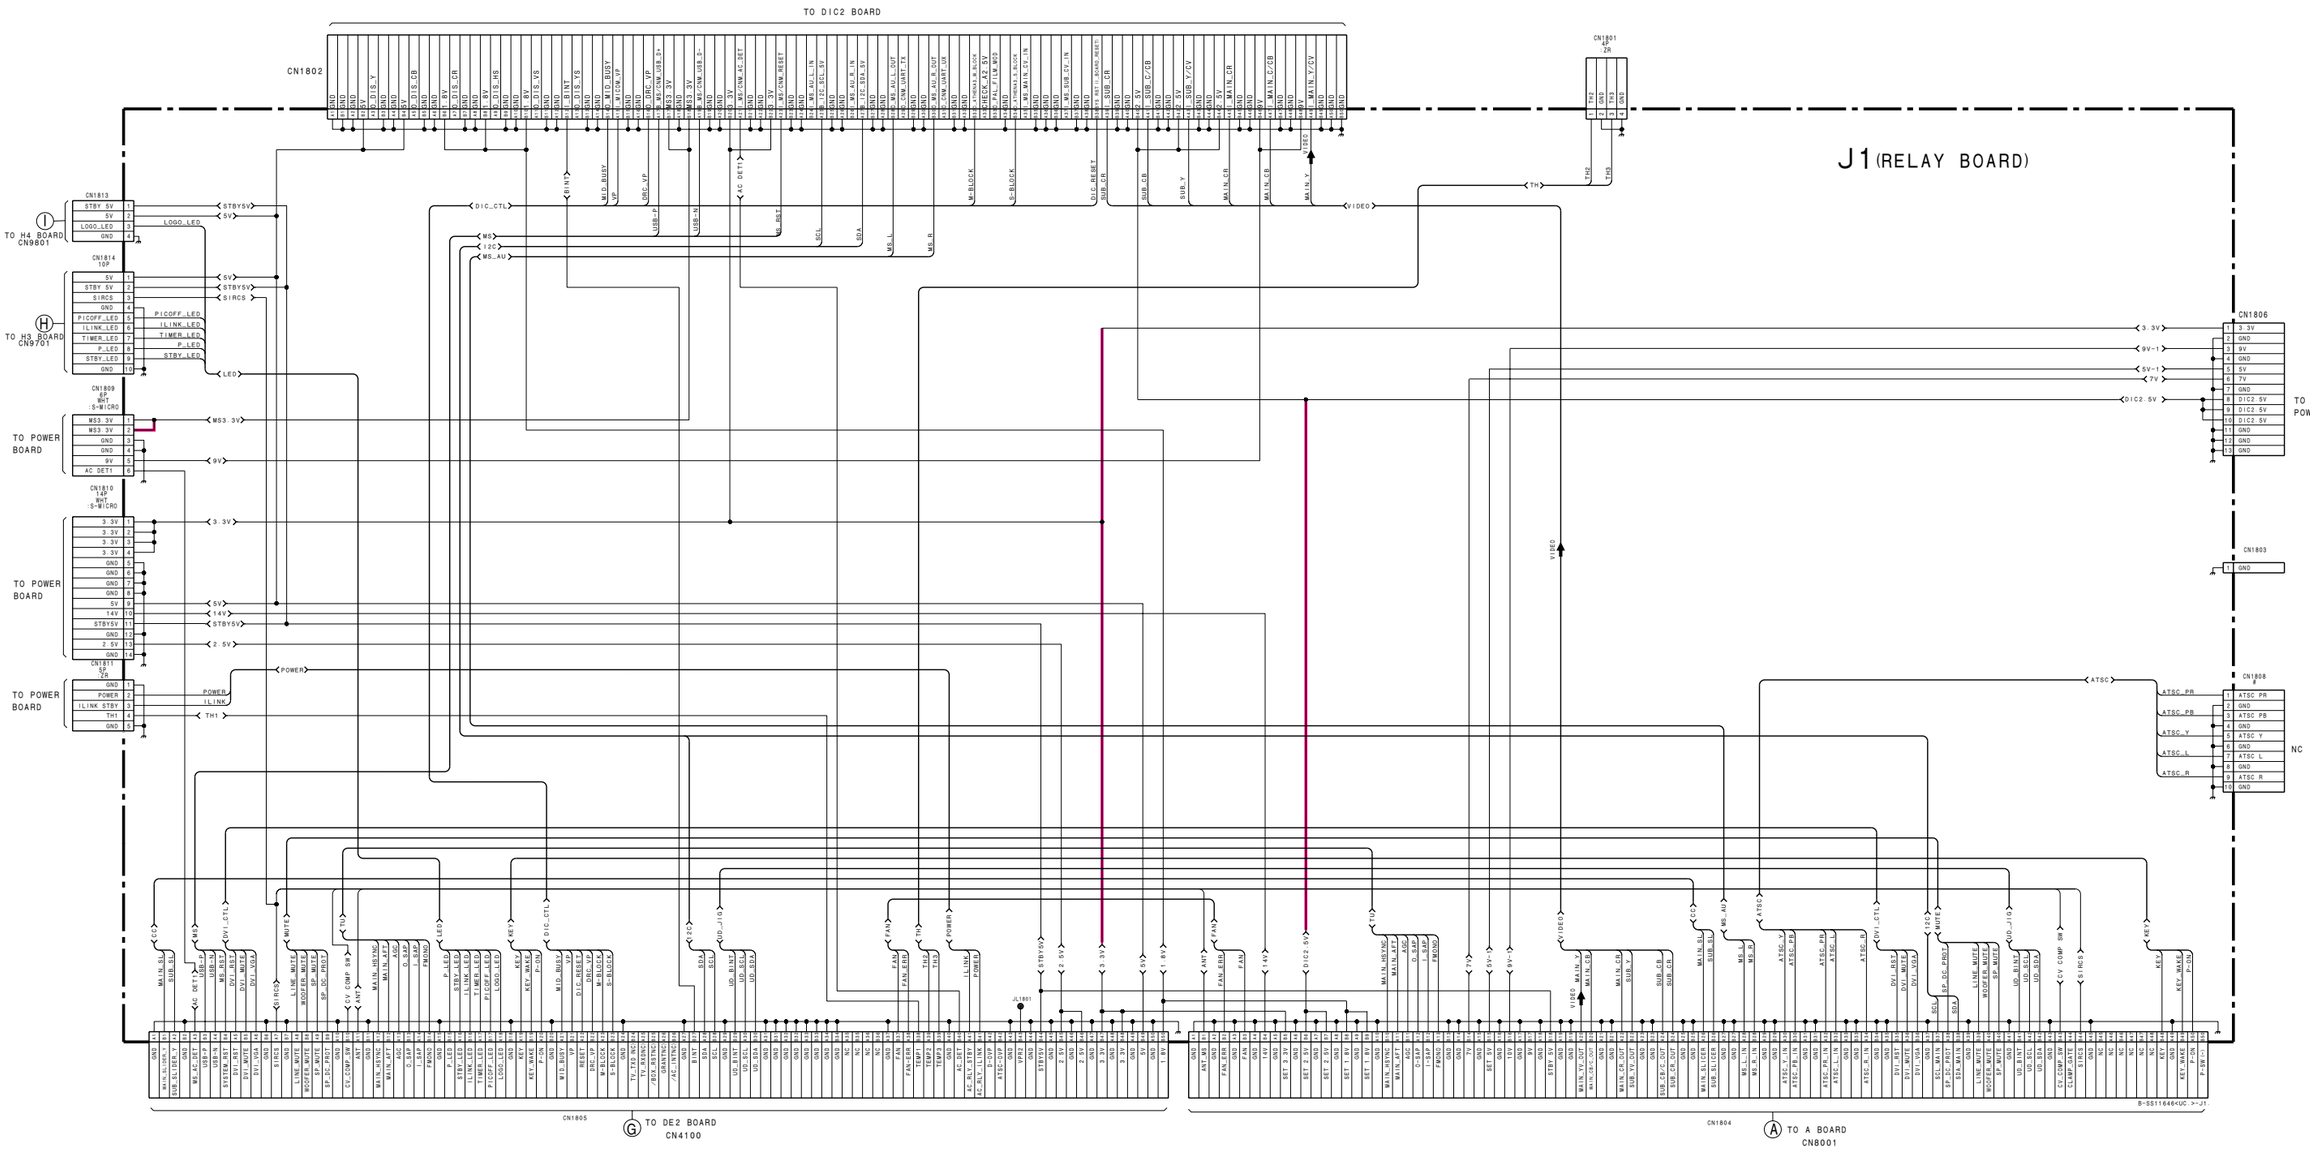
J1 (RELAY BOARD)
TO DIC2 BOARD
CN1802
CN1801
CN1813
CN1814 10P
CN1809 6P NHT :S-MICRO
CN1810 14P NHT :S-MICRO
CN1811 5P ZR
CN1806
CN1803
CN1808 8
TO H4 BOARD CN9801
TO H3 BOARD CN9701
TO POWER BOARD
TO POWER BOARD
TO POWER BOARD
TO
POWER BOARD
NC
CN1805
TO DE2 BOARD CN4100
CN1804
TO A BOARD CN8001
B-SS11646<UC.X-J1>

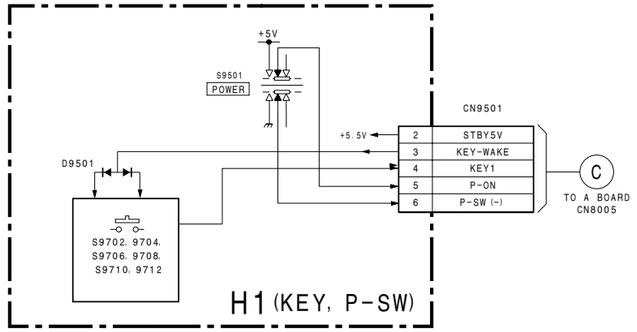
+5V
S9501
POWER
D9501
S9702. 9704.
S9706. 9708.
S9710. 9712
CN9501
+5.5V
2 STBY5V
3 KEY-WAKE
4 KEY1
5 P-ON
6 P-SW (-)
C
TO A BOARD
CN8005
H1 (KEY, P-SW)

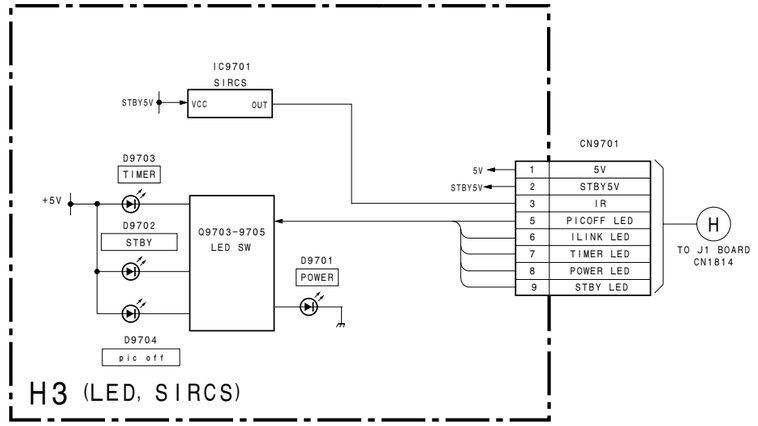
IC9701
SIRCS
STBY5V
VCC
OUT
D9703
TIMER
+5V
D9702
STBY
D9704
pic off
Q9703-9705
LED SW
D9701
POWER
CN9701
5V
STBY5V
1 5V
2 STBY5V
3 IR
5 PICOFF LED
6 ILINK LED
7 TIMER LED
8 POWER LED
9 STBY LED
H
TO J1 BOARD
CN1814
H3 (LED, SIRCS)

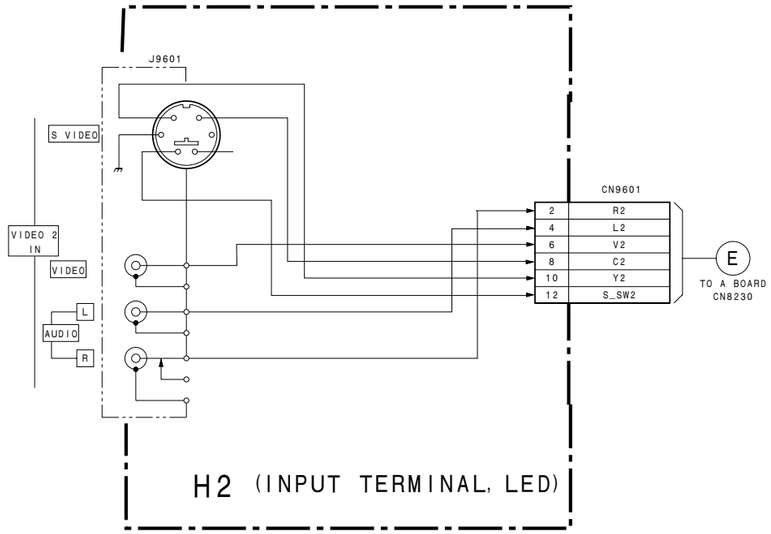
J9601
S VIDEO
VIDEO 2
IN
VIDEO
L
AUDIO
R
CN9601
2 R2
4 L2
6 V2
8 C2
10 Y2
12 S_SW2
E
TO A BOARD
CN8230
H2 (INPUT TERMINAL, LED)

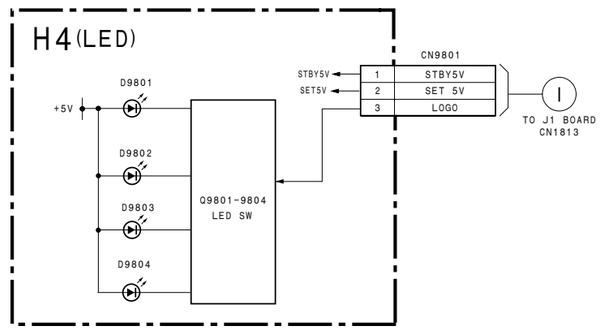
H4 (LED)
D9801
+5V
D9802
D9803
D9804
Q9801-9804
LED SW
CN9801
STBY5V
SET5V
1 STBY5V
2 SET 5V
3 LOGO
I
TO J1 BOARD
CN1813

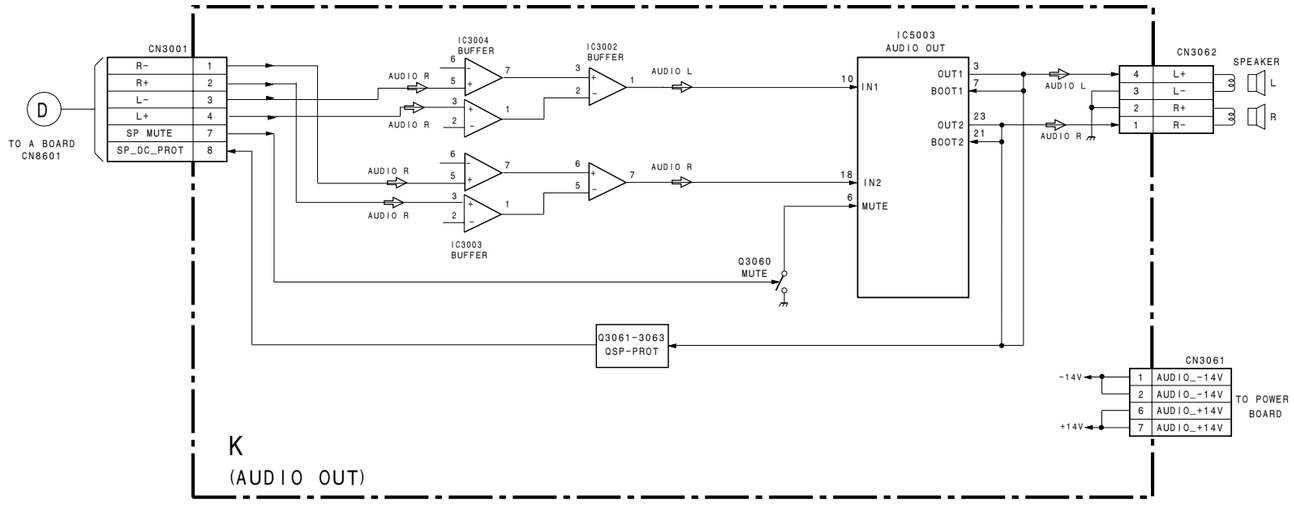
CN3001
R- 1
R+ 2
L- 3
L+ 4
SP MUTE 7
SP_DC_PROT 8
D
TO A BOARD
CN8601
IC3004
BUFFER
IC3002
BUFFER
IC3003
BUFFER
AUDIO R
AUDIO L
IC5003
AUDIO OUT
IN1
IN2
MUTE
OUT1
BOOT1
OUT2
BOOT2
Q3060
MUTE
Q3061-3063
OSP-PROT
CN3062
SPEAKER
4 L+
3 L-
2 R+
1 R-
CN3061
-14V
+14V
1 AUDIO_-14V
2 AUDIO_-14V
6 AUDIO_+14V
7 AUDIO_+14V
TO POWER
BOARD
K
(AUDIO OUT)

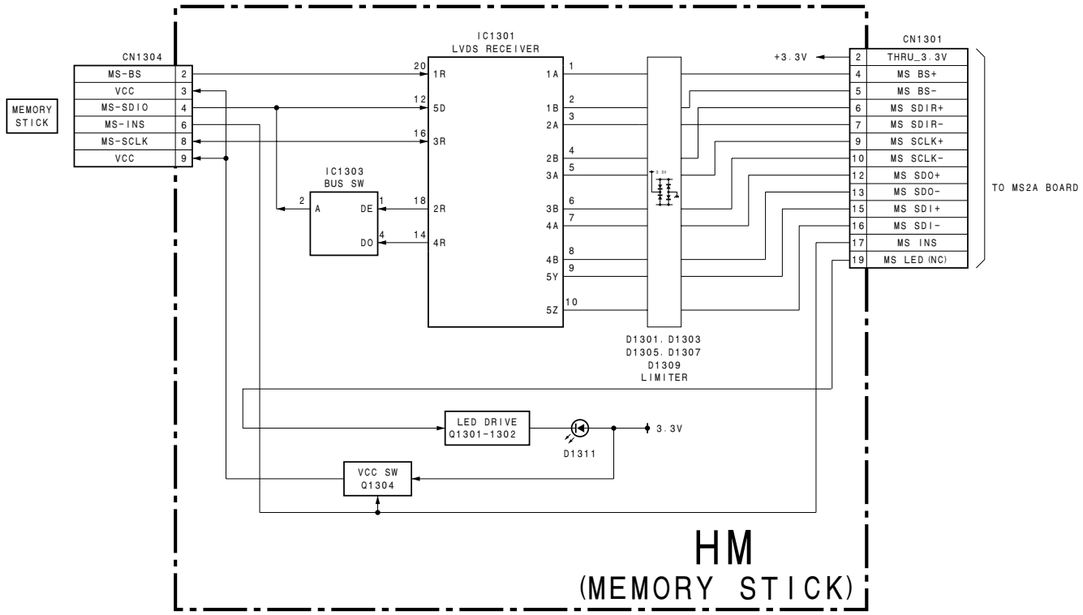
MEMORY STICK
CN1304
MS-BS 2
VCC 3
MS-SDIO 4
MS-INS 6
MS-SCLK 8
VCC 9
IC1301
LVDS RECEIVER
20 1R
12 5D
16 3R
18 2R
14 4R
1A 1
1B 2
2A 3
2B 4
3A 5
3B 6
4A 7
4B 8
5Y 9
5Z 10
IC1303
BUS SW
2 A
DE 1
DO 4
D1301, D1303
D1305, D1307
D1309
LIMITER
CN1301
+3.3V
2 THRU_3.3V
4 MS BS+
5 MS BS-
6 MS SDIR+
7 MS SDIR-
9 MS SCLK+
10 MS SCLK-
12 MS SDO+
13 MS SDO-
15 MS SDI+
16 MS SDI-
17 MS INS
19 MS LED (NC)
TO MS2A BOARD
LED DRIVE
Q1301-1302
D1311
3.3V
VCC SW
Q1304
HM
(MEMORY STICK)

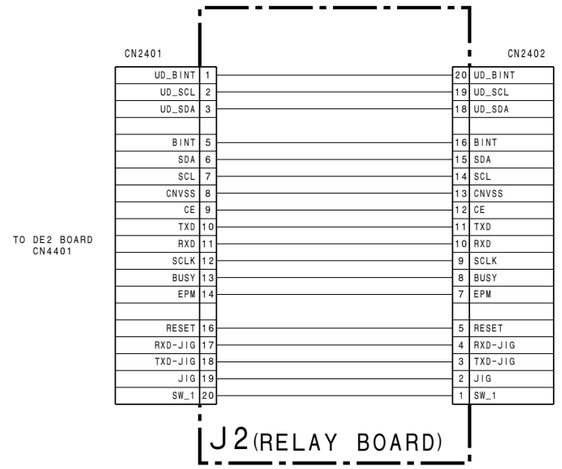
TO DE2 BOARD
CN4401
CN2401
UD_BINT 1
UD_SCL 2
UD_SDA 3
BINT 5
SDA 6
SCL 7
CNVSS 8
CE 9
TXD 10
RXD 11
SCLK 12
BUSY 13
EPM 14
RESET 16
RXD-JIG 17
TXD-JIG 18
JIG 19
SW_1 20
CN2402
20 UD_BINT
19 UD_SCL
18 UD_SDA
16 BINT
15 SDA
14 SCL
13 CNVSS
12 CE
11 TXD
10 RXD
9 SCLK
8 BUSY
7 EPM
5 RESET
4 RXD-JIG
3 TXD-JIG
2 JIG
1 SW_1
J2(RELAY BOARD)

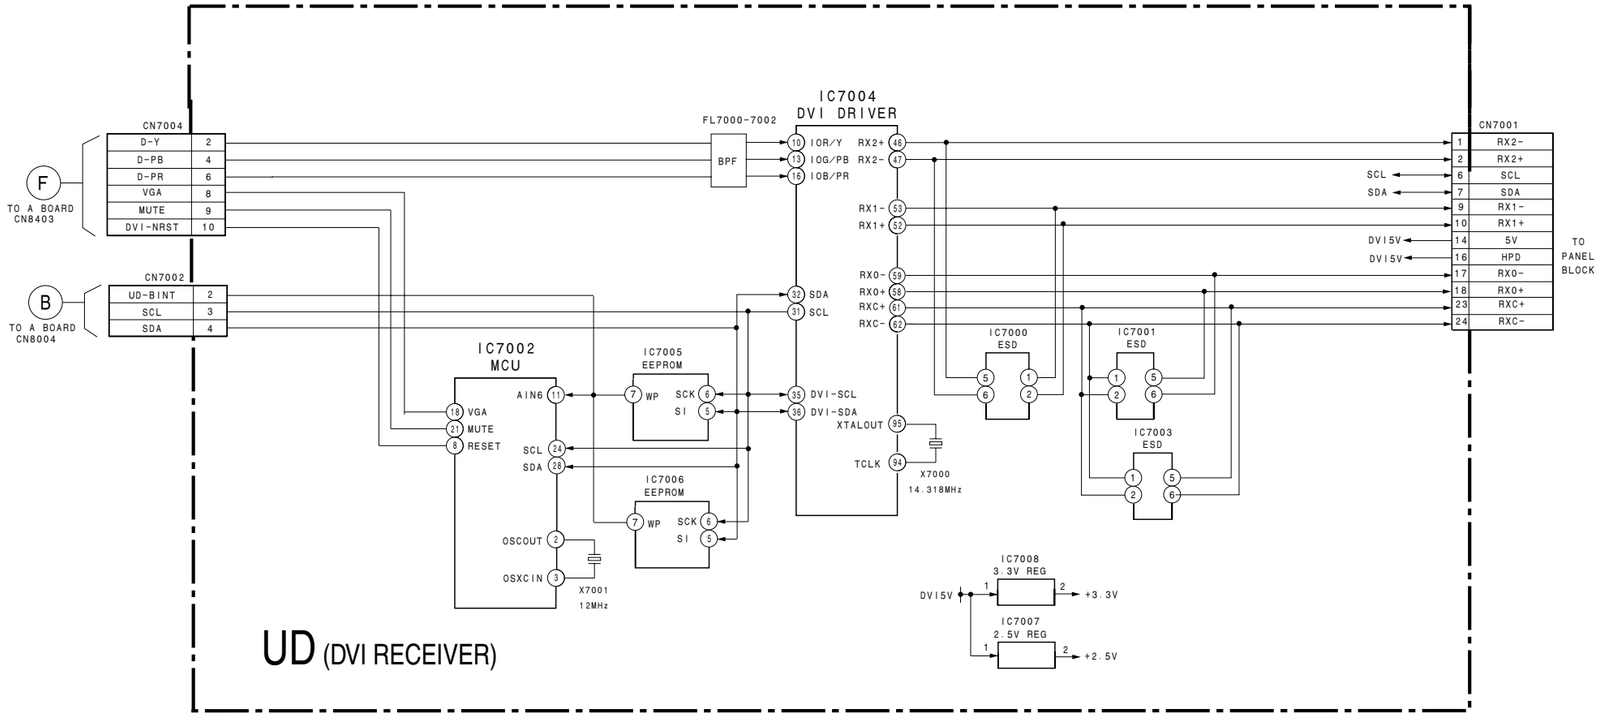
F
TO A BOARD
CN8403
CN7004
D-Y 2
D-PB 4
D-PR 6
VGA 8
MUTE 9
DVI-NRST 10
B
TO A BOARD
CN8004
CN7002
UD-BINT 2
SCL 3
SDA 4
IC7004
DVI DRIVER
FL7000-7002
BPF
10 IOR/Y
13 IOG/PB
16 IOB/PR
RX2+ 46
RX2- 47
RX1- 53
RX1+ 52
RX0- 59
RX0+ 58
RXC+ 61
RXC- 62
32 SDA
31 SCL
35 DVI-SCL
36 DVI-SDA
95 XTALOUT
94 TCLK
X7000
14.318MHz
IC7002
MCU
18 VGA
21 MUTE
8 RESET
AIN6 11
SCL 24
SDA 28
OSCOUT 2
OSXIN 3
X7001
12MHz
IC7005
EEPROM
IC7006
EEPROM
WP 7
SCK 6
SI 5
IC7000
ESD
IC7001
ESD
IC7003
ESD
IC7008
3.3V REG
IC7007
2.5V REG
DVI5V
+3.3V
+2.5V
CN7001
1 RX2-
2 RX2+
6 SCL
7 SDA
9 RX1-
10 RX1+
14 5V
16 HPD
17 RX0-
18 RX0+
23 RXC+
24 RXC-
SCL
SDA
DVI5V
DVI5V
TO PANEL BLOCK
UD (DVI RECEIVER)

3-2. FRAME DIAGRAM

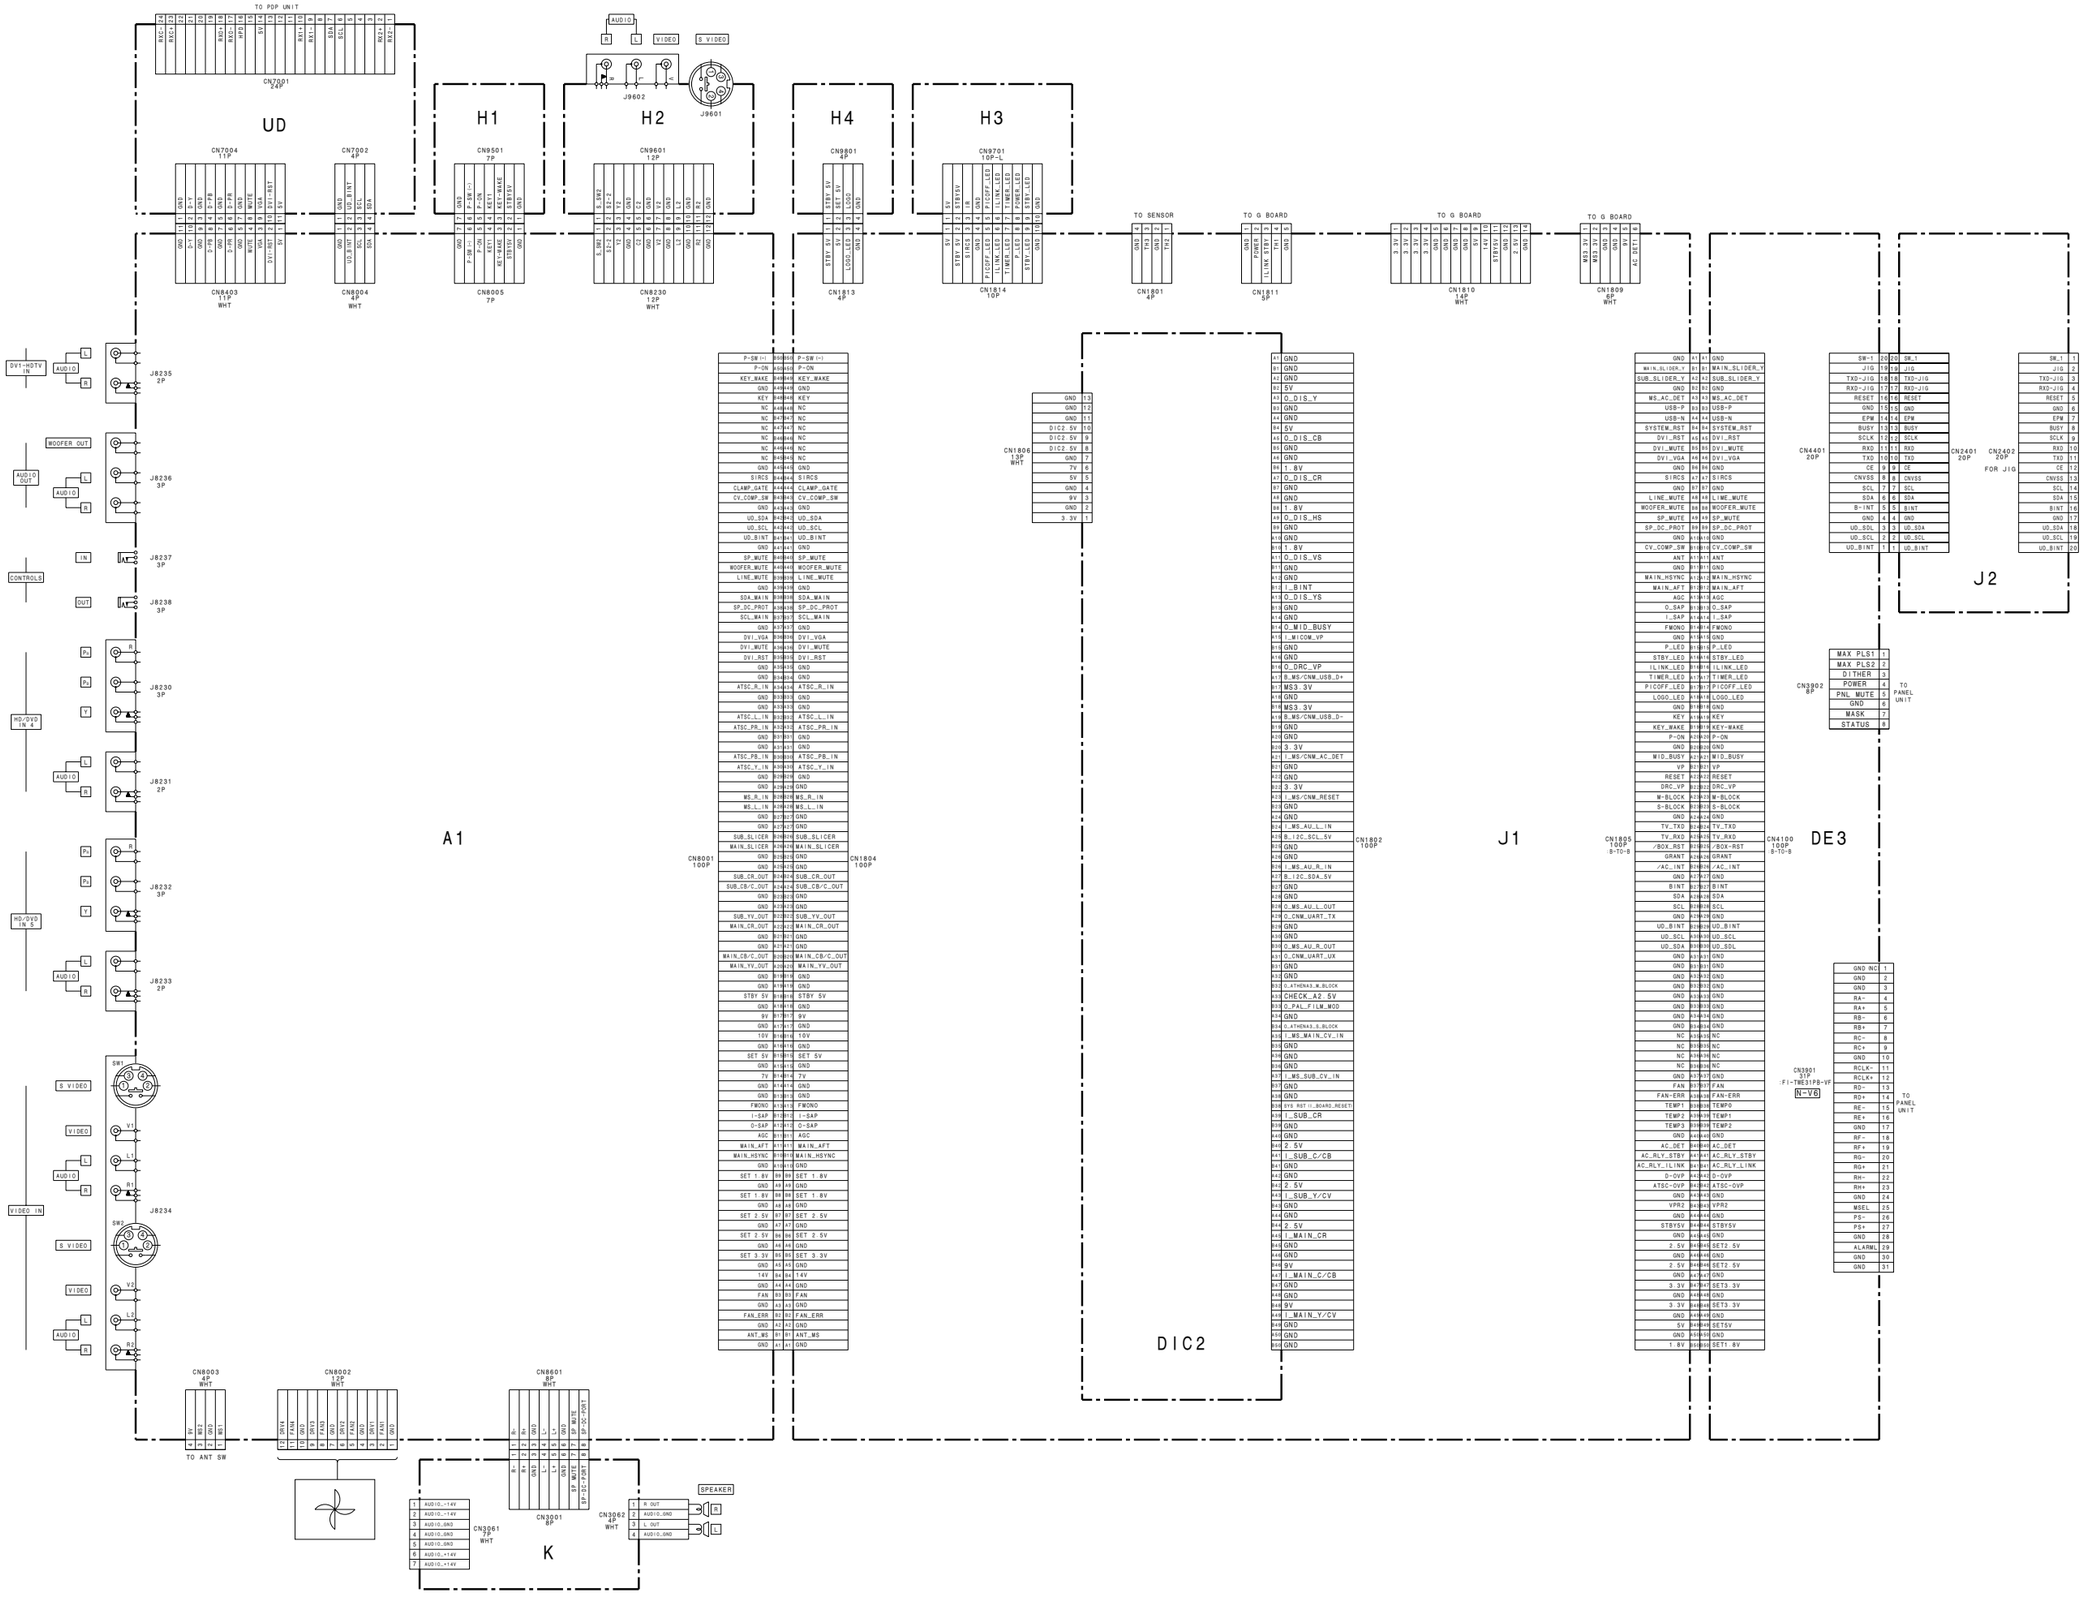

3-3. CIRCUIT BOARDS LOCATION

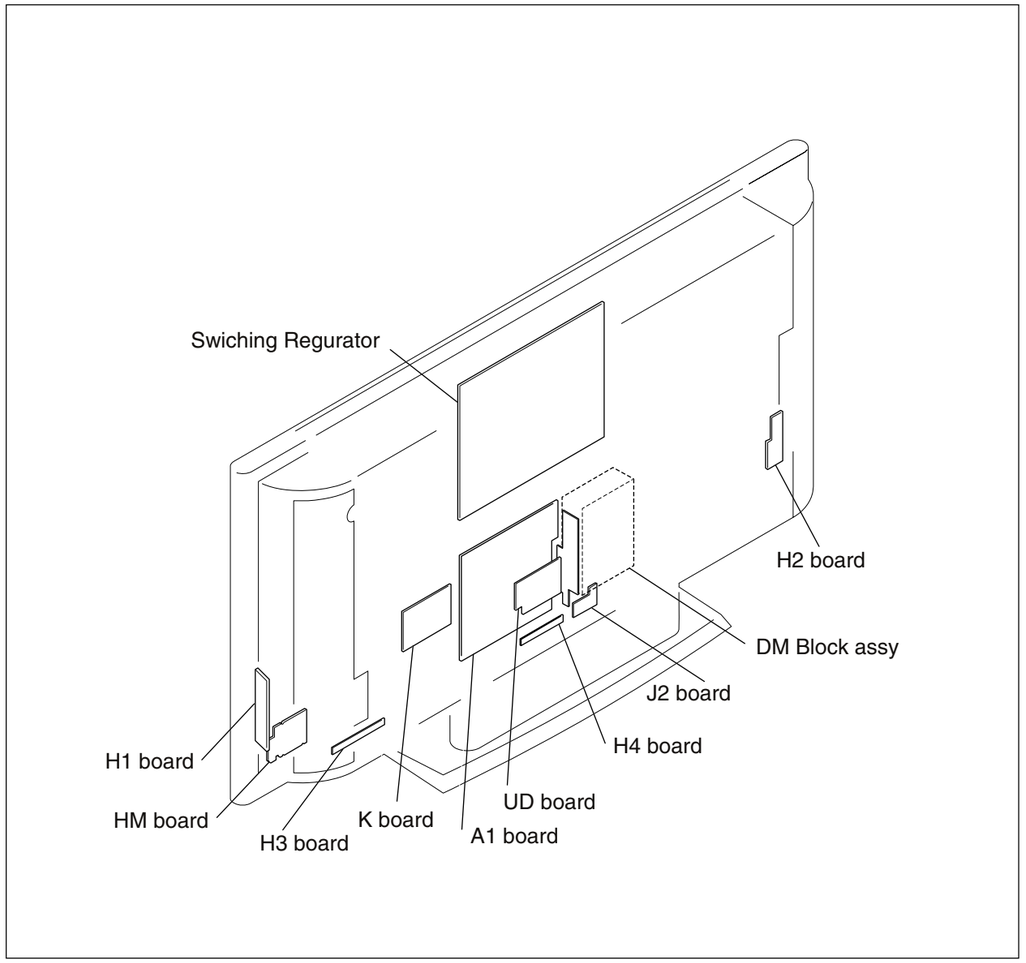

3-4. SCHEMATIC DIAGRAMS

Note:

- All capacitors are in µF unless otherwise noted. (pF: µµF)
  Capacitors without voltage indication are all 50 V.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

  Pitch: 5 mm

  Rating electrical power 1/4 W (CHIP : 1/10 W)

- All resistors are in ohms.
- : nonflammable resistor.
- : fusible resistor.
- △ : internal component.
- : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- ⊥ : earth-ground.
- : earth-chassis.
- When replacing the part in below table, be sure to perform the related adjustment.
- All voltages are in V.
- Readings are taken with a 10 M digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- ∗ : Can not be measured.
- Circled numbers are waveform references.
- : B + bus.
- : B – bus.
- ⇨ : Signal path.

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un tramé et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Terminal name of semiconductors in silk screen printed circuit (∗)

	Device	Printed symbol	Terminal name	Circuit
①	Transistor		Collector / Base Emitter	
②	Transistor		Collector / Base Emitter	
③	Diode		Cathode – Anode	
④	Diode		Cathode / Anode (NC)	
⑤	Diode		Cathode / Anode (NC)	
⑥	Diode		Common / Anode Cathode	
⑦	Diode		Common / Anode Cathode	
⑧	Diode		Common / Anode Anode	
⑨	Diode		Common / Anode Anode	
⑩	Diode		Common / Cathode Cathode	
⑪	Diode		Common / Cathode Cathode	
⑫	Diode		Anode Anode Cathode / Cathode Anode Anode	
⑬	Transistor (FET)		Drain / Source Gate	
⑭	Transistor (FET)		Drain / Source Gate	
⑮	Transistor (FET)		☐ Source ☐ Drain ☐ Gate	
⑯	Transistor		☐ Emitter ☐ Collector ☐ Base	
⑰	Transistor		C2 B1 E1 / E2 B2 C1	
⑱	Transistor		C1 B2 E2 / E1 B1 C2	
⑲	Transistor		C1 B2 E2 / E1 B1 C2	
⑳	Transistor		C1 B2 E2 / E1 B1 C2	
㉑	Transistor		E2 B1 E1 / C2 C1(B2)	
㉒	Transistor		(B2) B1 E1 E2 / C1 C2	
㉓	Transistor		(B2) E2 E1 B1 / C2 C1	
–	Discrete semiconductot			

(Chip semiconductors that are not actually used are included.)

Ver.1.6

(1) Schematic Diagrams of A1 Board

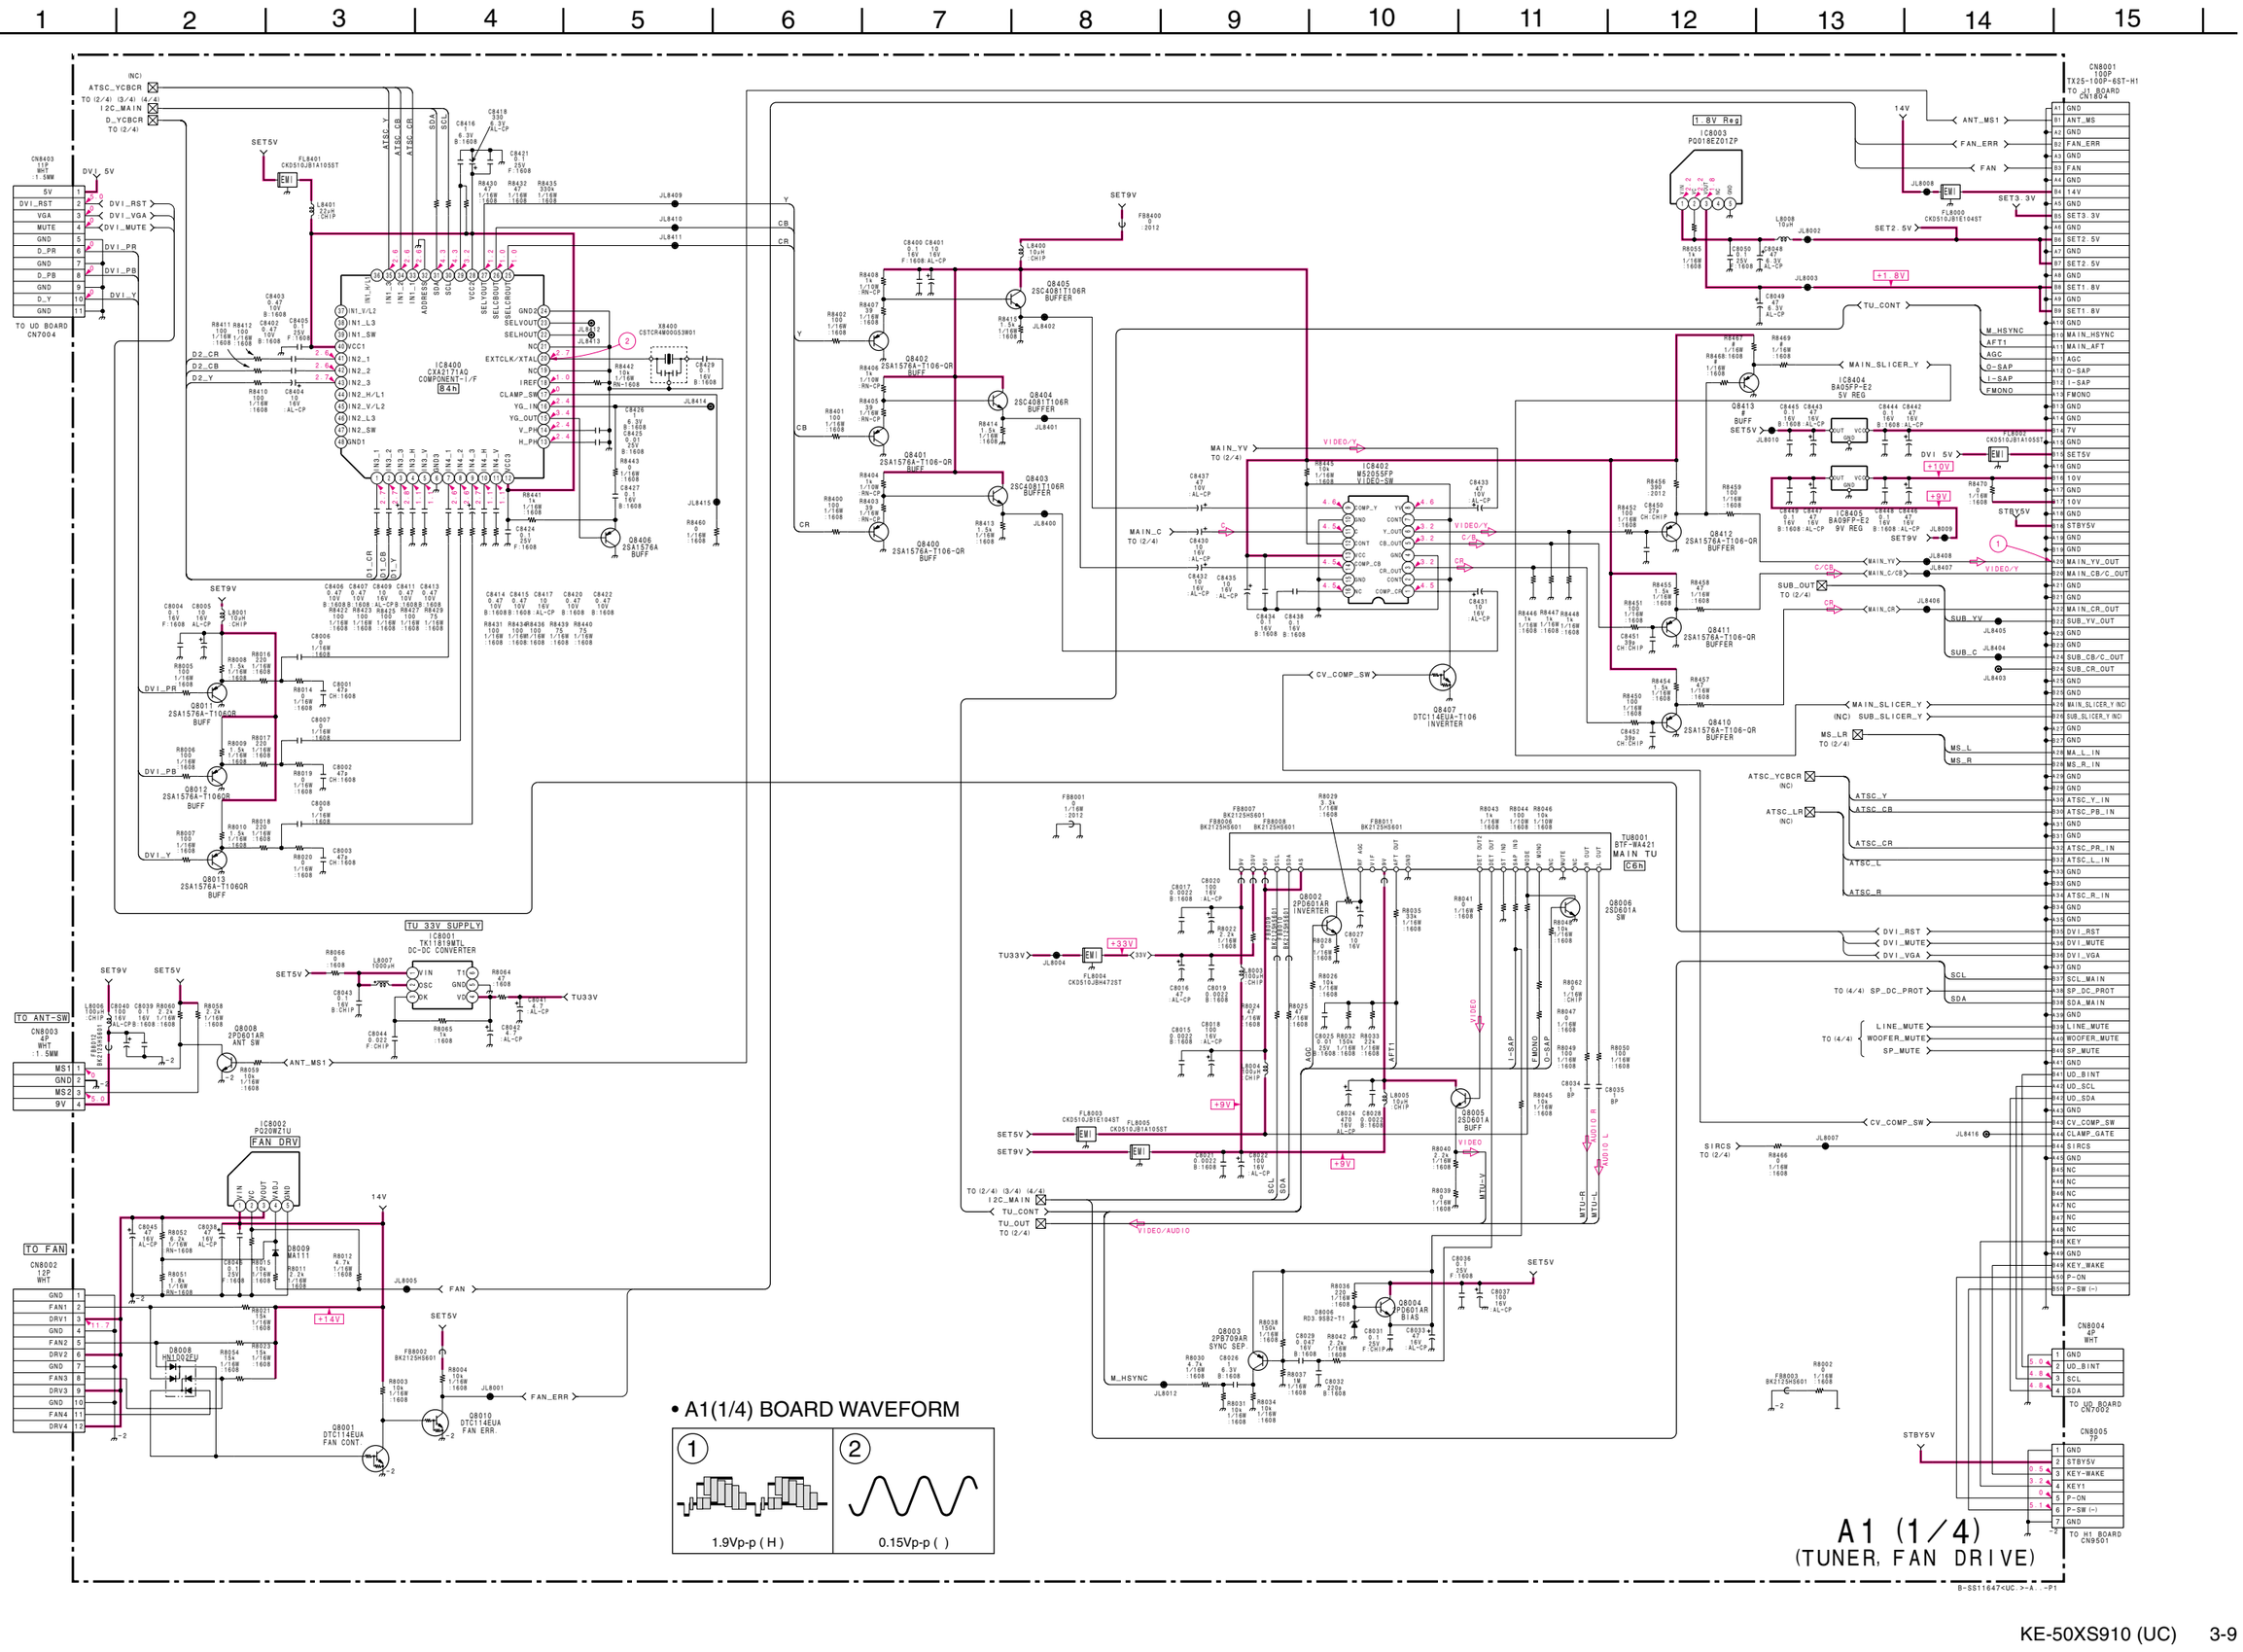

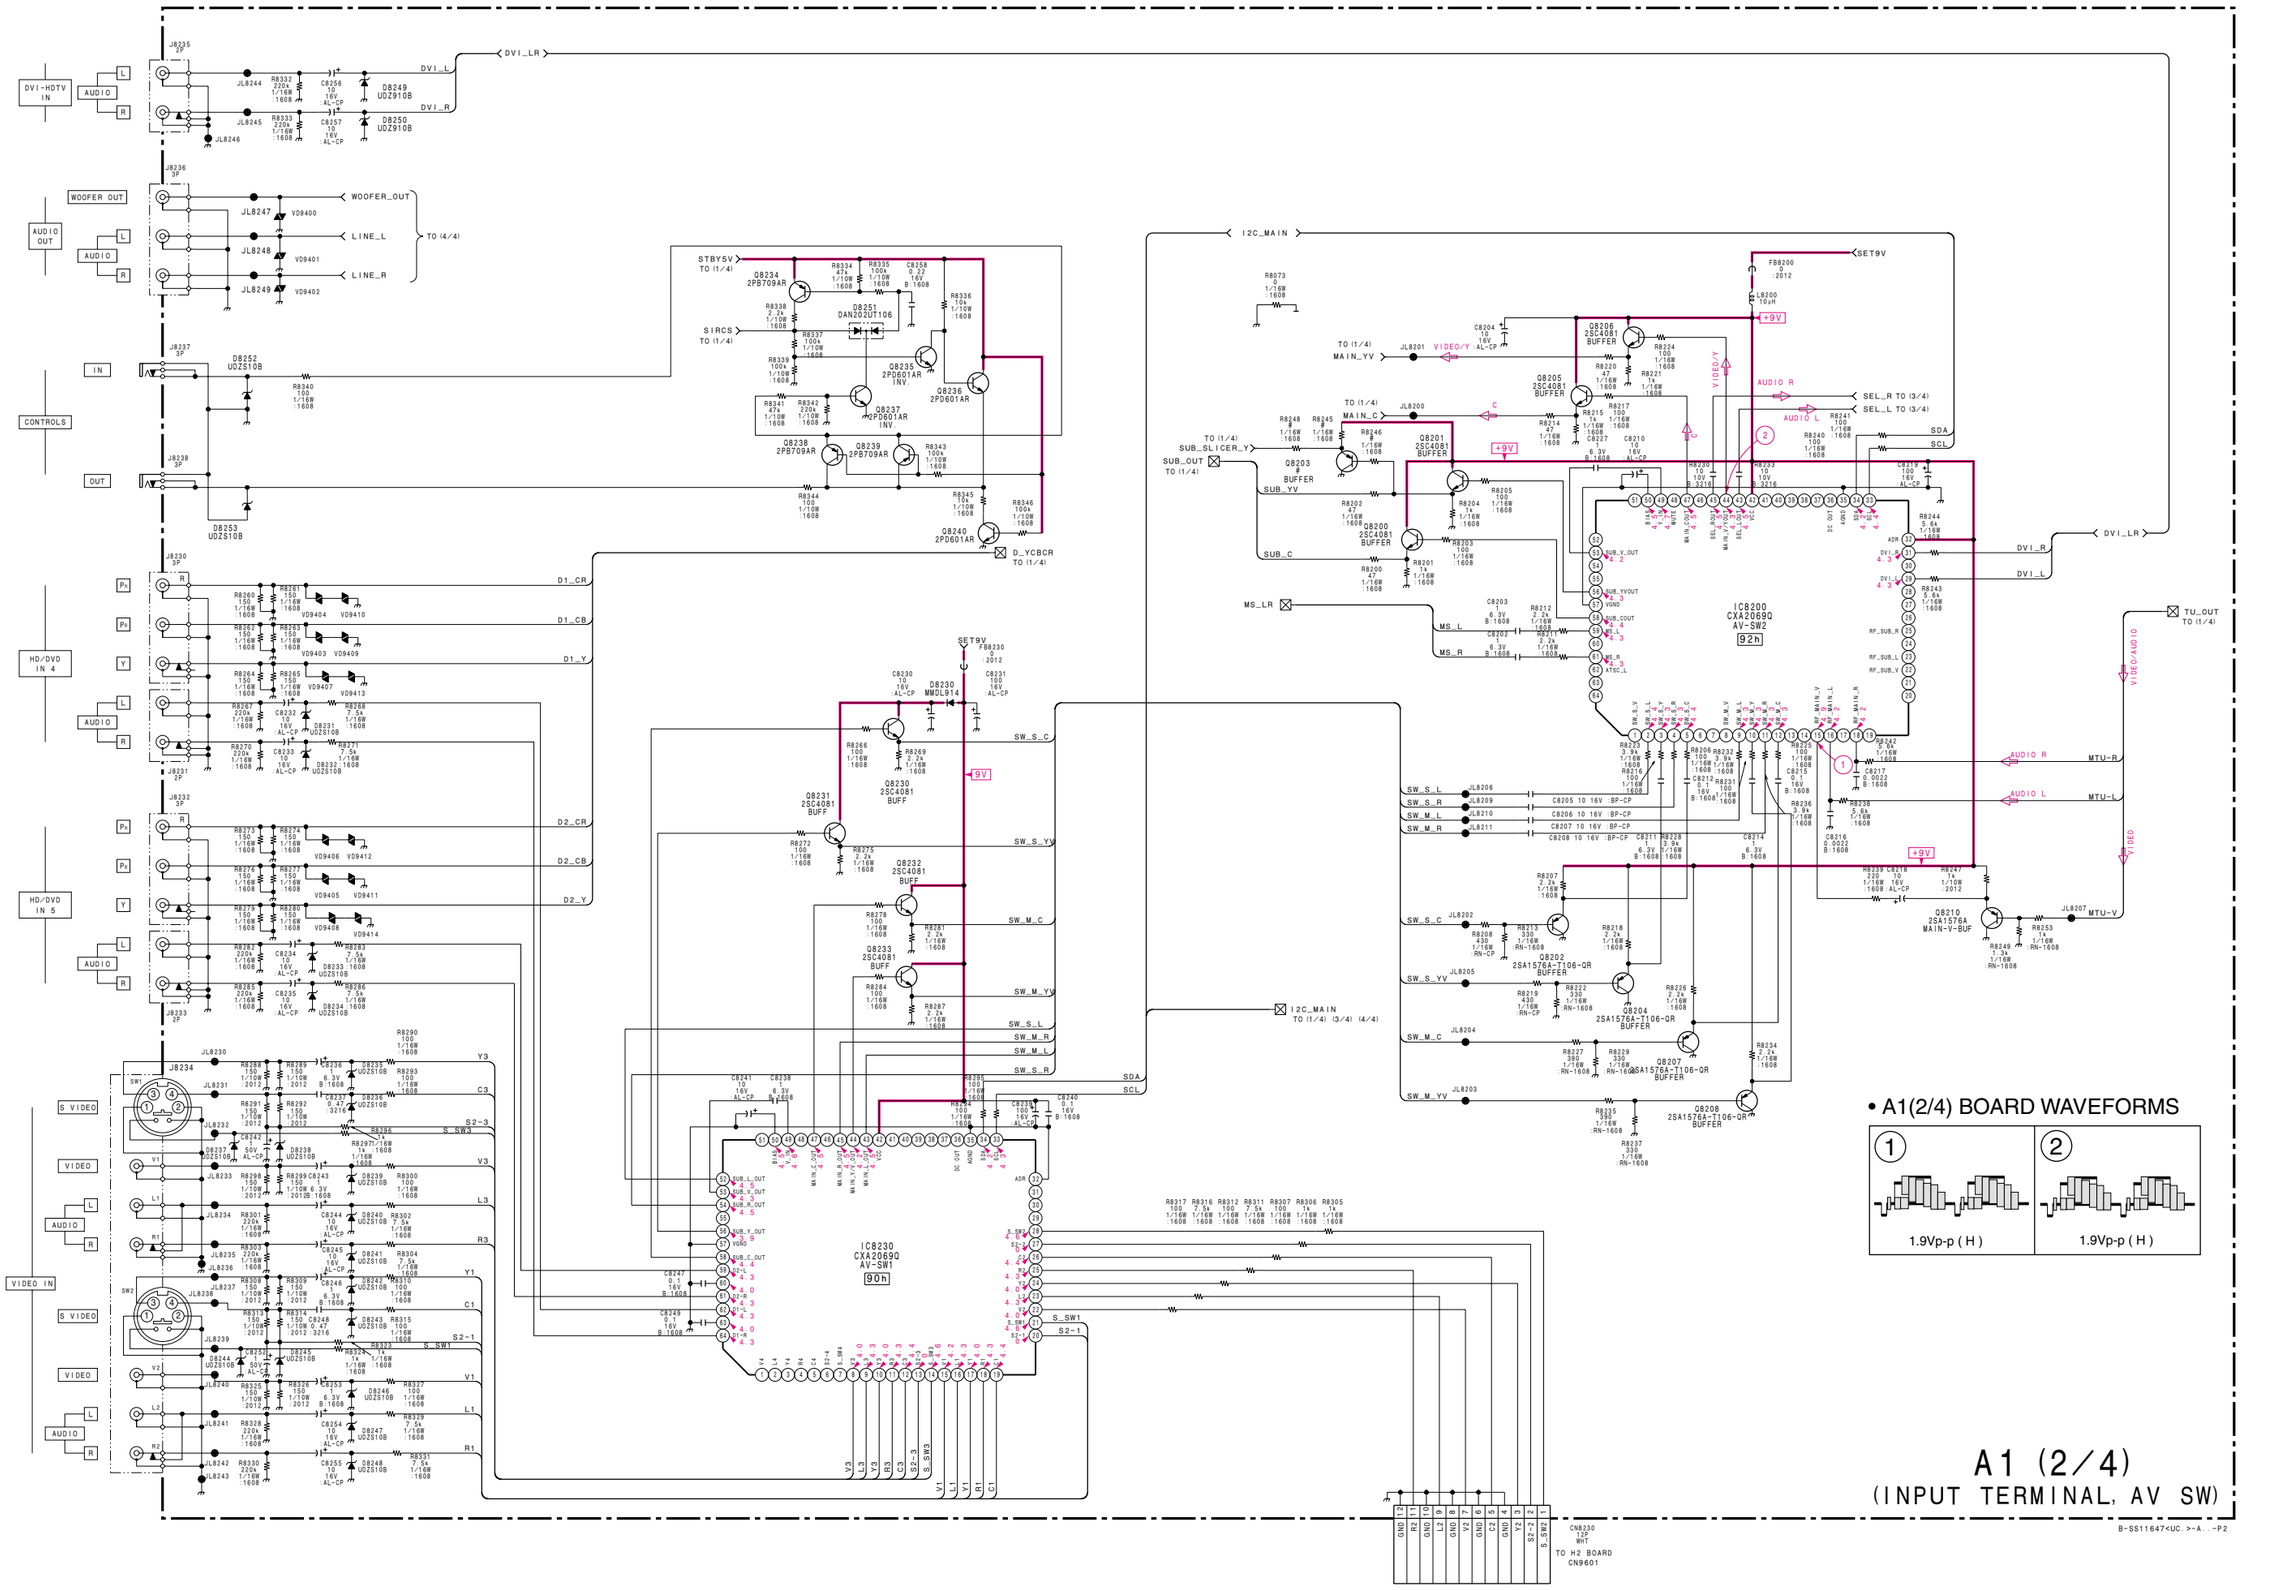
DVI-HDTV IN
AUDIO
L
R
DVI_L
DVI_R
DVI_LR
WOOFER OUT
AUDIO OUT
WOOFER_OUT
LINE_L
LINE_R
TO (4/4)
IN
CONTROLS
OUT
D_YCBCR
TO (1/4)
HD/DVD IN 4
HD/DVD IN 5
D1_CR
D1_CB
D1_Y
D2_CR
D2_CB
D2_Y
VIDEO IN
S VIDEO
VIDEO
I2C_MAIN
TO (1/4) (3/4) (4/4)
SET9V
STBY5V
SIRCS
SDA
SCL
SW_S_C
SW_S_YV
SW_M_C
SW_M_YV
SW_S_L
SW_S_R
SW_M_L
SW_M_R
9V
+9V
IC8230
CXA2069Q
AV-SW1
90h
IC8200
CXA2069Q
AV-SW2
92h
MS_LR
MS_L
MS_R
SUB_C
SUB_YV
SUB_SLICER_Y
SUB_OUT
TO (1/4)
MAIN_YV
MAIN_C
VIDEO/Y
AUDIO R
AUDIO L
SEL_R TO (3/4)
SEL_L TO (3/4)
TU_OUT
TO (1/4)
VIDEO/AUDIO
MTU-R
MTU-L
MTU-V
CN8230
12P
WHT
TO H2 BOARD
CN9601
• A1(2/4) BOARD WAVEFORMS
1
1.9Vp-p (H)
2
1.9Vp-p (H)
A1 (2/4)
(INPUT TERMINAL, AV SW)
B-SS11647<UC.>-A..-P2

A1 (3/4)
(AUDIO PROCESSOR)

SET5V
L8600 10μH
SET2.5V
L8601 10μH
2.5V
3.3V

IC8606 TC74LCX125FT BUS BUFFER
C8617 0.1 16V
R8625 33 :CHIP
R8621 470 :CHIP
R8620 33 :CHIP
FB8603
R8624 33 :CHIP
R8622 270 1/16W :CHIP
R8623 470 :CHIP

IC8607 AK5380 AUDIO DAC
TO (2/4) SEL_R
TO (2/4) SEL_L
AUDIO R 1/16W 1608
AUDIO L
R8601 22k 1608
R8602 22k 1608
JL8601
JL8602
C8618 0.1 16V
C8621 2.2 16V
C8622 22 6.3V
C8619 0.1 16V
C8623 22 6.3V
C8620 0.1 16V
SET3.3V
L8604 10μH
R8661 10k 1/16W 1608
R8629 1k :CHIP
R8628 33 :CHIP
R8627 33 :CHIP
R8626 33 :CHIP

C8616 0.1 16V
C8615 0.1 16V
C8614 22 6.3V
R8619 33 :CHIP
IC8603 NJU26103 AUDIO PROCESSOR 3Eh
C8613 0.1 16V
R8618 1k :CHIP
C8612 0.1 16V
X8600 36M
C8610 1000p B
L8603 2.2μH
C8611 12p CH
R8617 240 :CHIP
R8616 1M :CHIP
C8609 10p CH
R8666 10k 1/16W :CHIP
R8667 10k 1/16W :CHIP
R8612 100 :CHIP
R8613 100 :CHIP

IC8600 R3112N221A-TR-FA RESET
R8600 10k :CHIP
C8600 0.01
JL8603

IC8609 TC74LCX125FT BUS BUFFER
C8629 0.1 16V
R8653 33 :CHIP
R8656 33 :CHIP
R8654 33 :CHIP
R8655 33 :CHIP
FB8604
Q8600 SSM6N15FU LEVE SHIFT
R8657 47k :CHIP
R8658 47k :CHIP
C8630 0.1 16V

R8652 270 :CHIP
R8651 470 :CHIP
R8650 470 :CHIP
R8649 470 :CHIP

IC8608 AK4351 D/A CONVERTER
R8662 10k 1/16W 1608
R8630 33 :CHIP
R8631 33 :CHIP
R8632 33 :CHIP
R8633 1k :CHIP
R8634 33 :CHIP
R8663 10k 1/16W 1608
C8626 0.1 16V
C8624 22 6.3V
C8625 22 6.3V
R8648 220 :CHIP
C8627 10 16V
R8636 27k :CHIP
C8628 10 16V
R8635 27k :CHIP
R8647 220 :CHIP
AUDIO L
AUDIO R
TO (4/4) DELAY_L
TO (4/4) DELAY_R

R8001 0 1/10W :2012
R8607 0 1/10W :2012
FB8601 BK1608HS601
FB8602 BK1608HS601

SCL
SDA
I2C_MAIN TO (1/4) (2/4) (4/4)

B-SS11647<UC.>-A..-P3

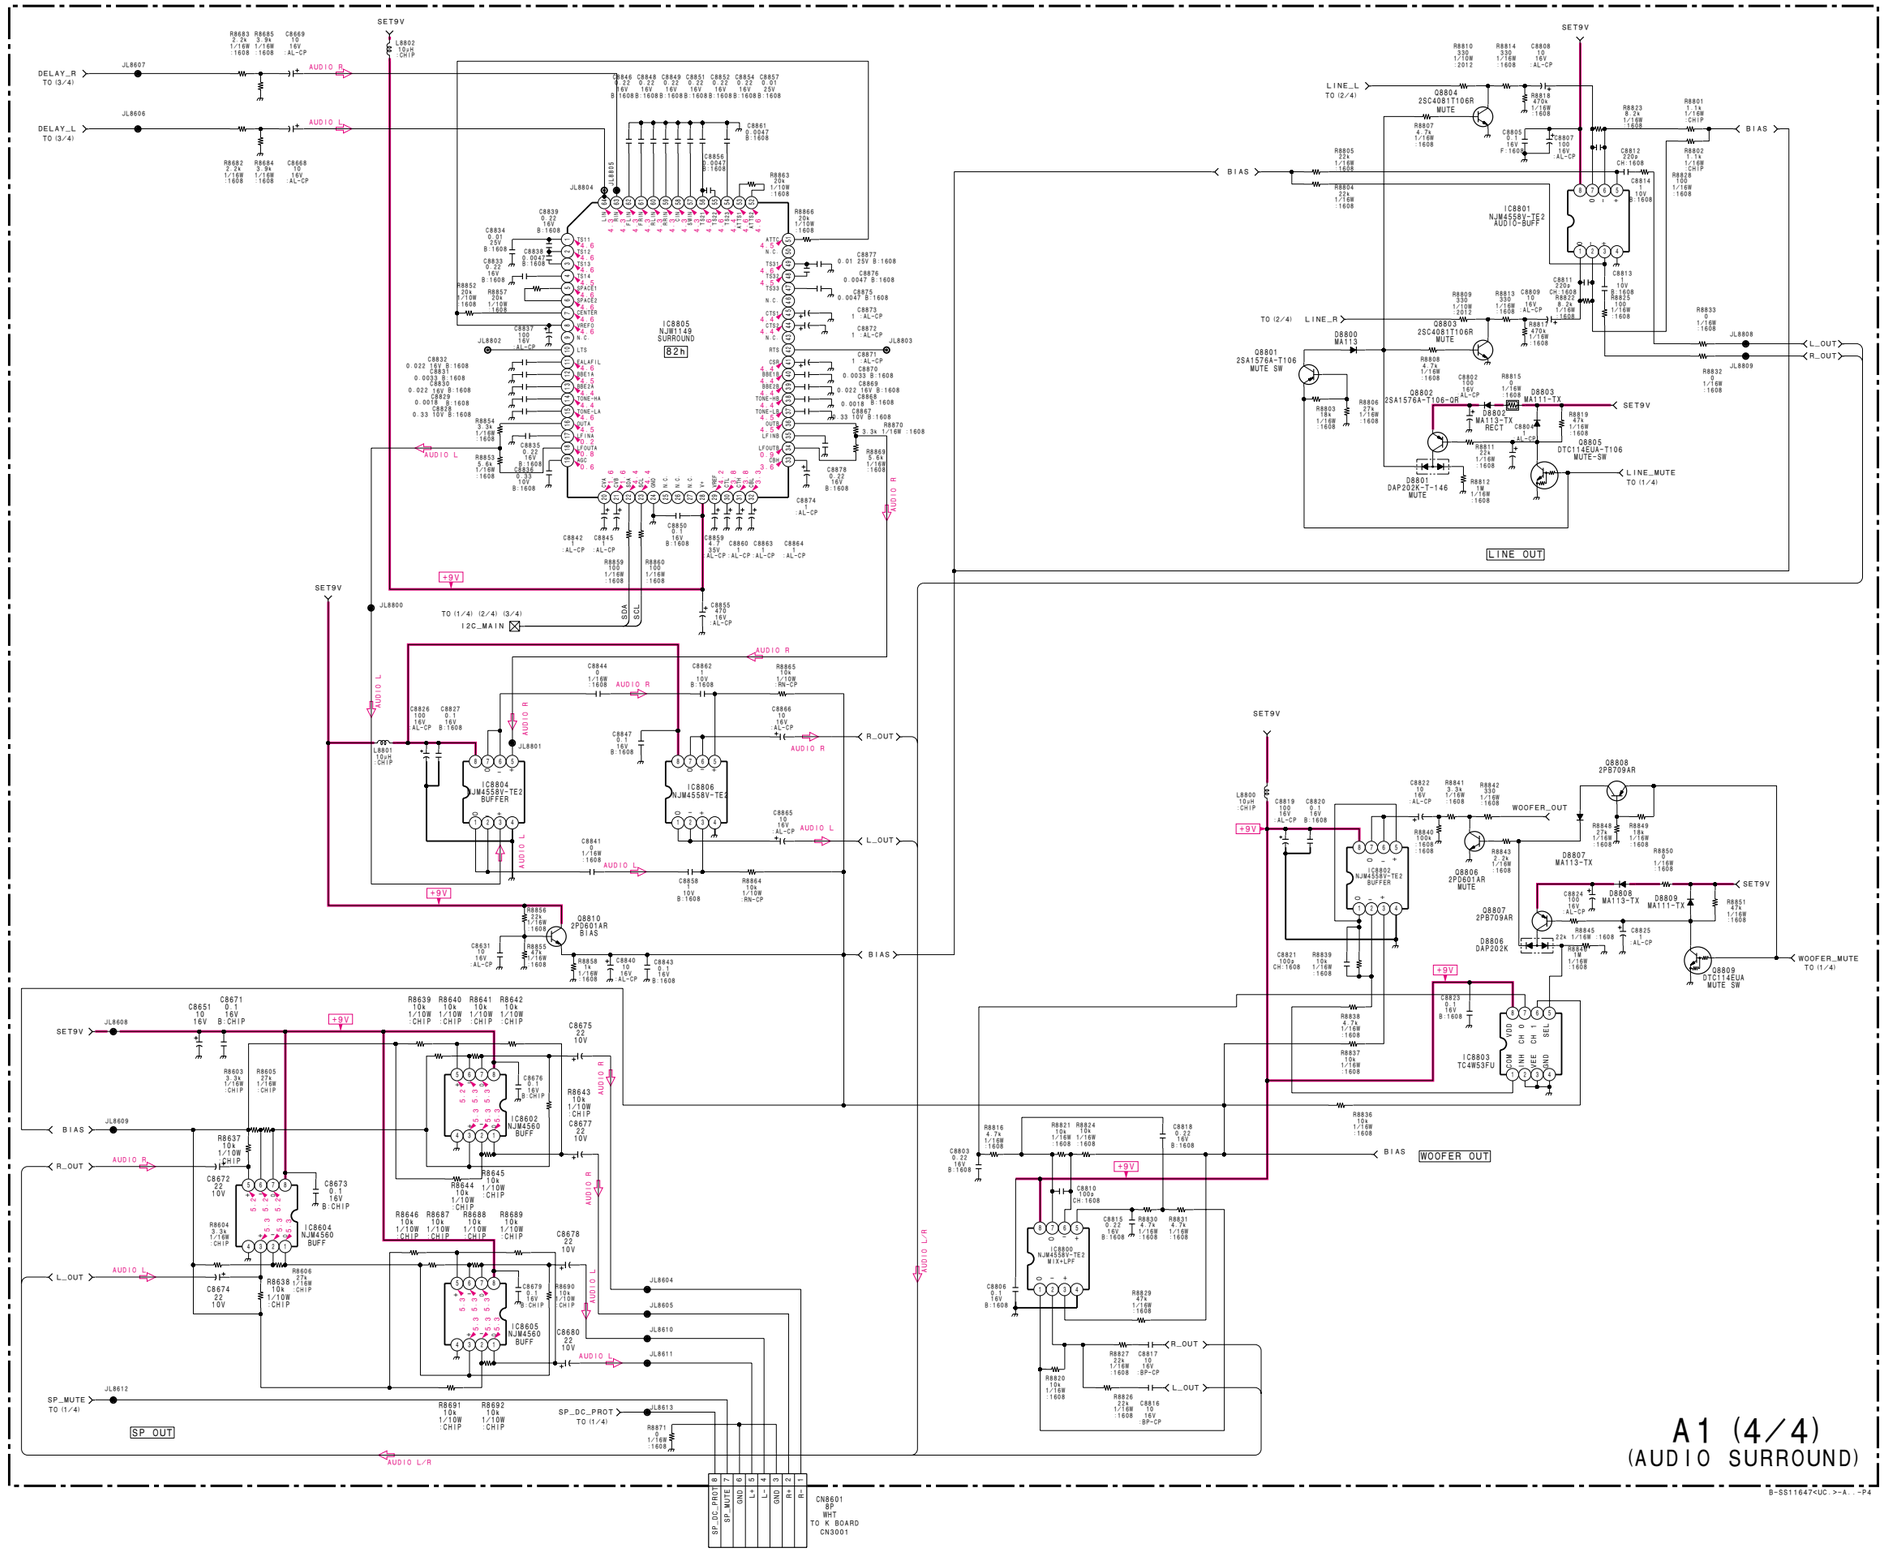
LINE OUT
WOOFER OUT
SP OUT
A1 (4/4)
(AUDIO SURROUND)
B-SS11647<UC.>-A. -P4

DE3 (1/6)(MAIN CPU)

B-5511647-UC 3-DE2-P1

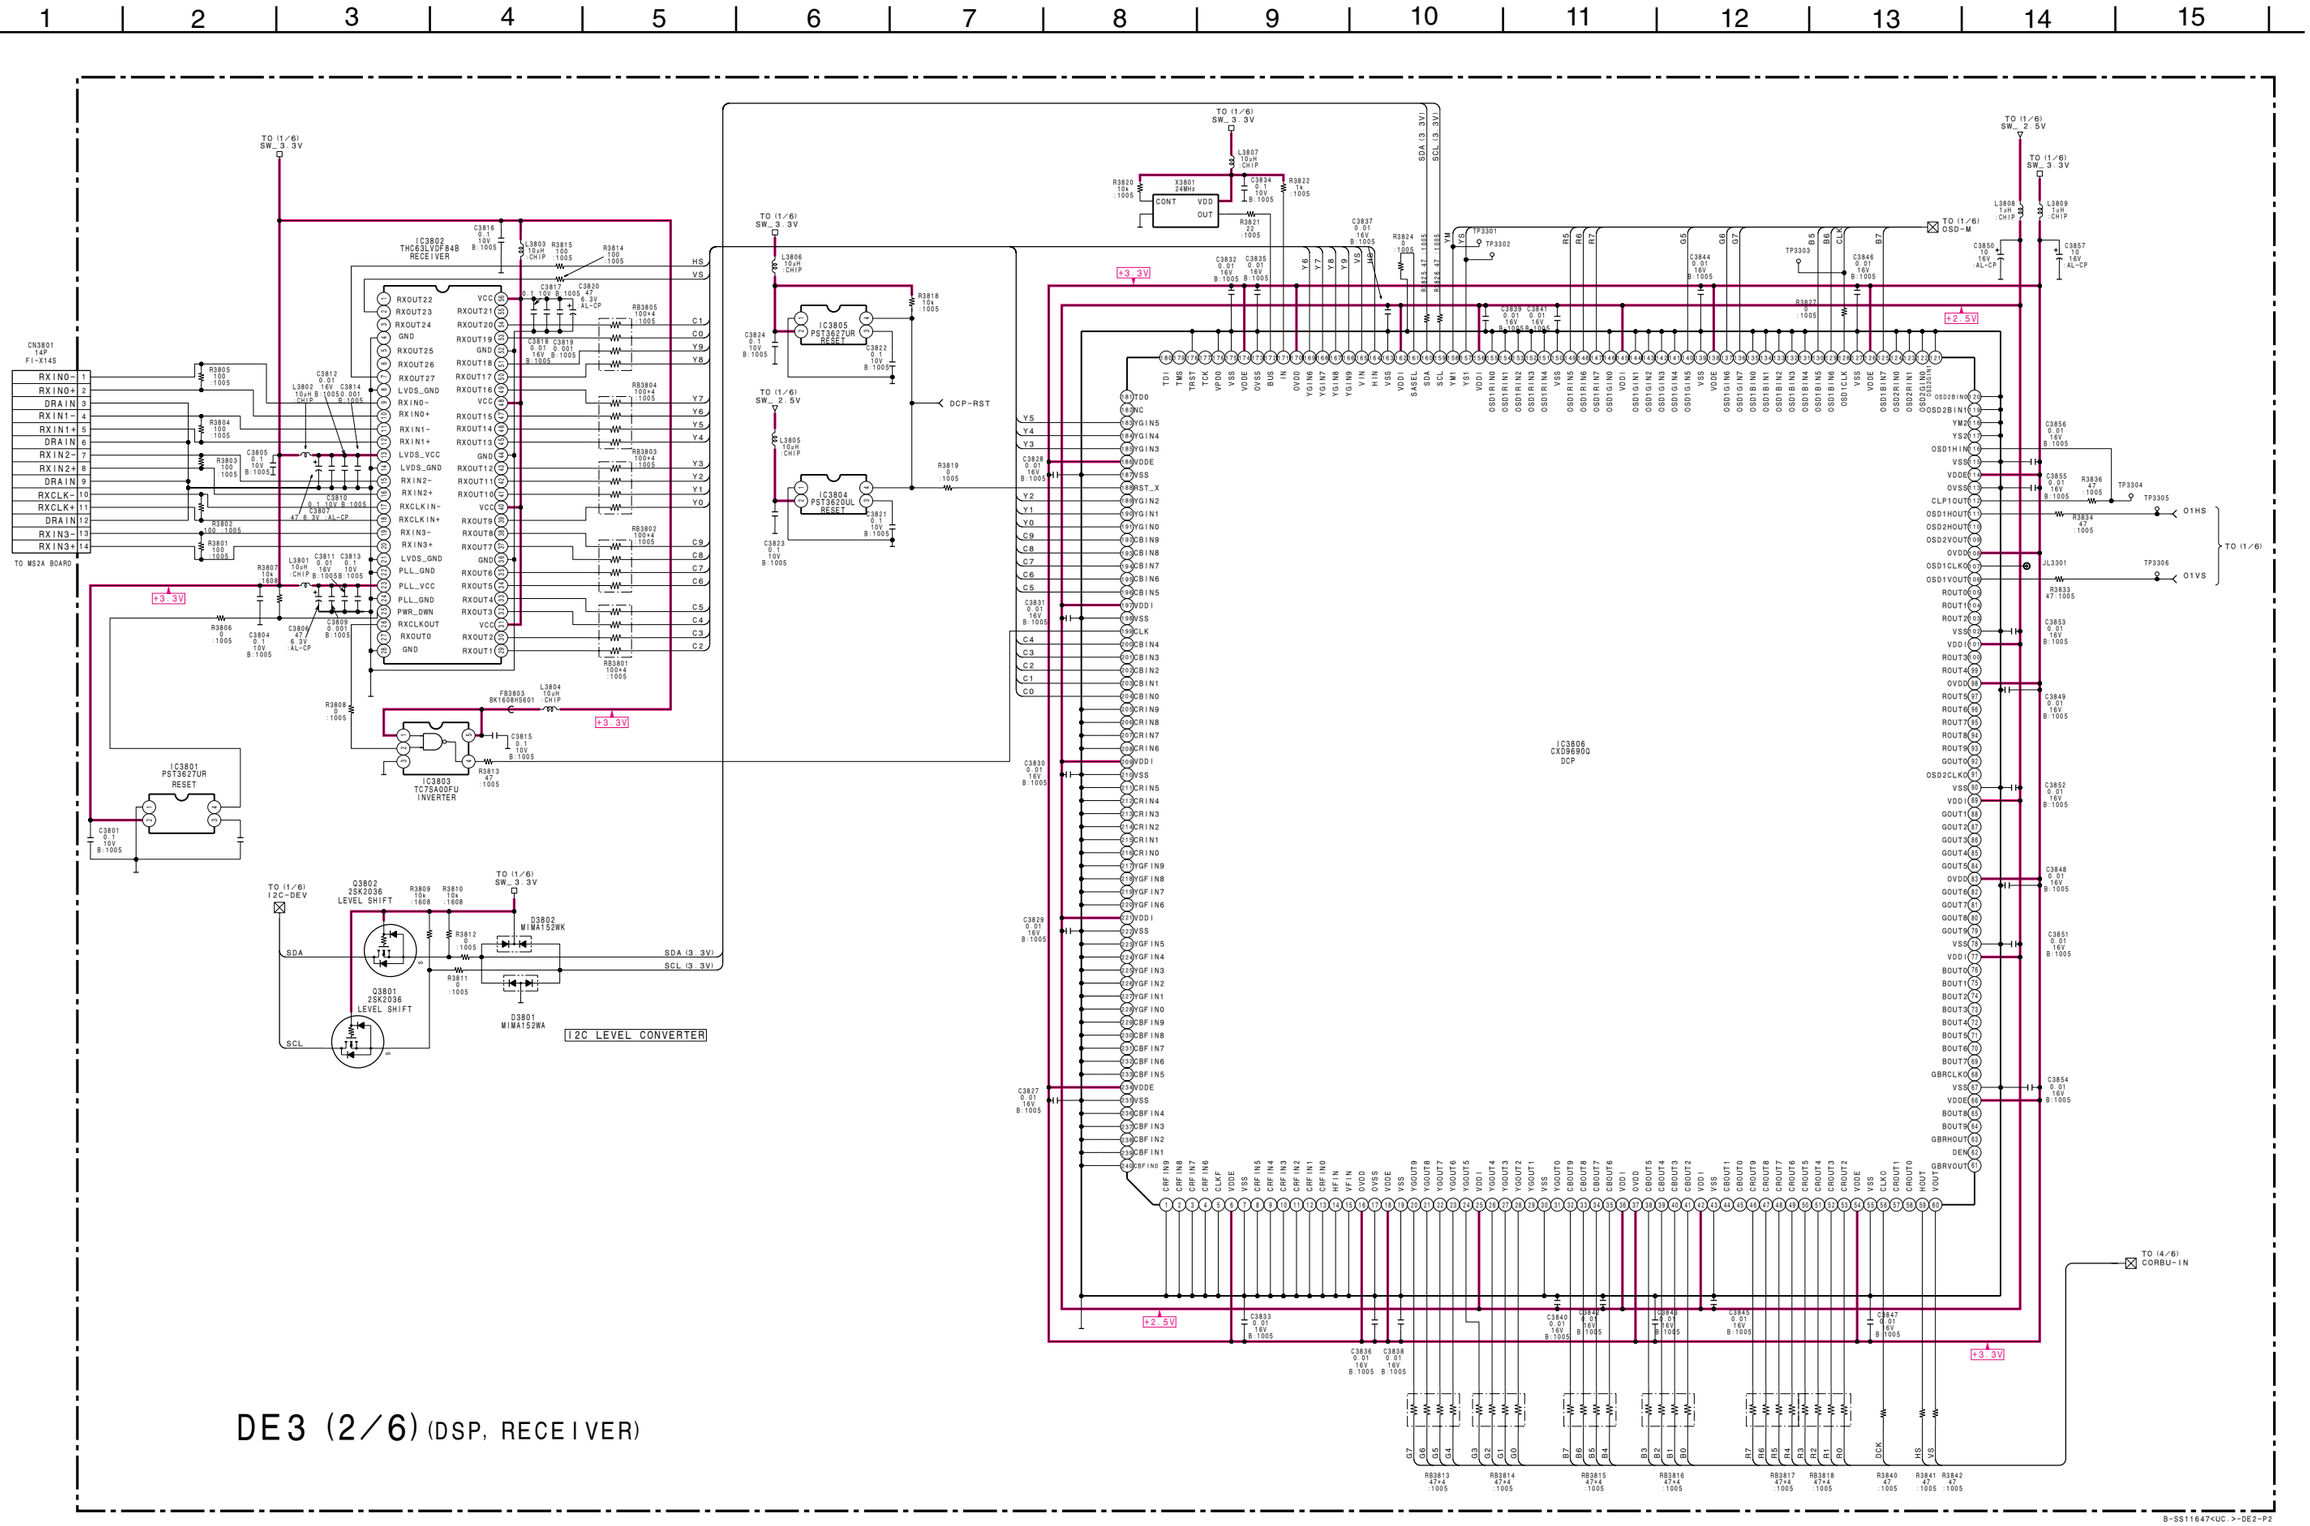

DE3 (2/6) (DSP, RECEIVER)

B-SS11647<UC.>-DE2-P2

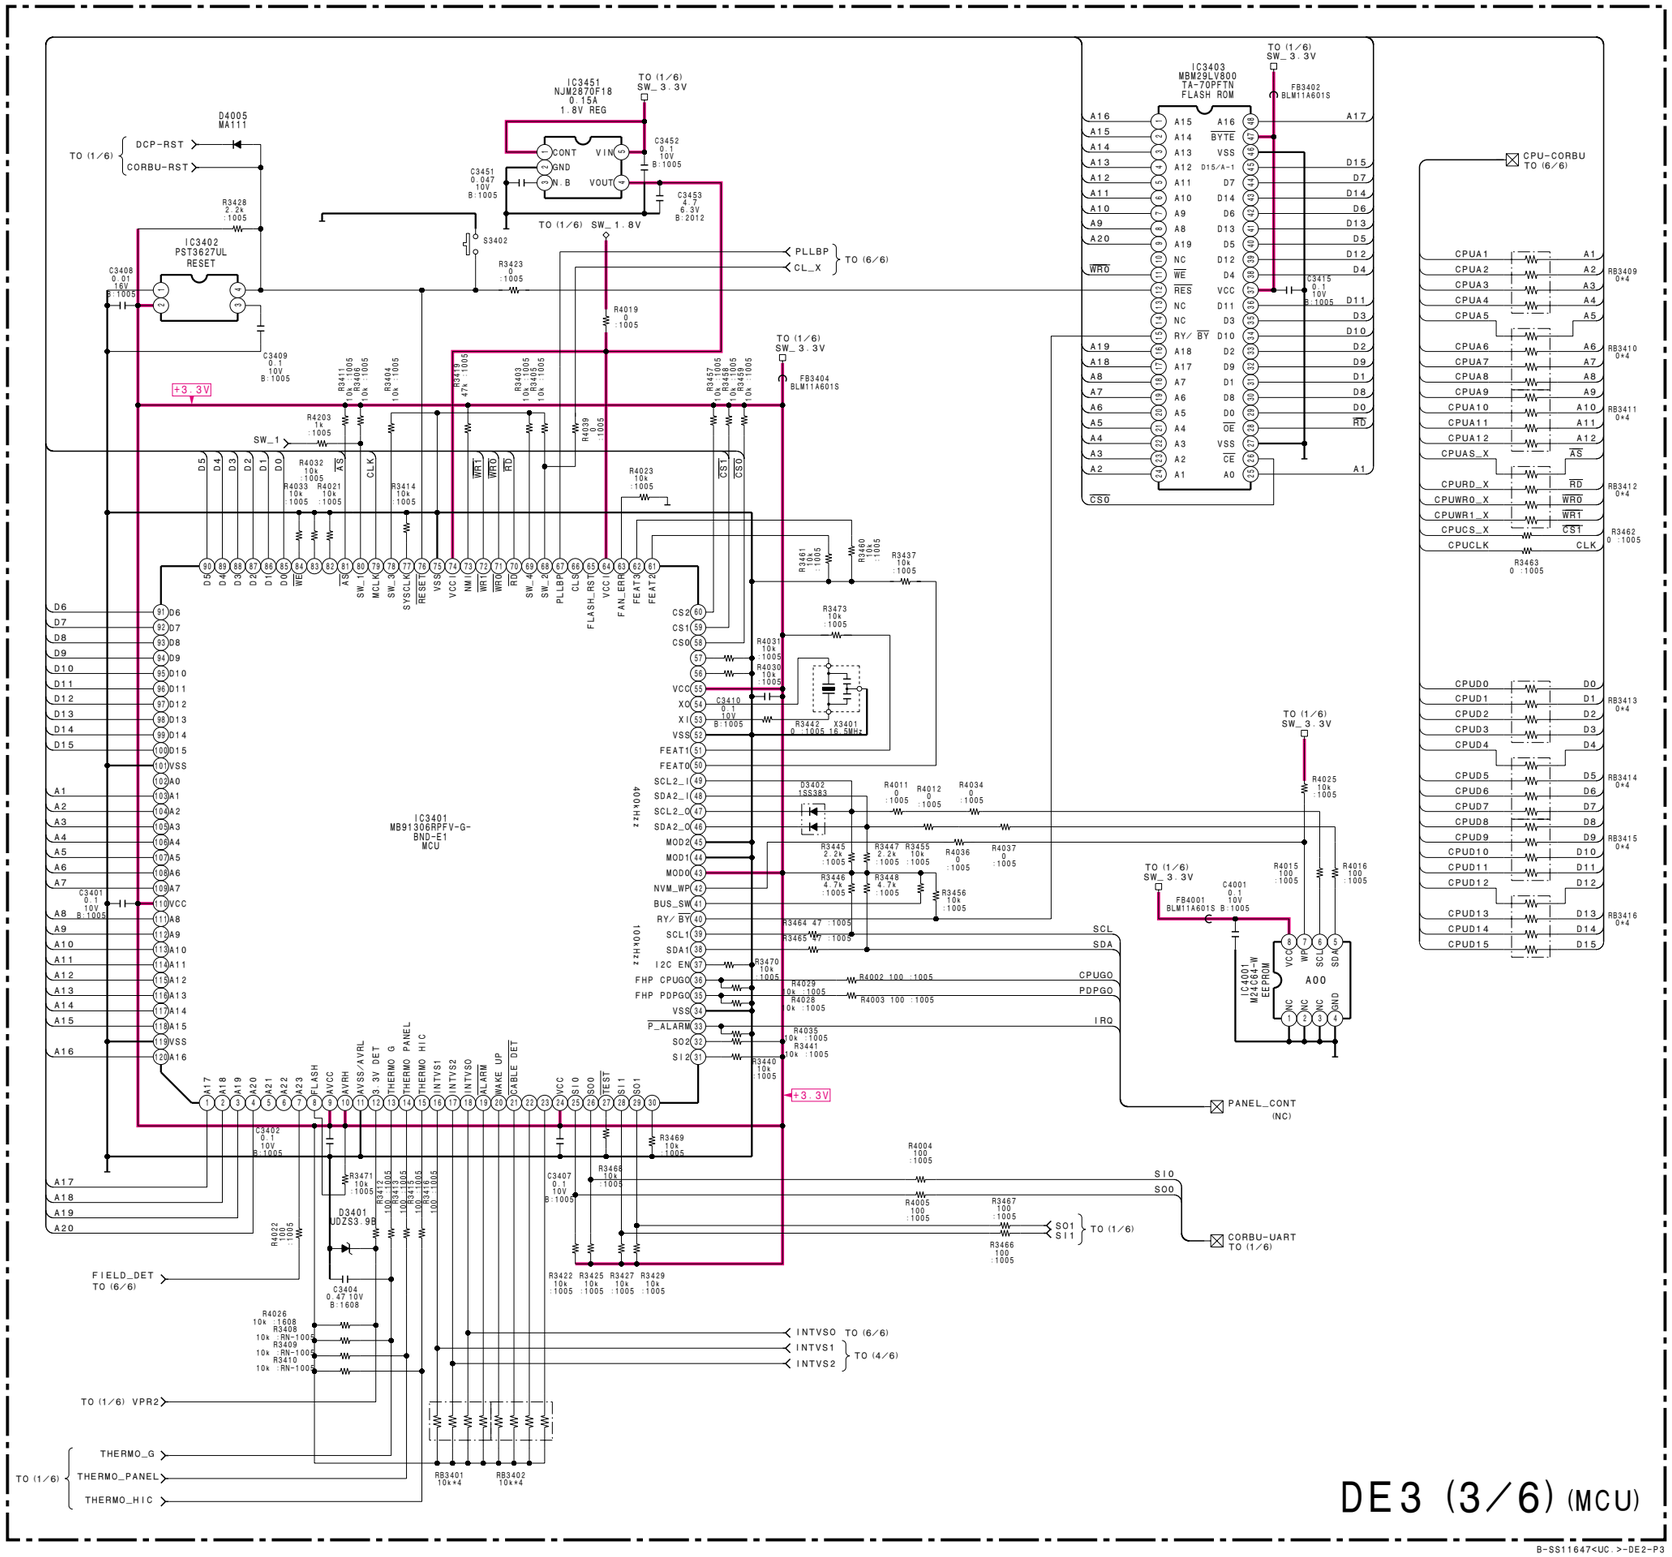
IC3451
NJM2870F18
0.15A
1.8V REG
D4005
MA111
DCP-RST
CORBU-RST
IC3402
PST3627UL
RESET
IC3403
MBM29LV800
TA-70PFTN
FLASH ROM
IC3401
MB91306RPFV-G-
BND-E1
MCU
PLLBP
CL_X
SCL
SDA
CPUGO
PDPGO
IRQ
SIO
SO0
SO1
SI1
PANEL_CONT
(NC)
CORBU-UART
CPU-CORBU
FIELD_DET
INTVSO
INTVS1
INTVS2
THERMO_G
THERMO_PANEL
THERMO_HIC
VPR2
DE3 (3/6) (MCU)
B-SS11647<UC.>-DE2-P3

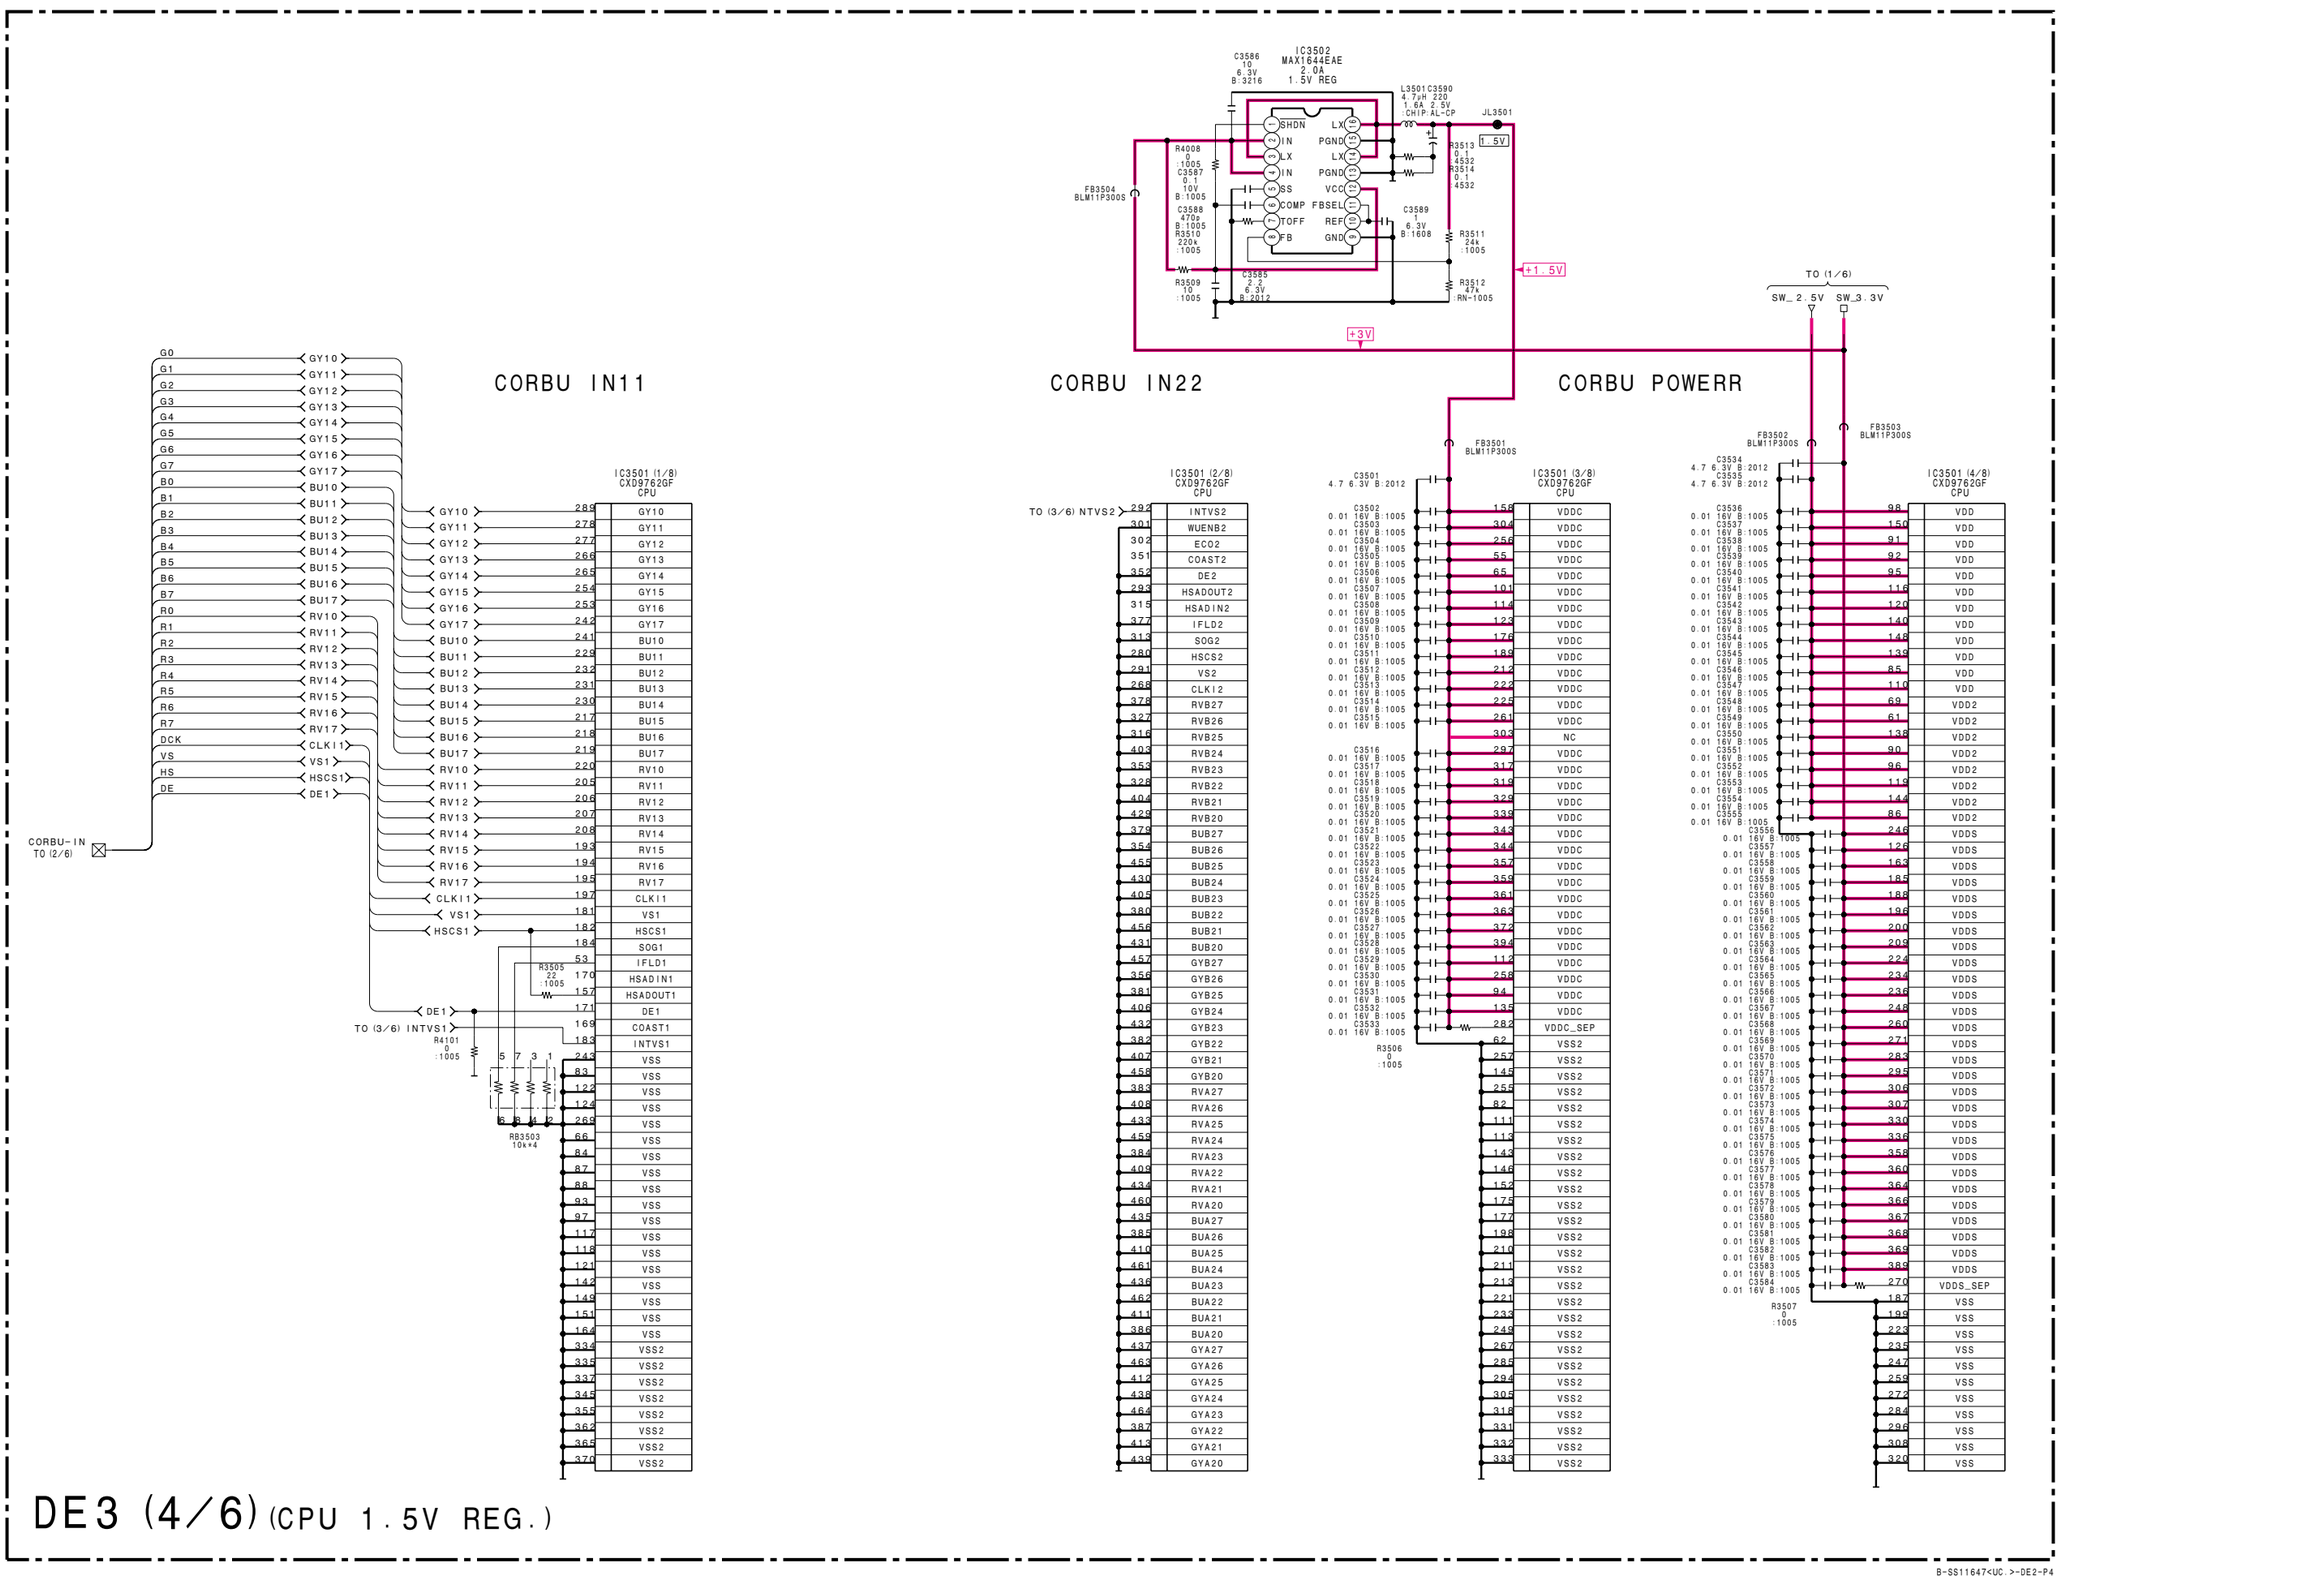
CORBU IN11
CORBU IN22
CORBU POWERR
IC3502
MAX1644EAE
2.0A
1.5V REG
+1.5V
+3V
TO (1/6)
SW_2.5V
SW_3.3V
IC3501 (1/8)
CXD9762GF
CPU
IC3501 (2/8)
CXD9762GF
CPU
IC3501 (3/8)
CXD9762GF
CPU
IC3501 (4/8)
CXD9762GF
CPU
CORBU-IN
TO (2/6)
TO (3/6) NTVS2
TO (3/6) INTVS1
RB3503
10k×4
FB3501
BLM11P300S
FB3502
BLM11P300S
FB3503
BLM11P300S
FB3504
BLM11P300S
JL3501
DE3 (4/6) (CPU 1.5V REG.)
B-SS11647<UC.>-DE2-P4

DE3 (5/6) (CPU)

IC3501 (5/8)
CXD9762GF
CPU

IC3602
K4D263238F-UC50T
DDR SDRAM

IC3603
MAX1809EEE
DDRM TERM. SUPP.

B-SS11647<UC.>-DE2-P5

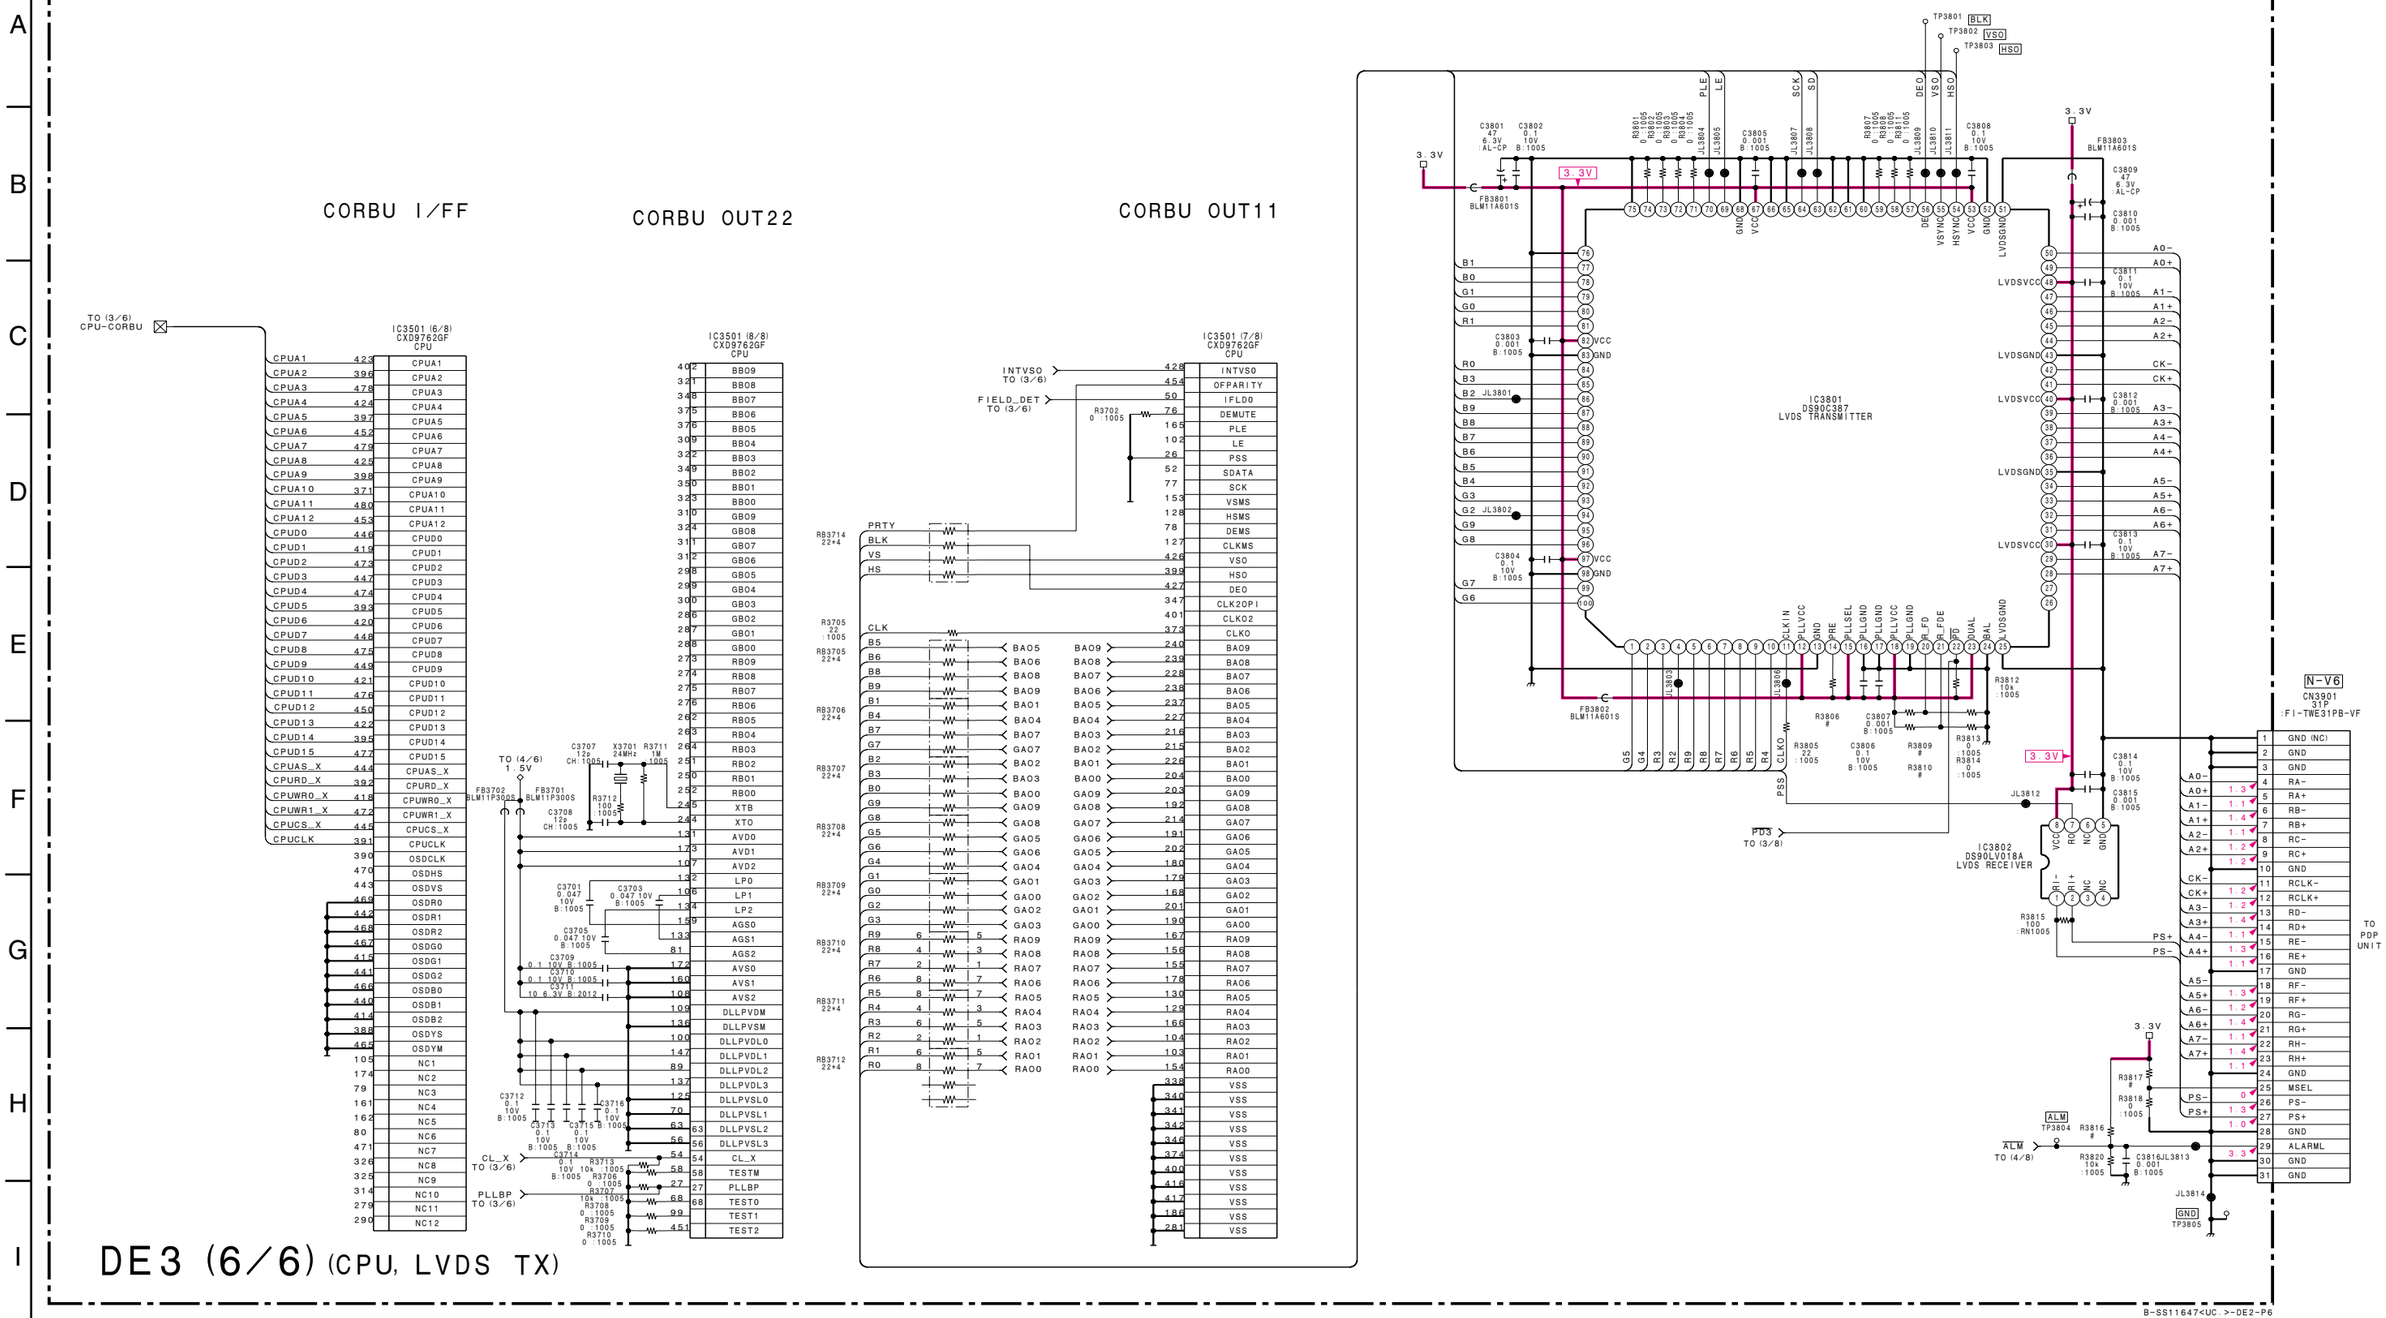
CORBU I/FF
CORBU OUT22
CORBU OUT11
IC3501 (6/8) CXD9762GF CPU
IC3501 (8/8) CXD9762GF CPU
IC3501 (7/8) CXD9762GF CPU
IC3801 DS90C387 LVDS TRANSMITTER
IC3802 DS90LV018A LVDS RECEIVER
TO (3/6) CPU-CORBU
TO (4/6) 1.5V
CL_X TO (3/6)
PLLBP TO (3/6)
INTVSO TO (3/6)
FIELD_DET TO (3/6)
PD3 TO (3/8)
ALM TO (4/8)
3.3V
N-V6
CN3901 31P :FI-TWE31PB-VF
TO PDP UNIT
DE3 (6/6) (CPU, LVDS TX)
B-SS11647<UC.>-DE2-P6

(3) Schematic Diagrams of DIC2 Board

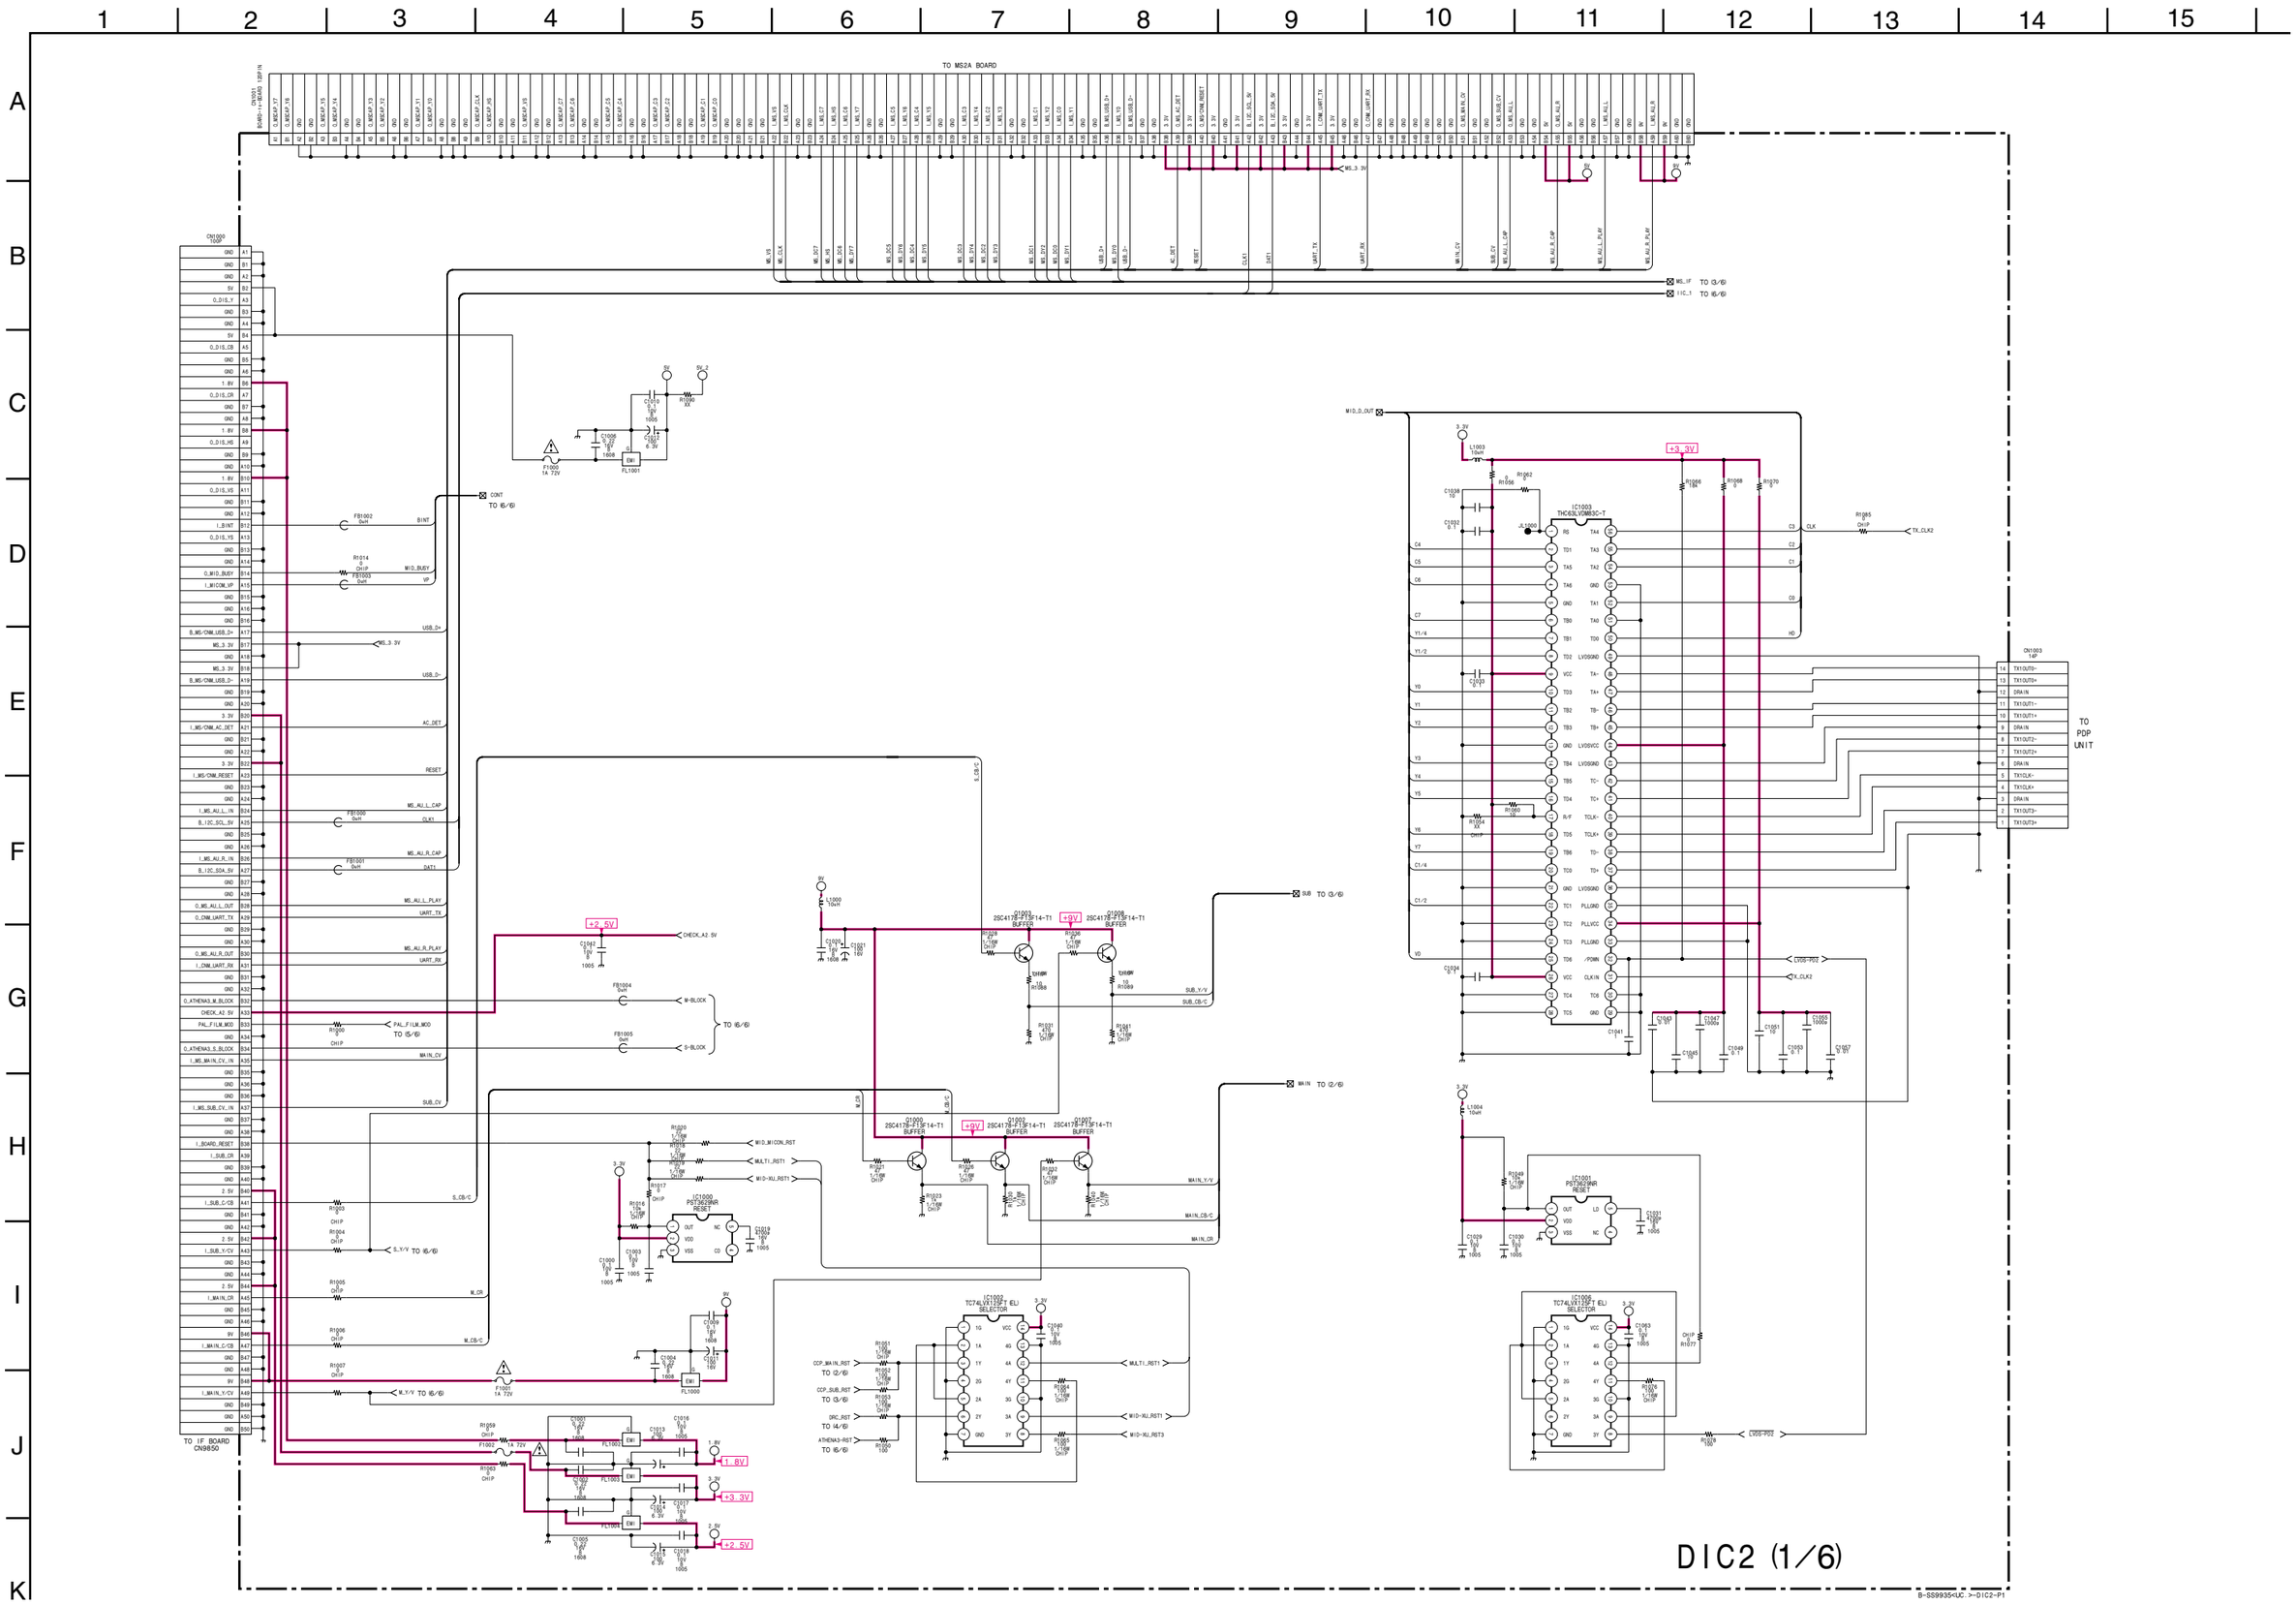

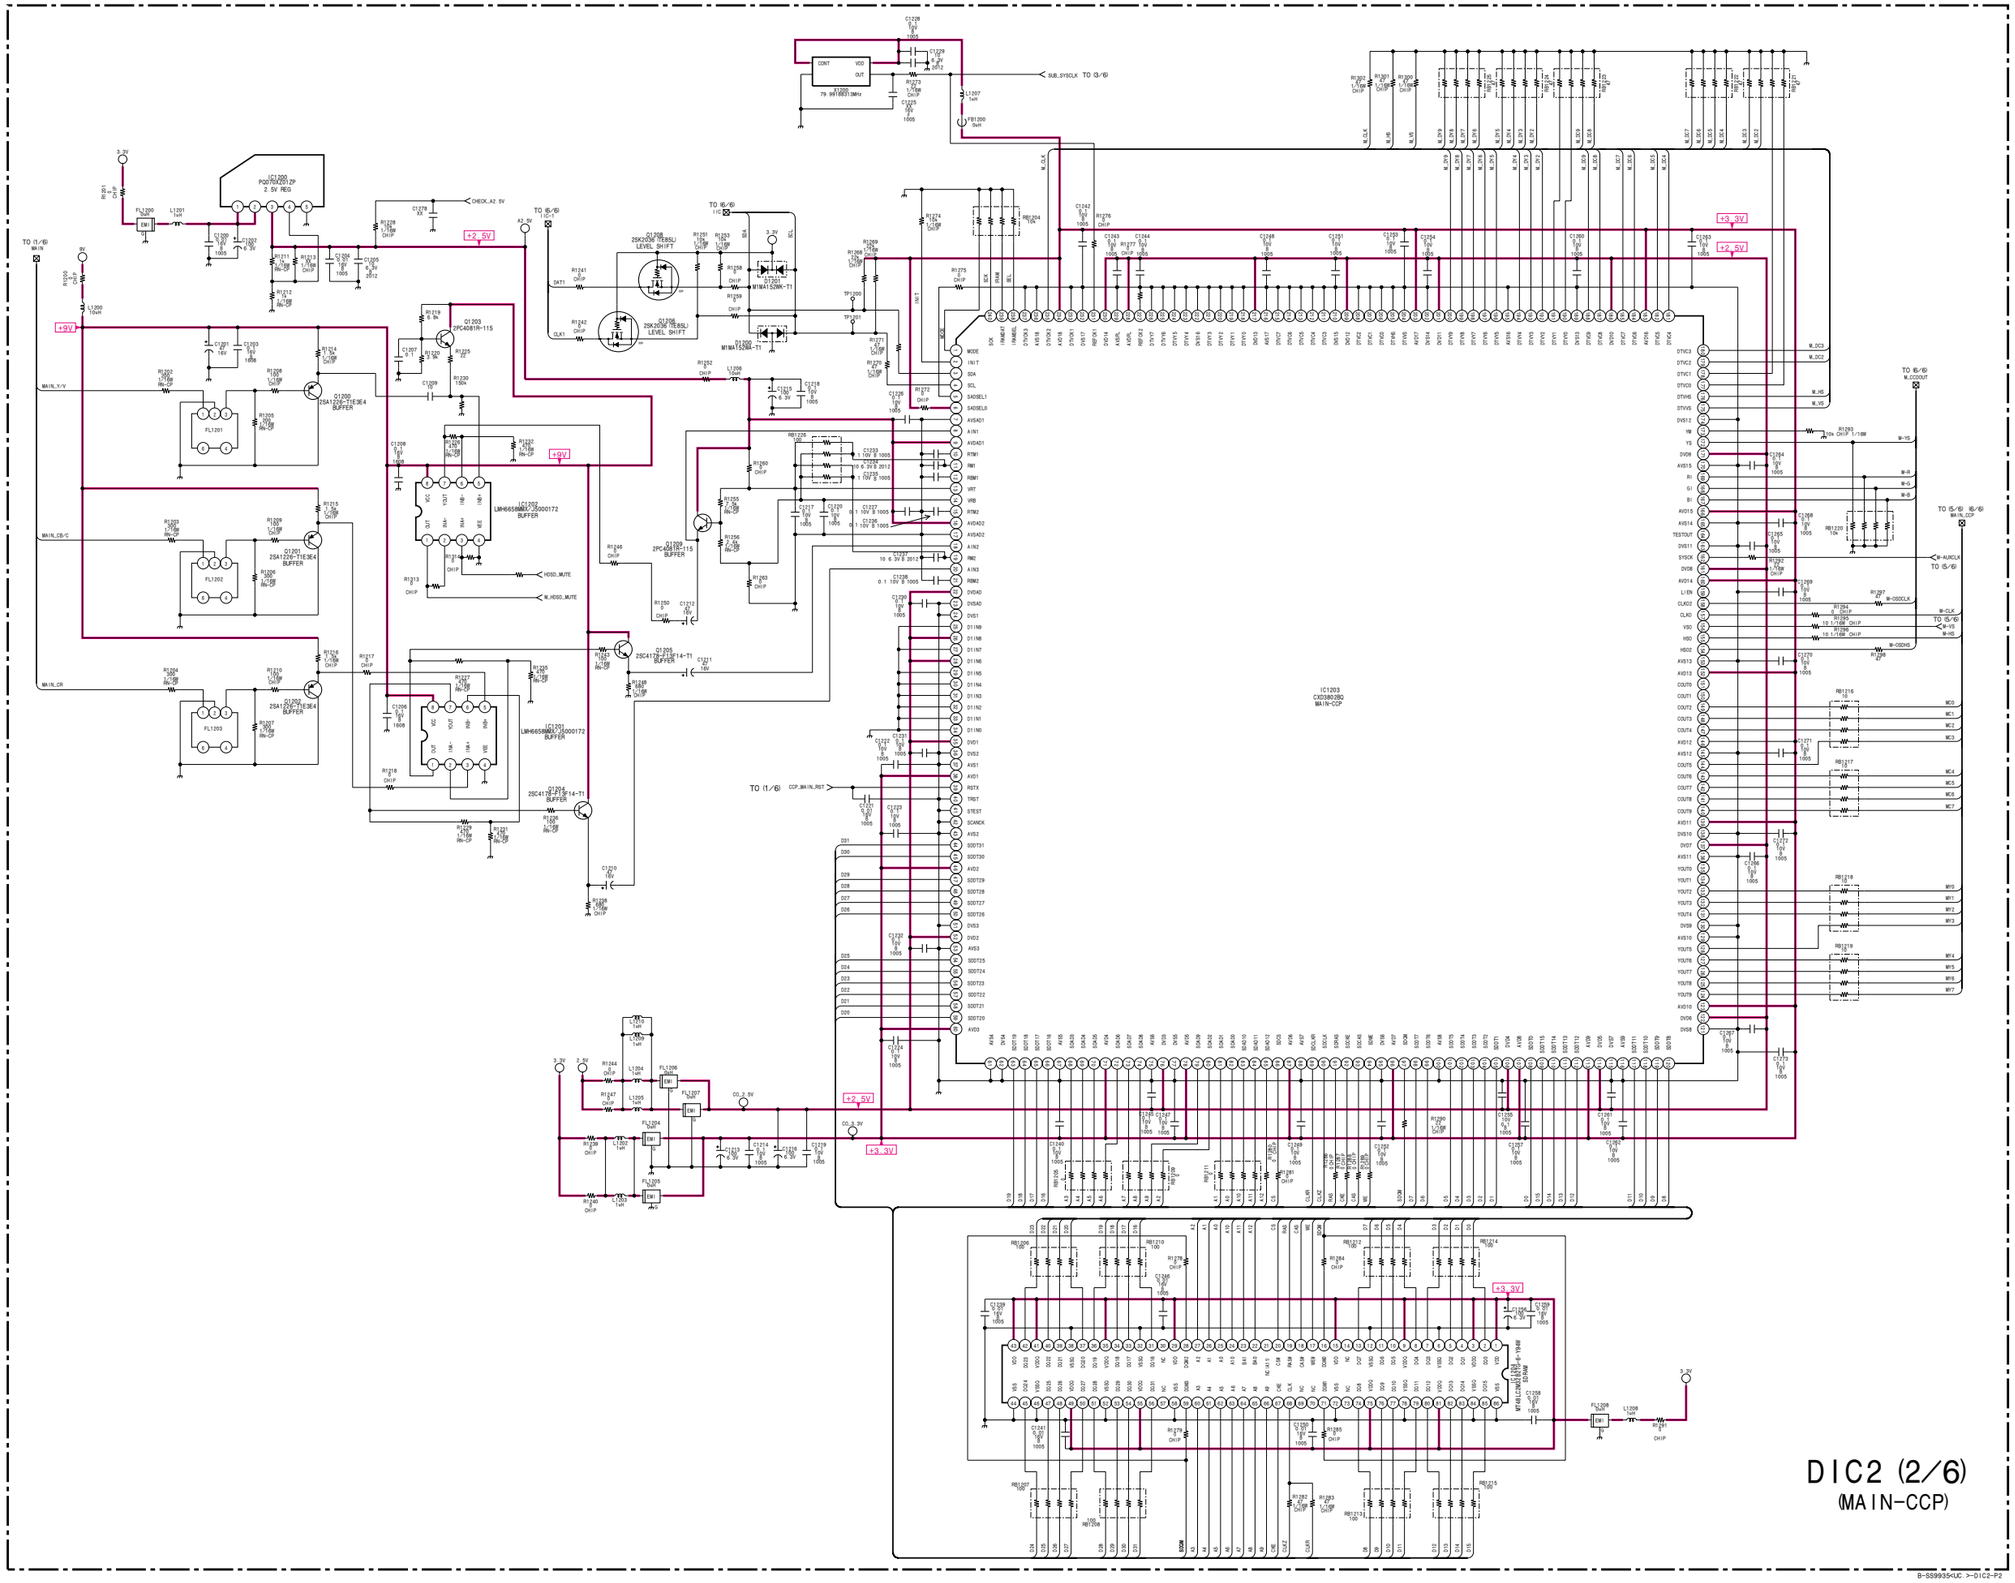
DIC2 (2/6)
(MAIN-CCP)
B-SS9935-UC >-DIC2-P2

DIC2 (3/6)
(SUB-CCP)

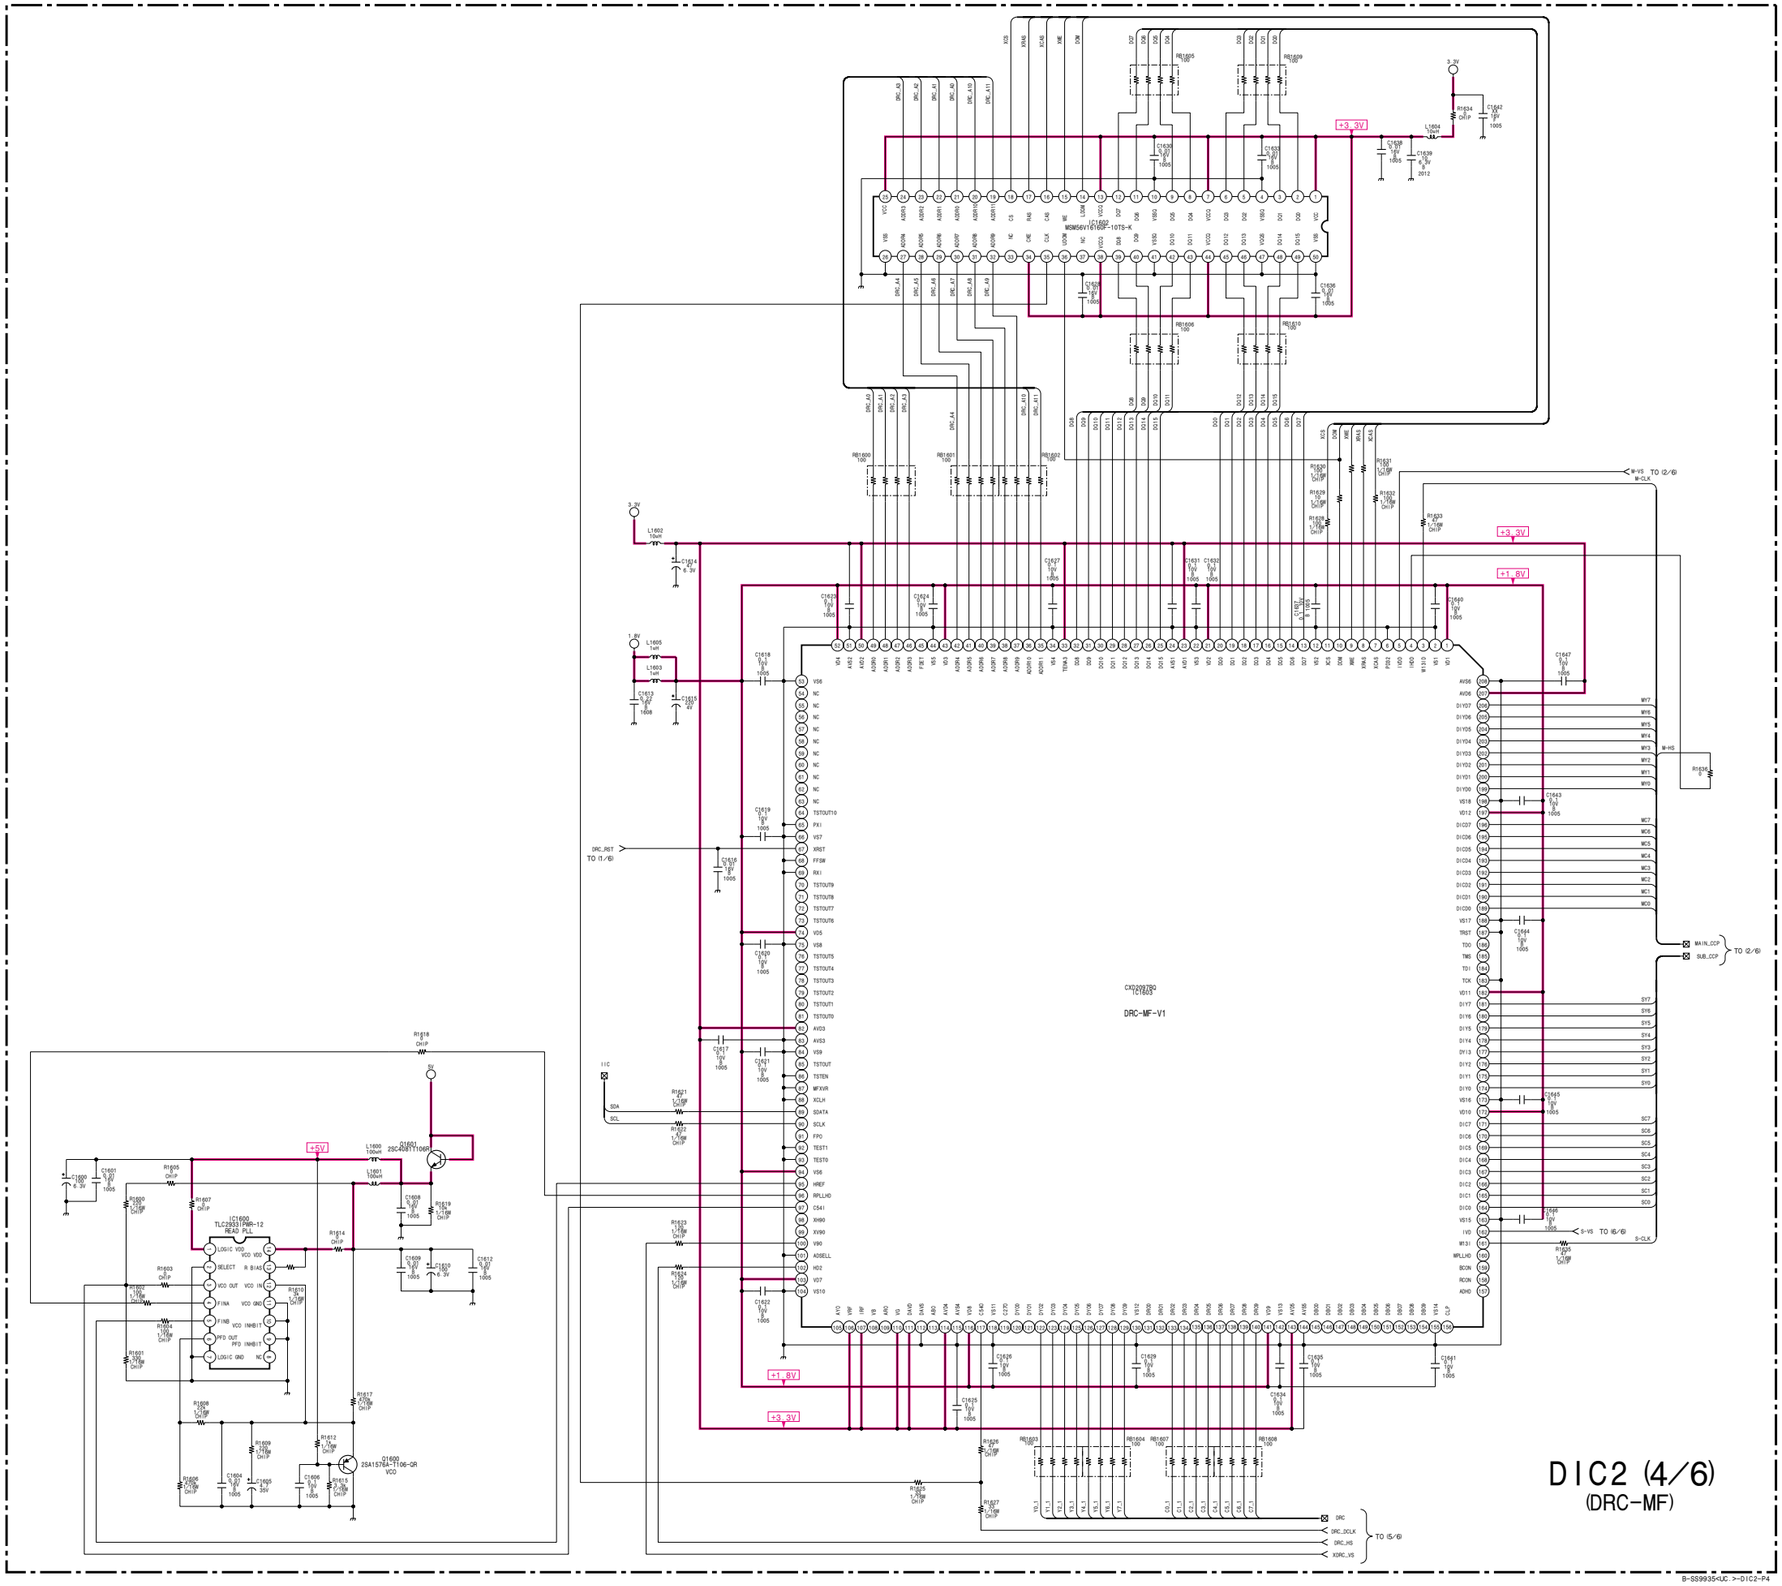
DIC2 (4/6)
(DRC-MF)
DRC-MF-V1
MSM56V16160F-10TS-K
TLC2933IPWR-12
2SA1576A-T106-QR
+3.3V
+1.8V
+5V
DRC_RST
TO I1/6
TO I5/6
TO I2/6
B-VS
B-CLK
B-HS
MAIN_CCP
SUB_CCP
B-SS9935<DIC 2>-DIC2-P4

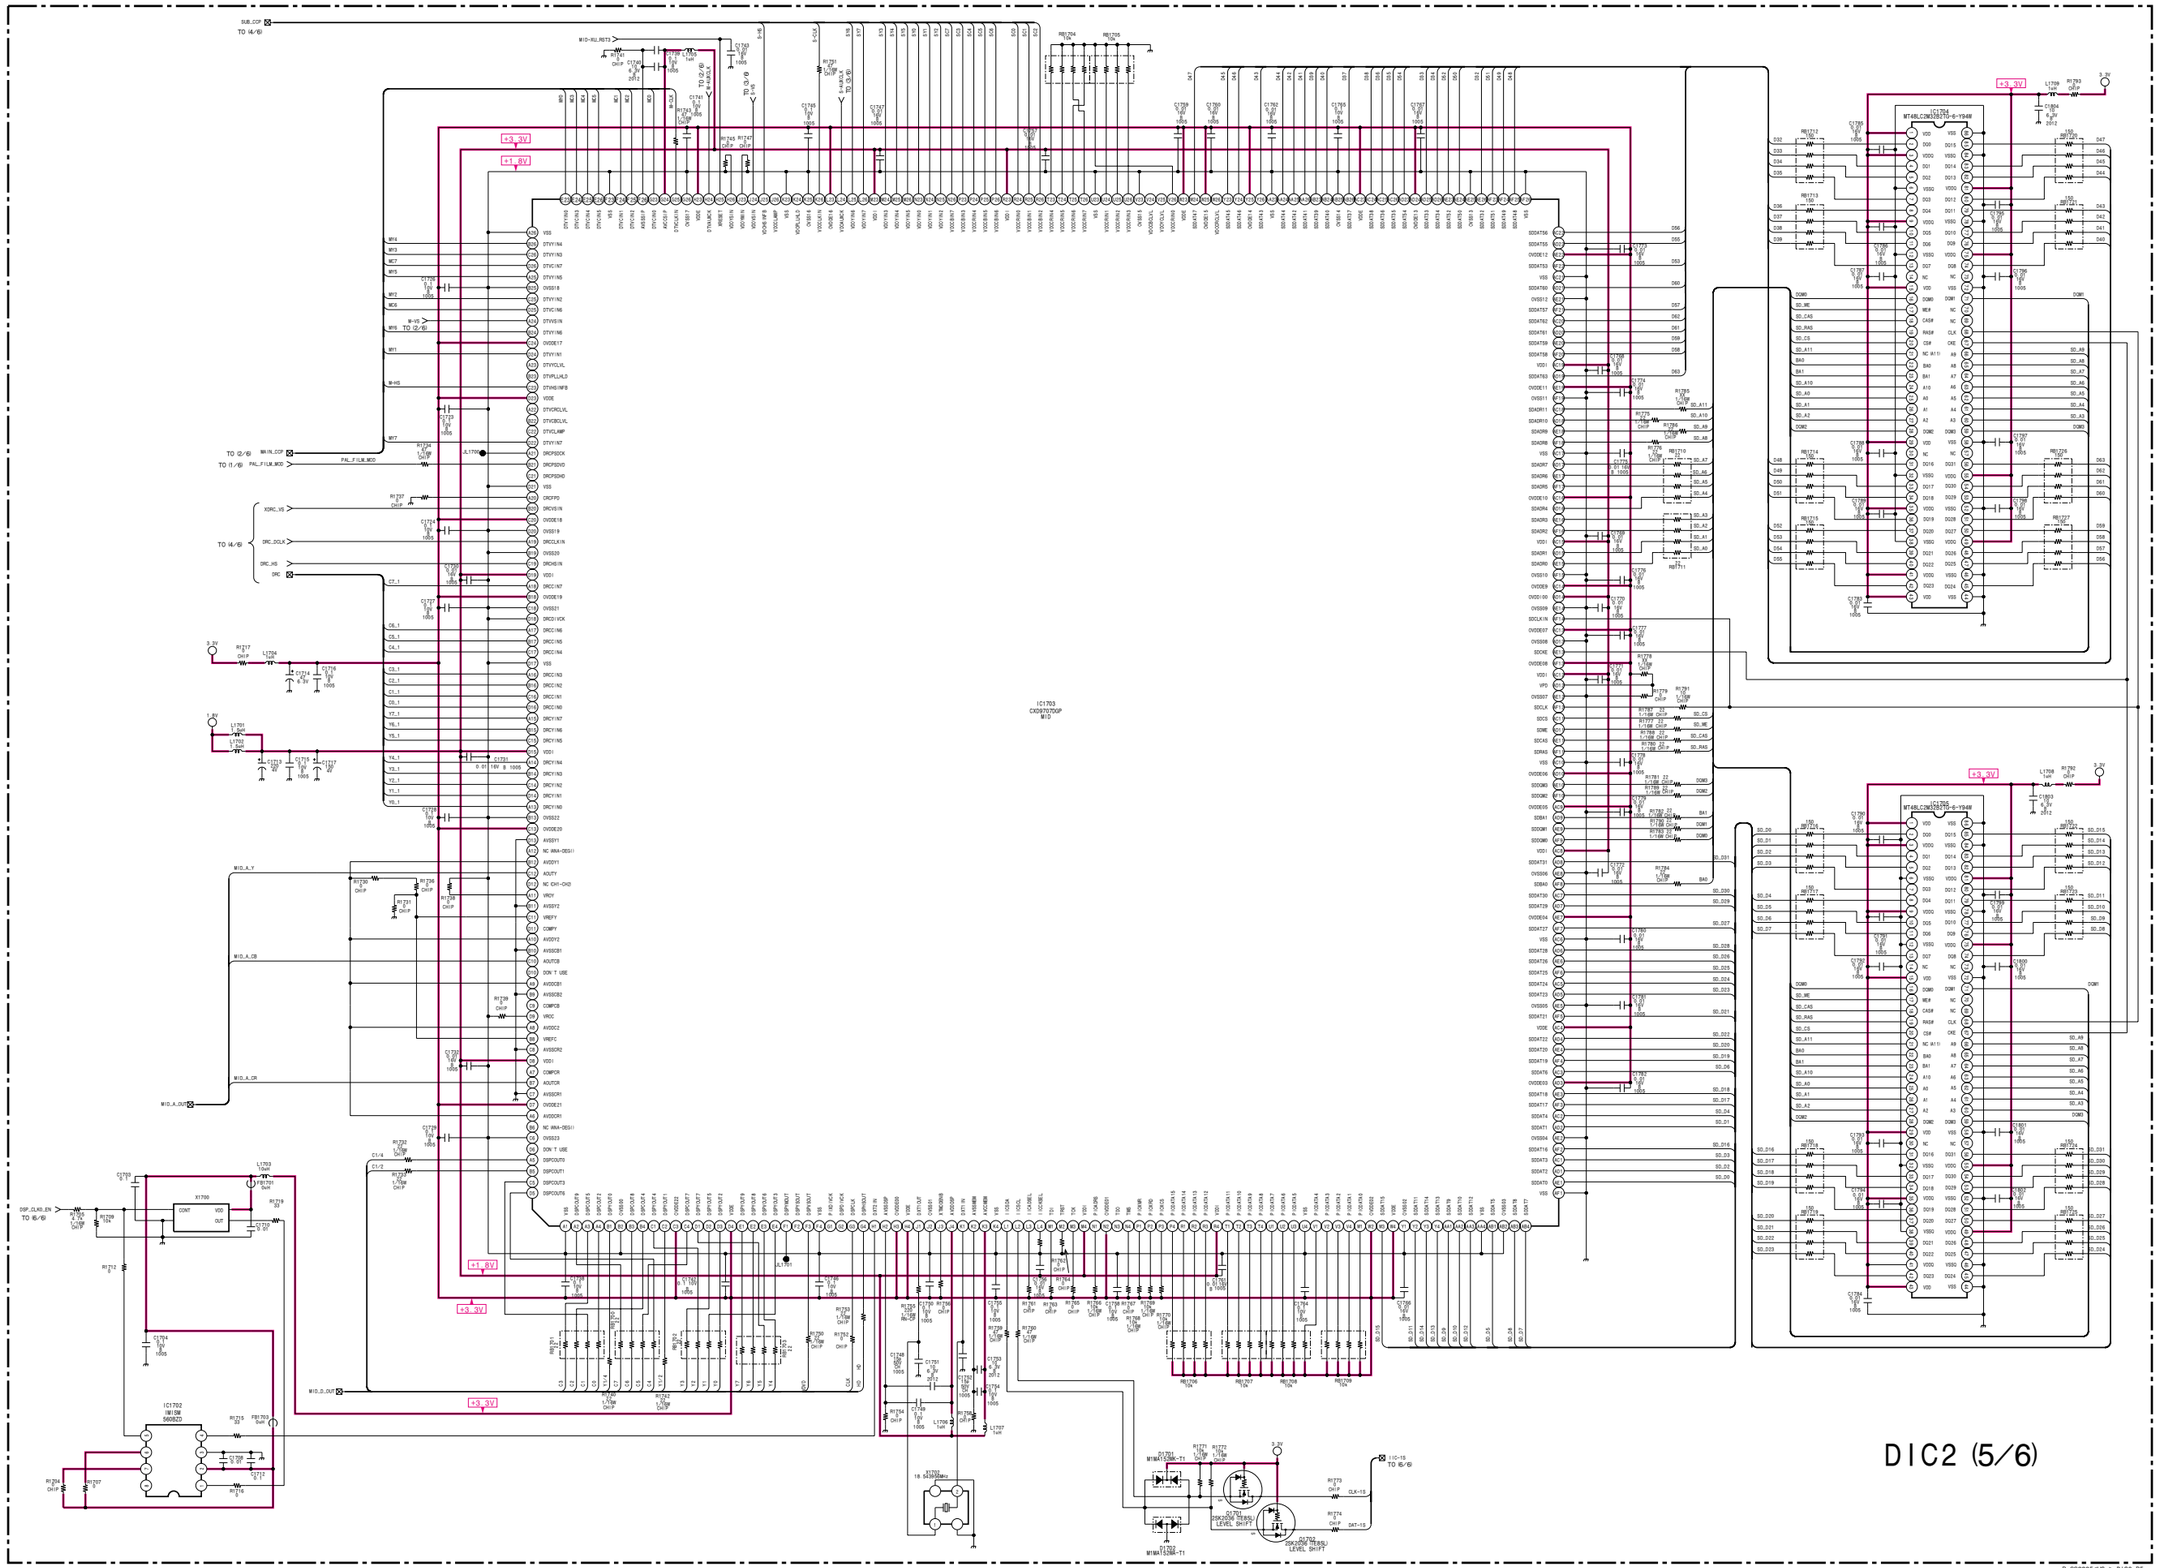
DIC2 (5/6)
IC1703
CXD97070GP
MIO
IC1702
M13S0
5605ZD
X1700
X1701
X1702
MT48LC2M32B2TG-6-YIT
MT48LC2M32B2TG-6-YIW
M1MA142WKT1
2SK3296 (TE85L)
LEVEL SHIFT
+3.3V
+1.8V
SUB_COP
TO I4/6
MAIN_COP
TO I2/6
TO I1/6
PAL_FILM_MOD
TO I4/6
XSRC_XS
SRC_DCLK
SRC_XS
SRC
MID_A_Y
MID_A_CB
MID_A_CR
MID_A_OUT
MID_D_OUT
DSP_CLKS_EN
TO I5/6
TO I2/6
TO I3/6
TO I5/6
TO I4/6
TO I2/6
TO I5/6
CLK-15
DAT-15
B-5599335<UC.>-DIC2-PS

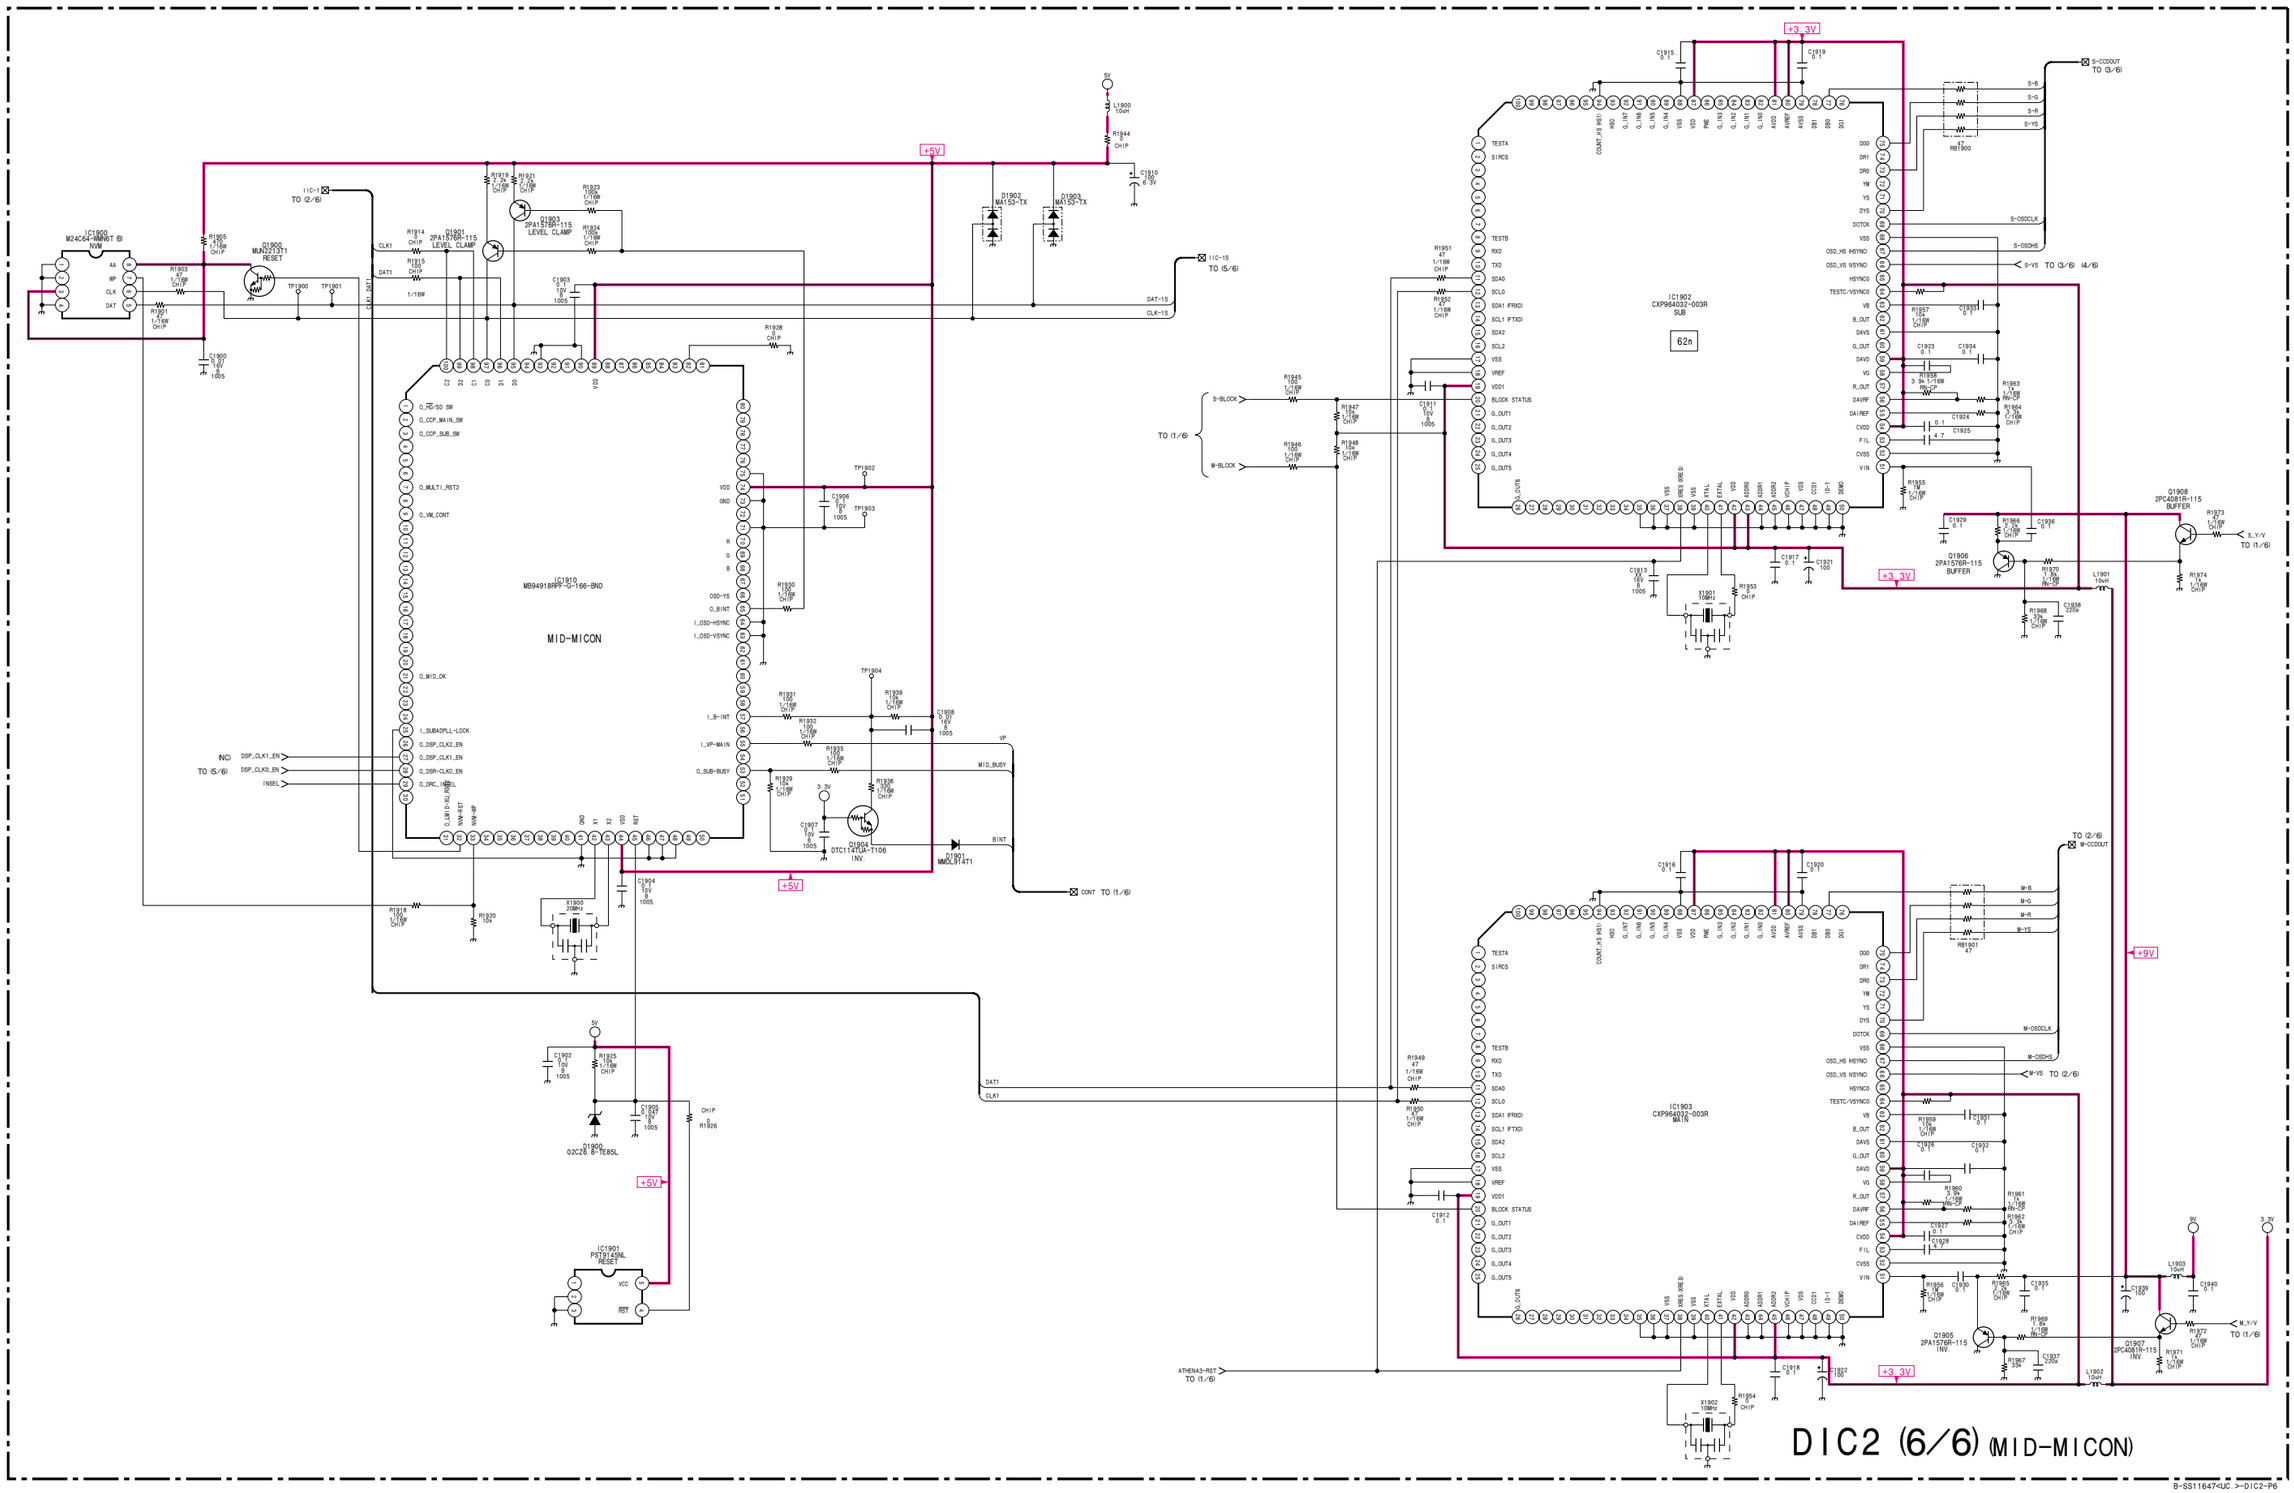
IC1900
M24C64-MMNGT ⑧
NVM
Q1900
MUN2213T1
RESET
Q1901
2PA1576R-115
LEVEL CLAMP
Q1903
2PA1576R-115
LEVEL CLAMP
D1902
MA153-TX
D1903
MA153-TX
IIC-1
TO (2/6)
IIC-15
TO (5/6)
DAT1
CLK1
+5V
5V
L1900
10uH
R1944
0
C1910
6.3V
IC1910
MB9418RPF-G-166-BND
MID-MICON
O_PS-SD SW
O_CCP_MAIN_SW
O_CCP_SUB_SW
O_MULTI_RST2
O_VM_CONT
O_MID_OK
I_SUBADPLL-LOCK
O_DSP_CLK2_EN
O_DSP_CLK1_EN
O_DSP-CLKO_EN
O_DRC_INSEL
C_LAP_P-FAIL
NVM-RST
NVM-WP
OSD-YS
O_BINT
I_OSD-HSYNC
I_OSD-VSYNC
I_B-INT
I_VP-MAIN
O_SUB-BUSY
DSP_CLK1_EN
DSP_CLK0_EN
INSEL
TO (5/6)
VP
MID_BUSY
BINT
CONT TO (1/6)
TP1902
TP1903
TP1904
Q1904
DTC114TUA-T106
INV.
D1901
MMDL914T1
X1900
20MHz
IC1901
PST9145NL
RESET
Q1900
02CZ8.8-TE85L
CHIP
R1926
IC1902
CXP964032-003R
SUB
62n
TESTA
SIRCS
TESTB
RXD
TXD
SDA0
SCL0
SDA1 IFRXDI
SCL1 IFTXDI
SDA2
SCL2
VSS
VREF
VDD1
BLOCK STATUS
G_OUT1
G_OUT2
G_OUT3
G_OUT4
G_OUT5
DGO
DR1
DR0
YM
YS
DYS
DOTCK
OSD_HS HSYNC
OSD_VS VSYNC
HSYNC0
TESTC-/VSYNC0
VB
B_OUT
DAVS
G_OUT
DAVD
VG
R_OUT
DAVRF
DAIREF
CVDD
F1L
CVSS
VIN
S-BLOCK
M-BLOCK
TO (1/6)
+3.3V
X1901
16MHz
S-CCDOUT
TO (3/6)
S-VS TO (3/6) (4/6)
Q1908
2PC4081R-115
BUFFER
Q1906
2PA1576R-115
BUFFER
S_Y-Y
TO (1/6)
IC1903
CXP964032-003R
MAIN
M-CCDOUT
TO (2/6)
M-VS TO (2/6)
+9V
9V
3.3V
Q1905
2PA1576R-115
INV.
Q1907
2PC4081R-115
INV.
M_Y-Y
TO (1/6)
ATHENA3-RST
TO (1/6)
X1902
10MHz
DIC2 (6/6) (MID-MICON)
B-SS11647<UC:>-DIC2-P6

(4) Schematic Diagram of H1 and H2 Boards

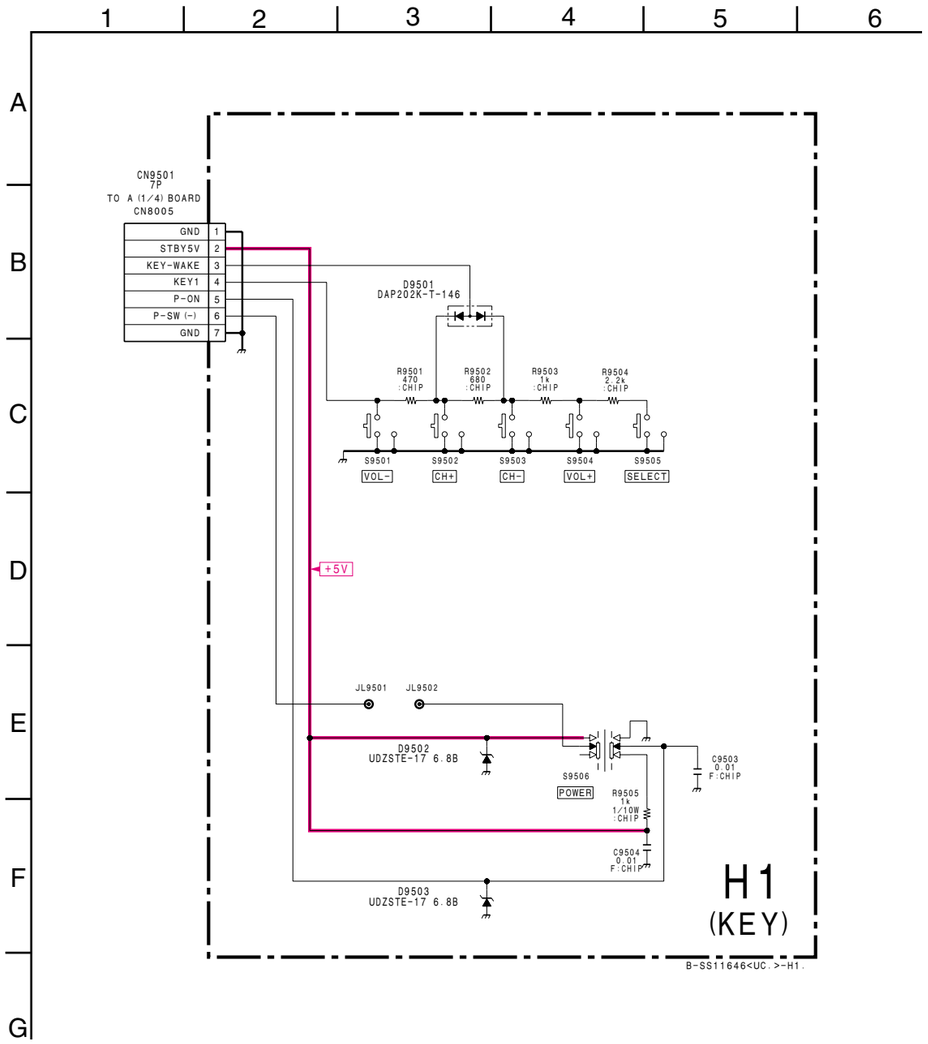

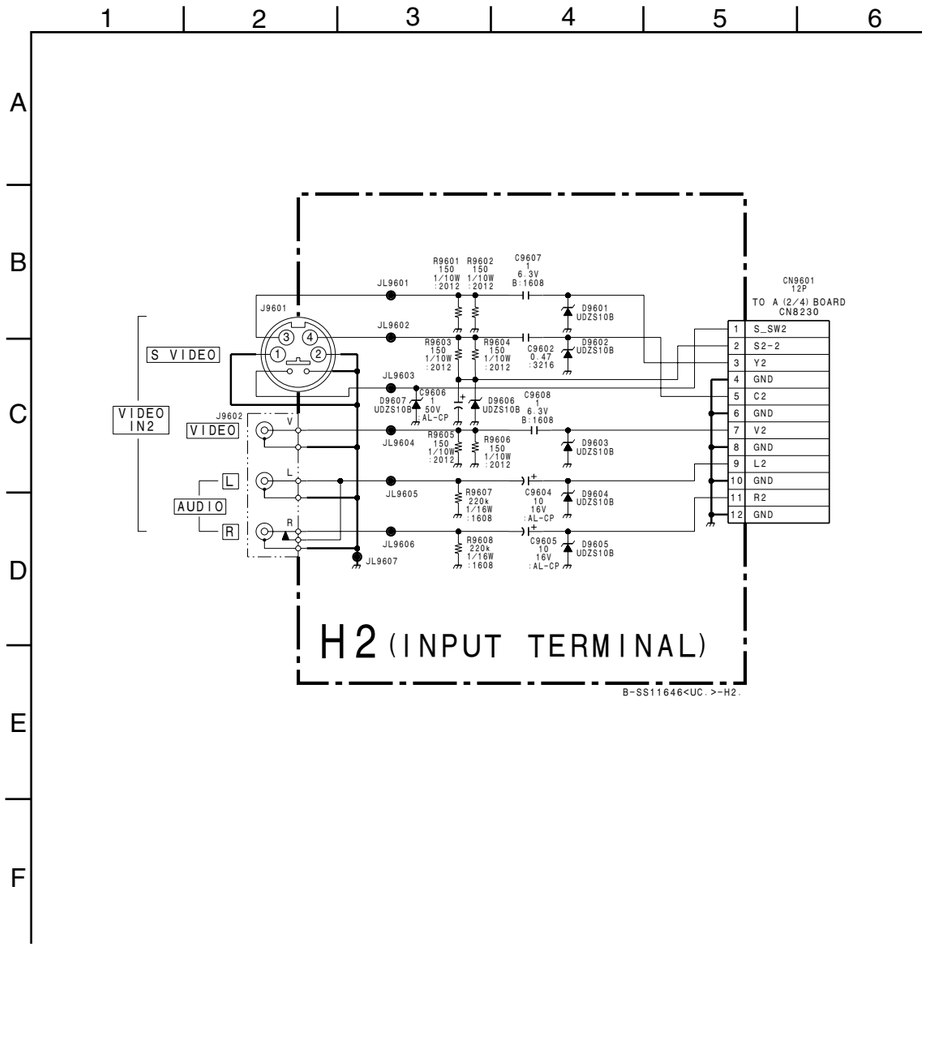

(5) Schematic Diagram of H3 and H4 Boards

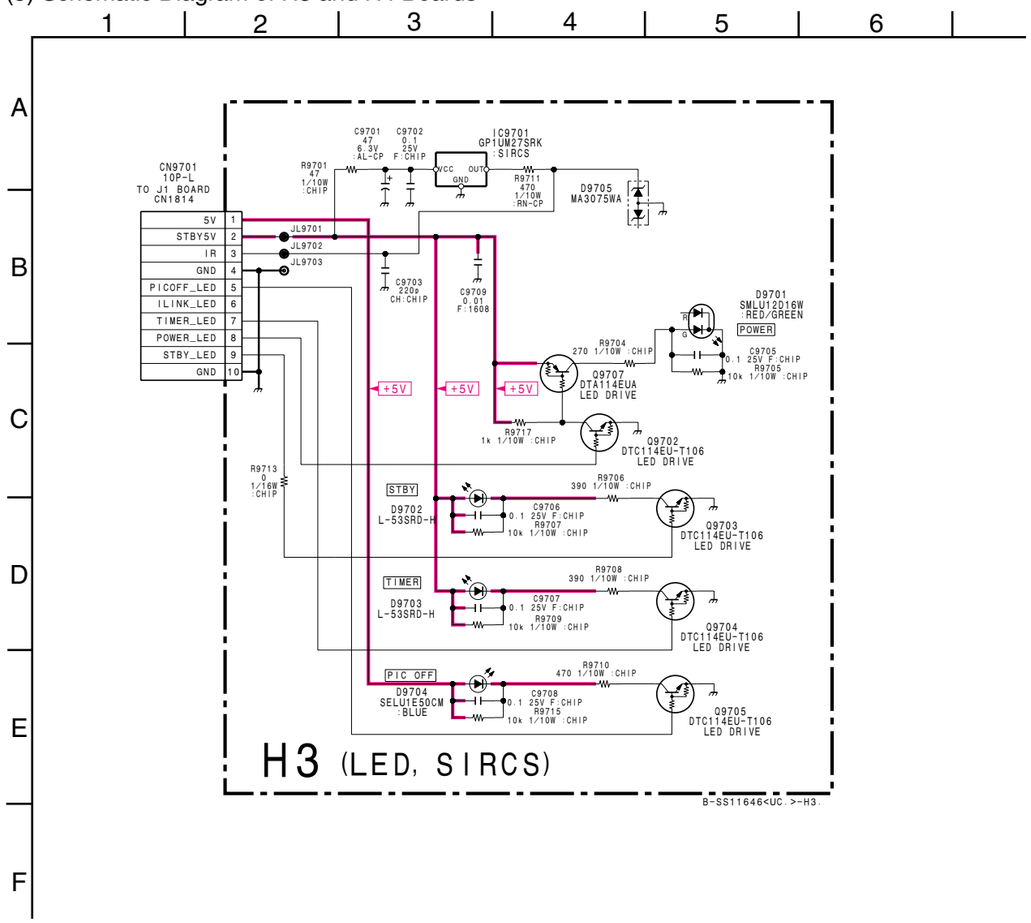

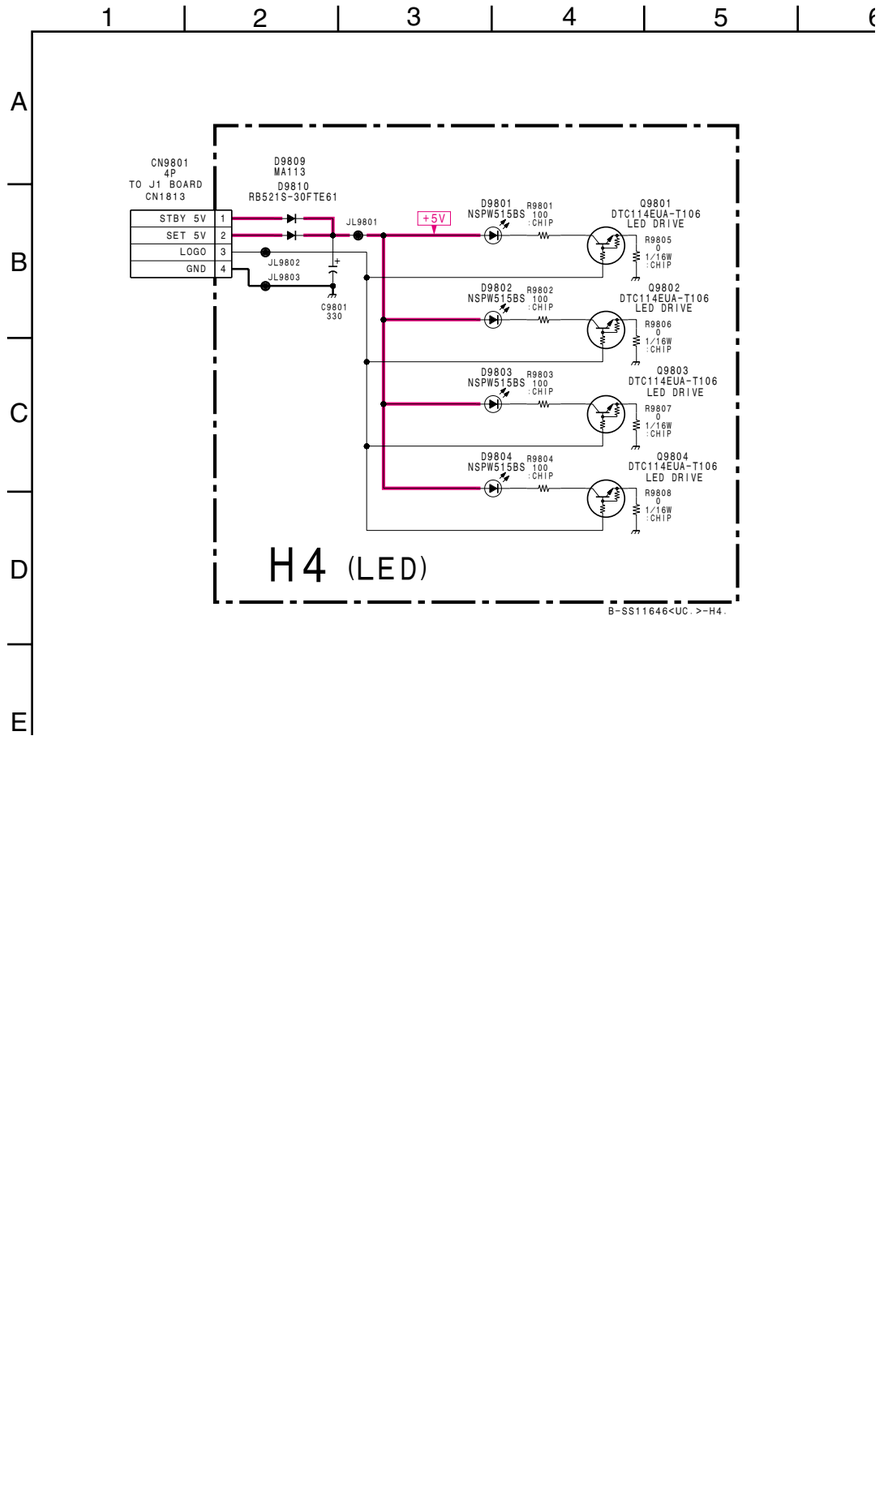

(6) Schematic Diagram of HM Board

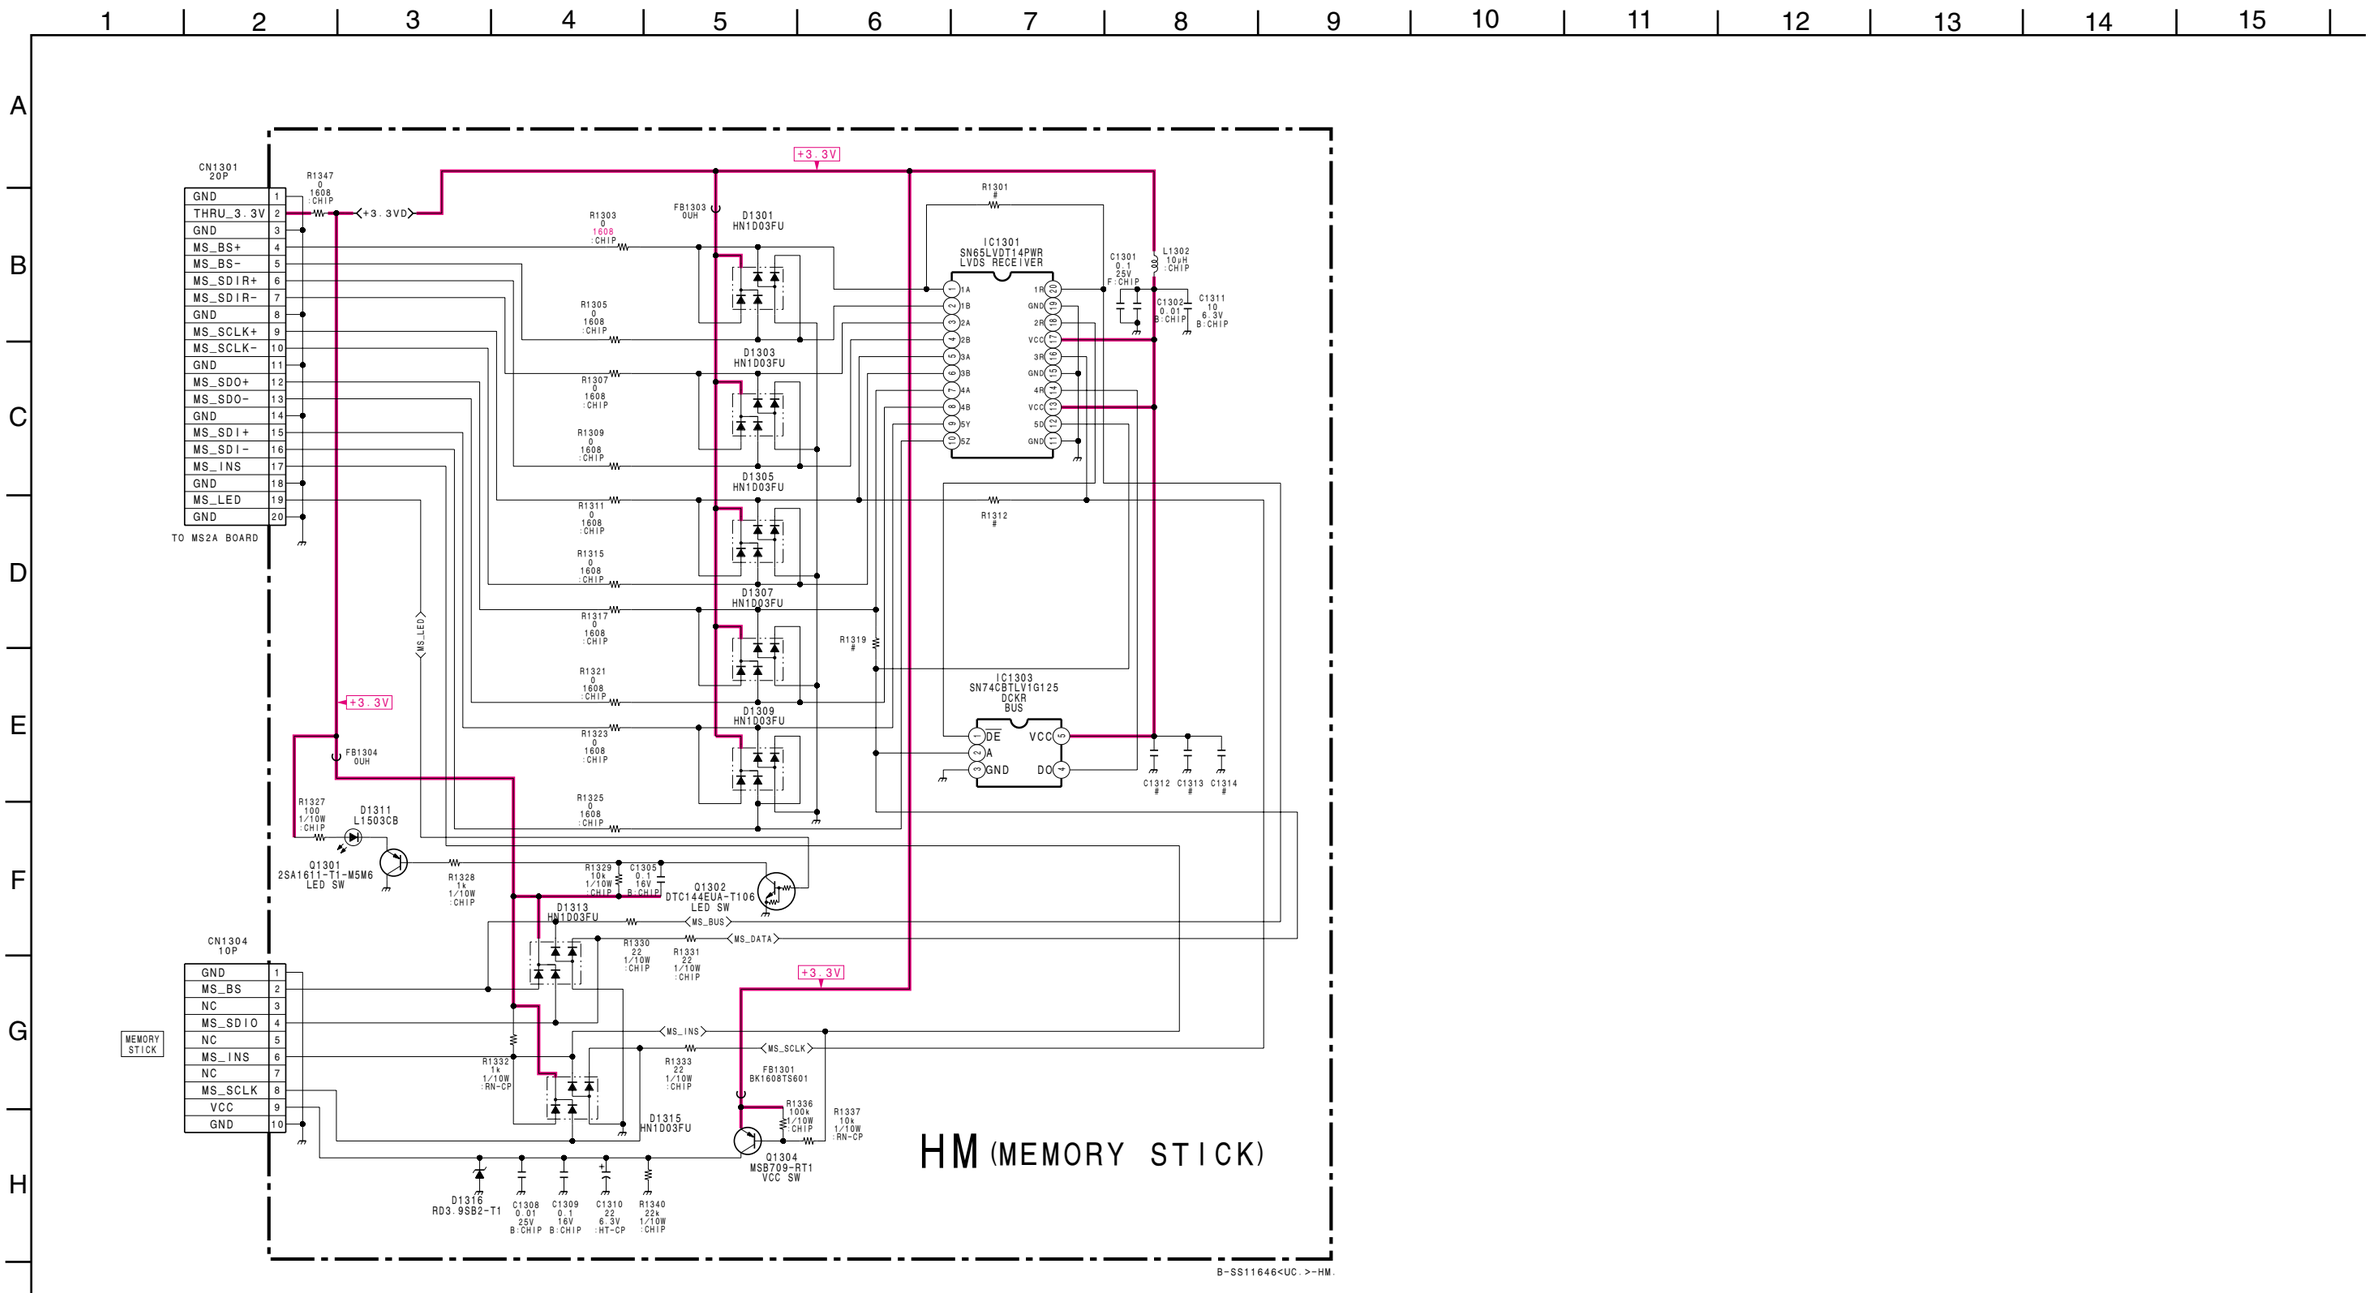

B-SS11646<UC.>-HM.

(7) Schematic Diagram of J1 Board

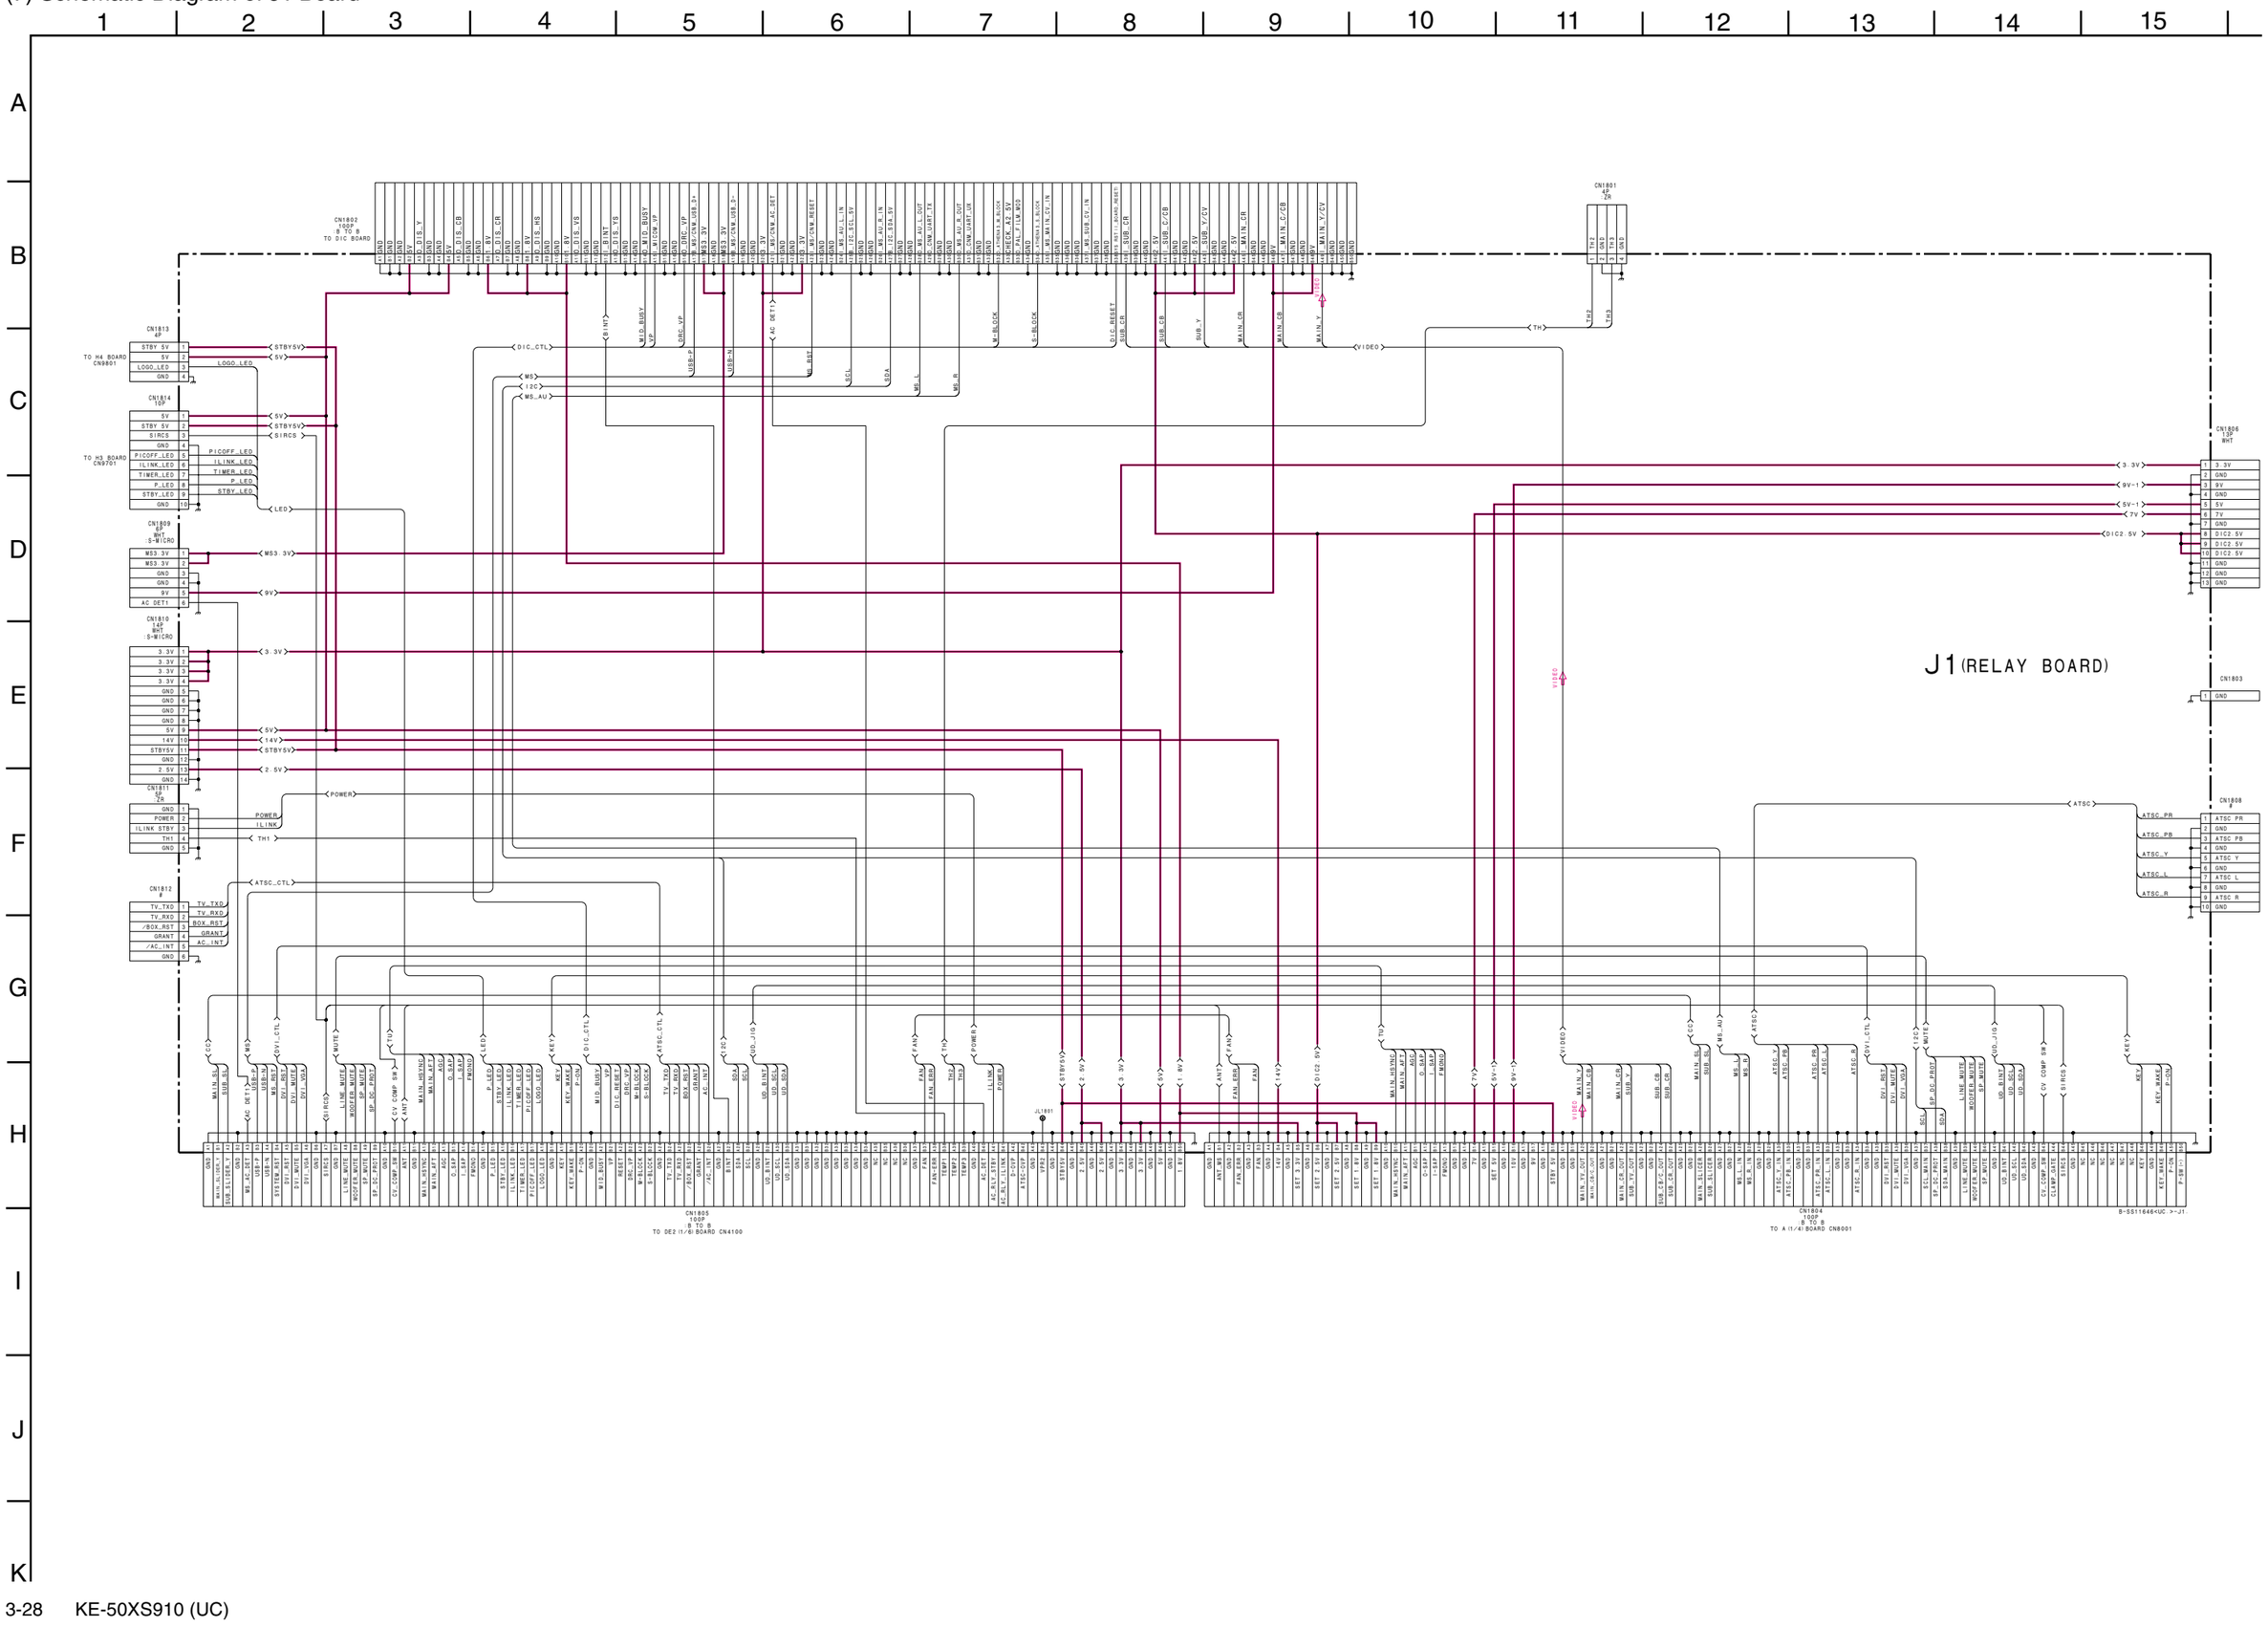
J1 (RELAY BOARD)
CN1802 100P B TO B TO DIC BOARD
CN1801 4P ZR
CN1813 4P TO H4 BOARD CN9801
CN1814 10P TO H3 BOARD CN9701
CN1809 6P 8HT :S-MICRO
CN1810 14P 8HT :S-MICRO
CN1811 5P ZR
CN1812 6P
CN1806 13P 8HT
CN1803 1P
CN1808 8P
CN1805 100P B TO B TO DE2 (1/6) BOARD CN4100
CN1804 100P B TO B TO A (1/4) BOARD CN8001
B-SS11646<UC>-J1

(8) Schematic Diagram of J2 Board

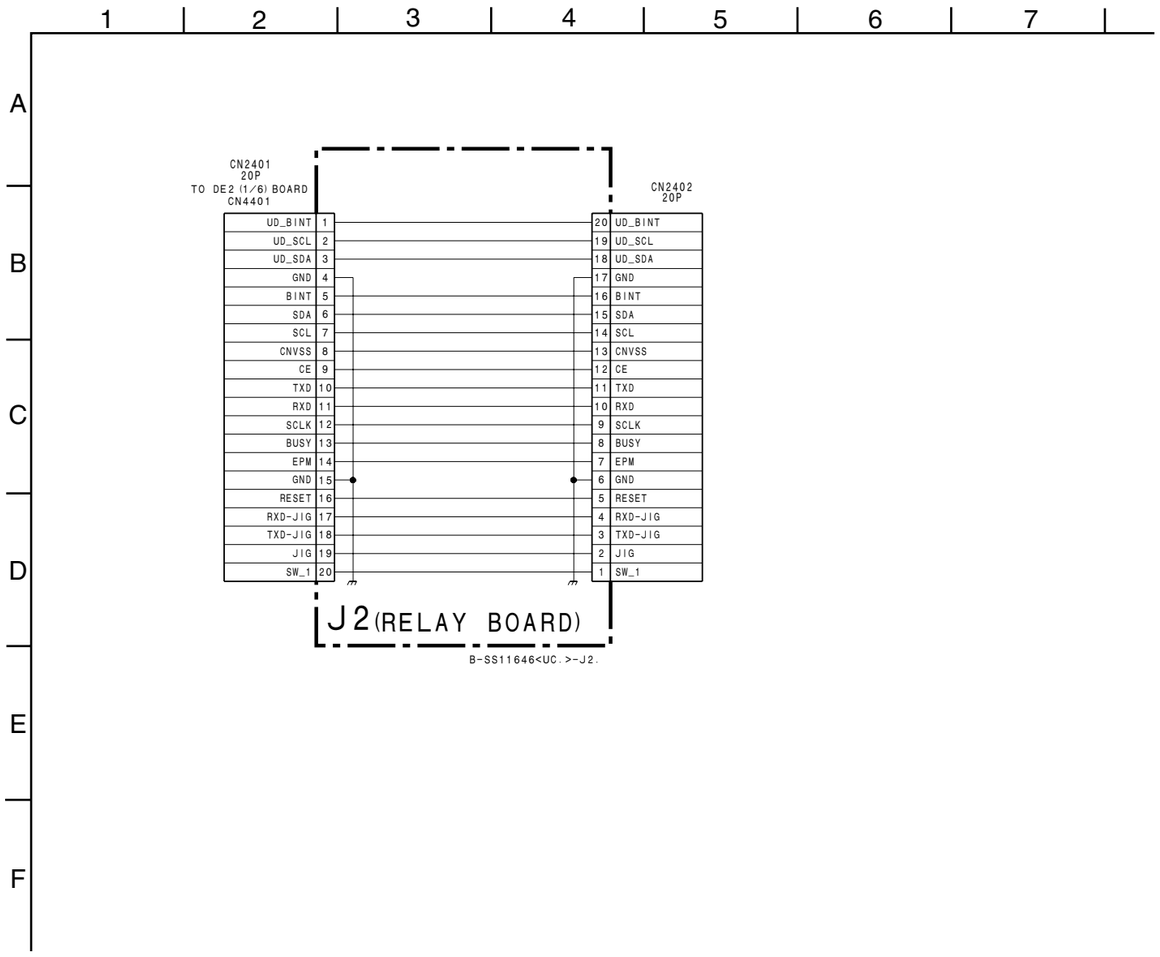

(9) Schematic Diagram of K Board

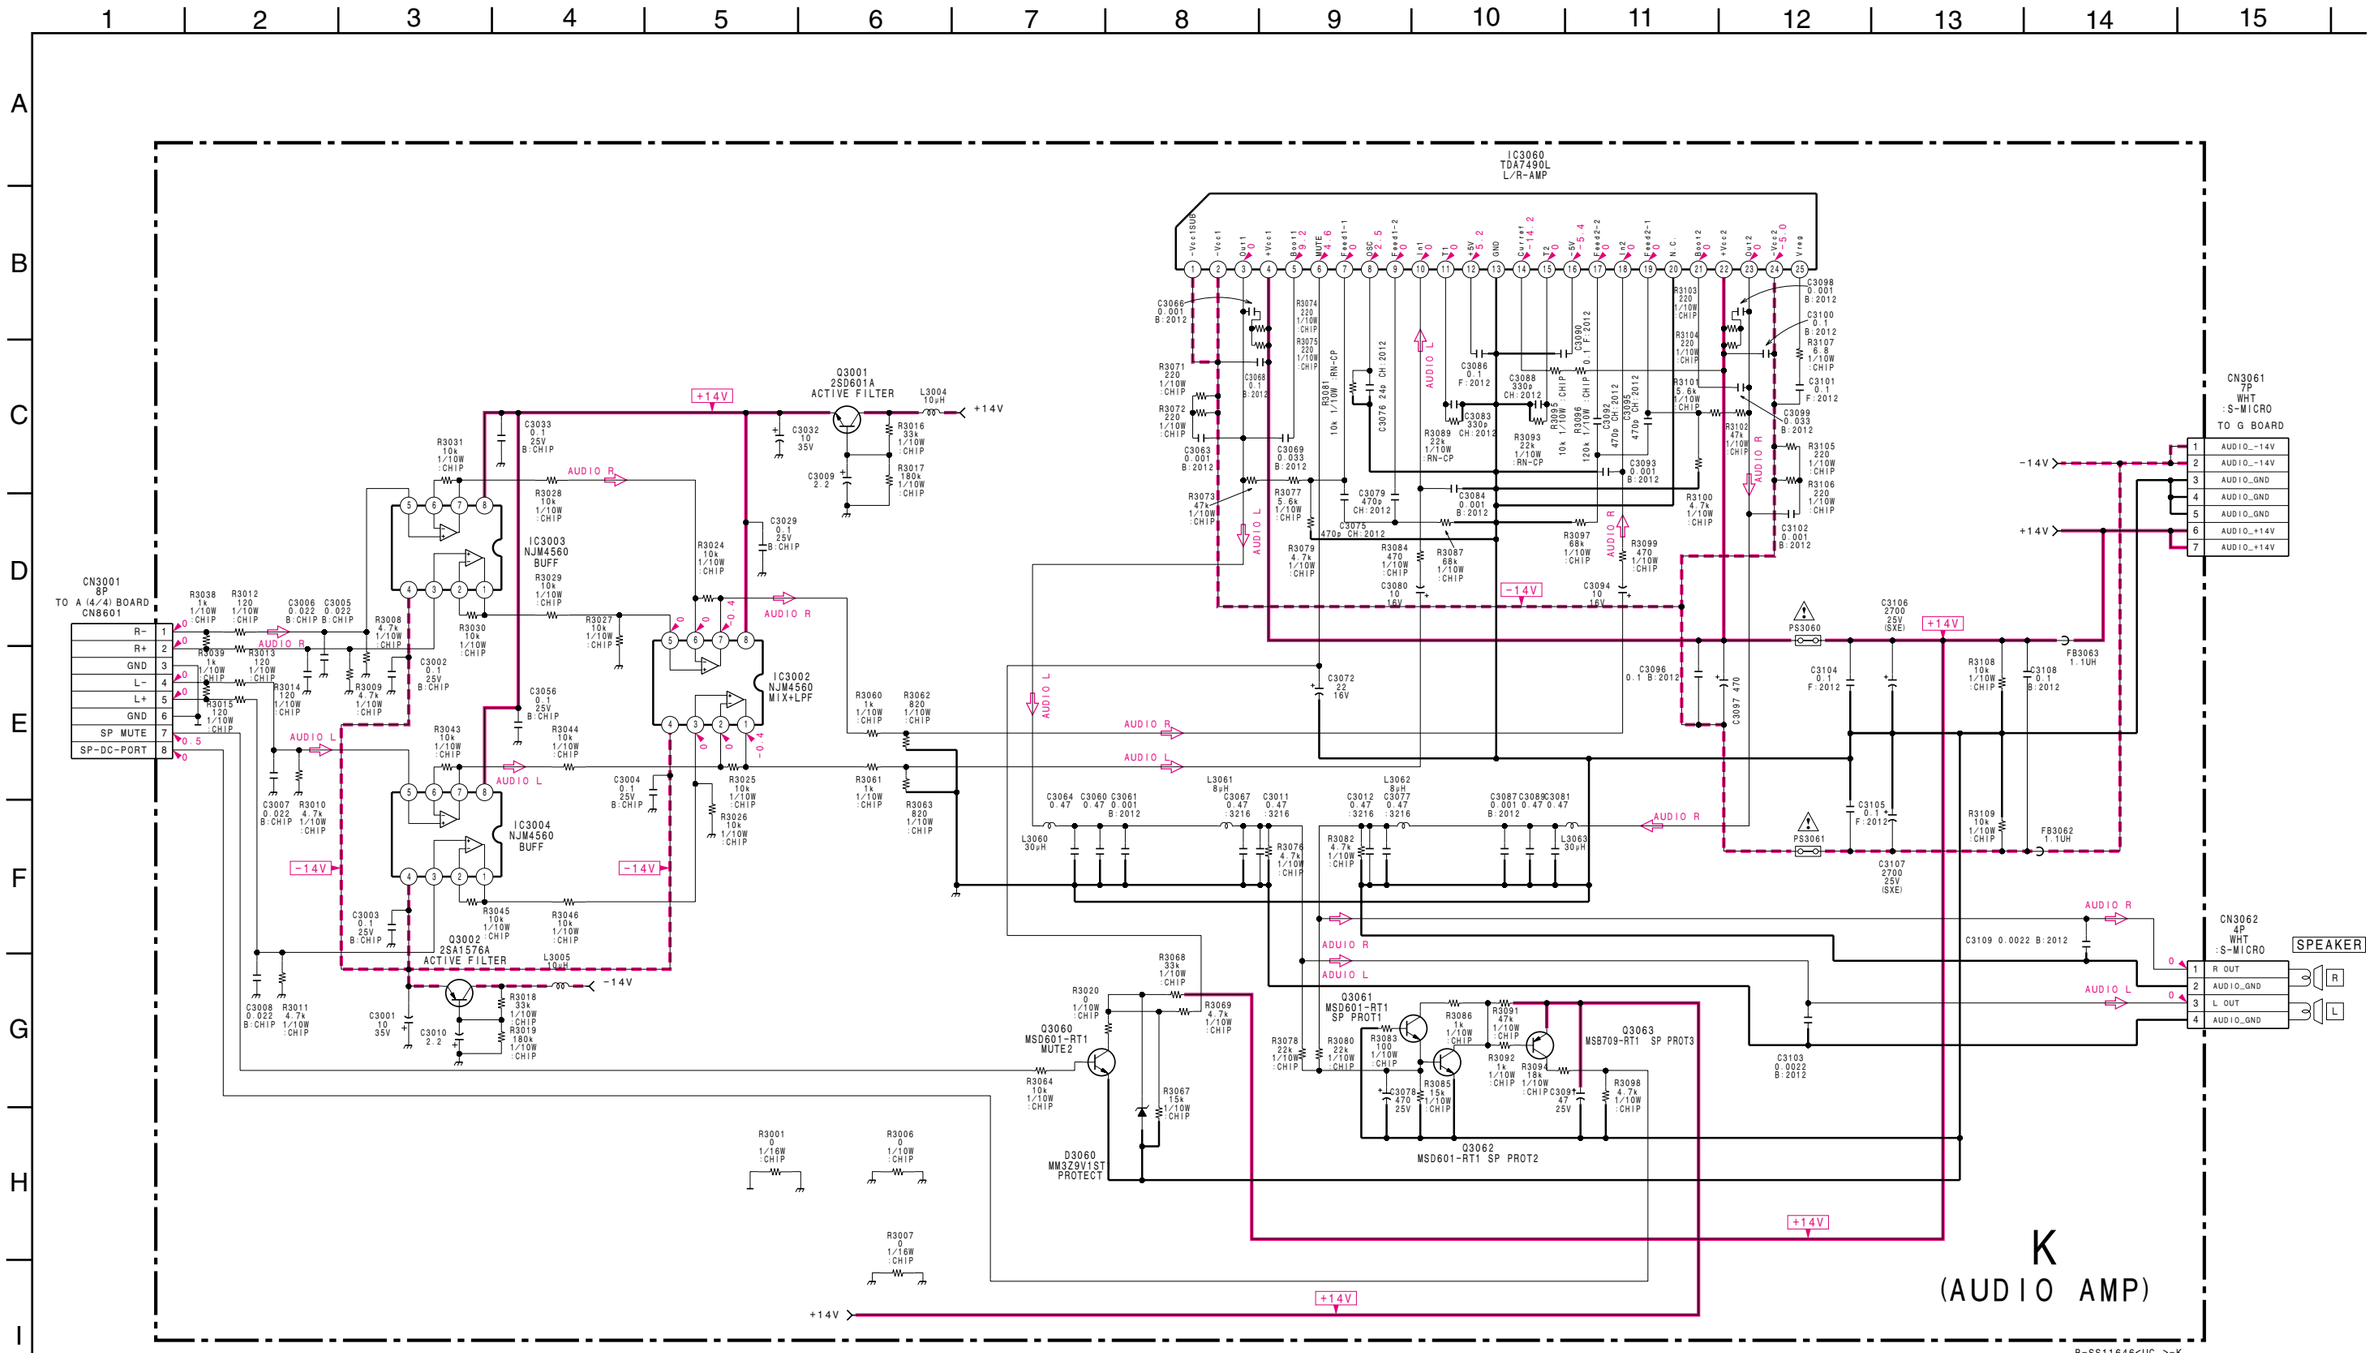

(10) Schematic Diagram of UD Board

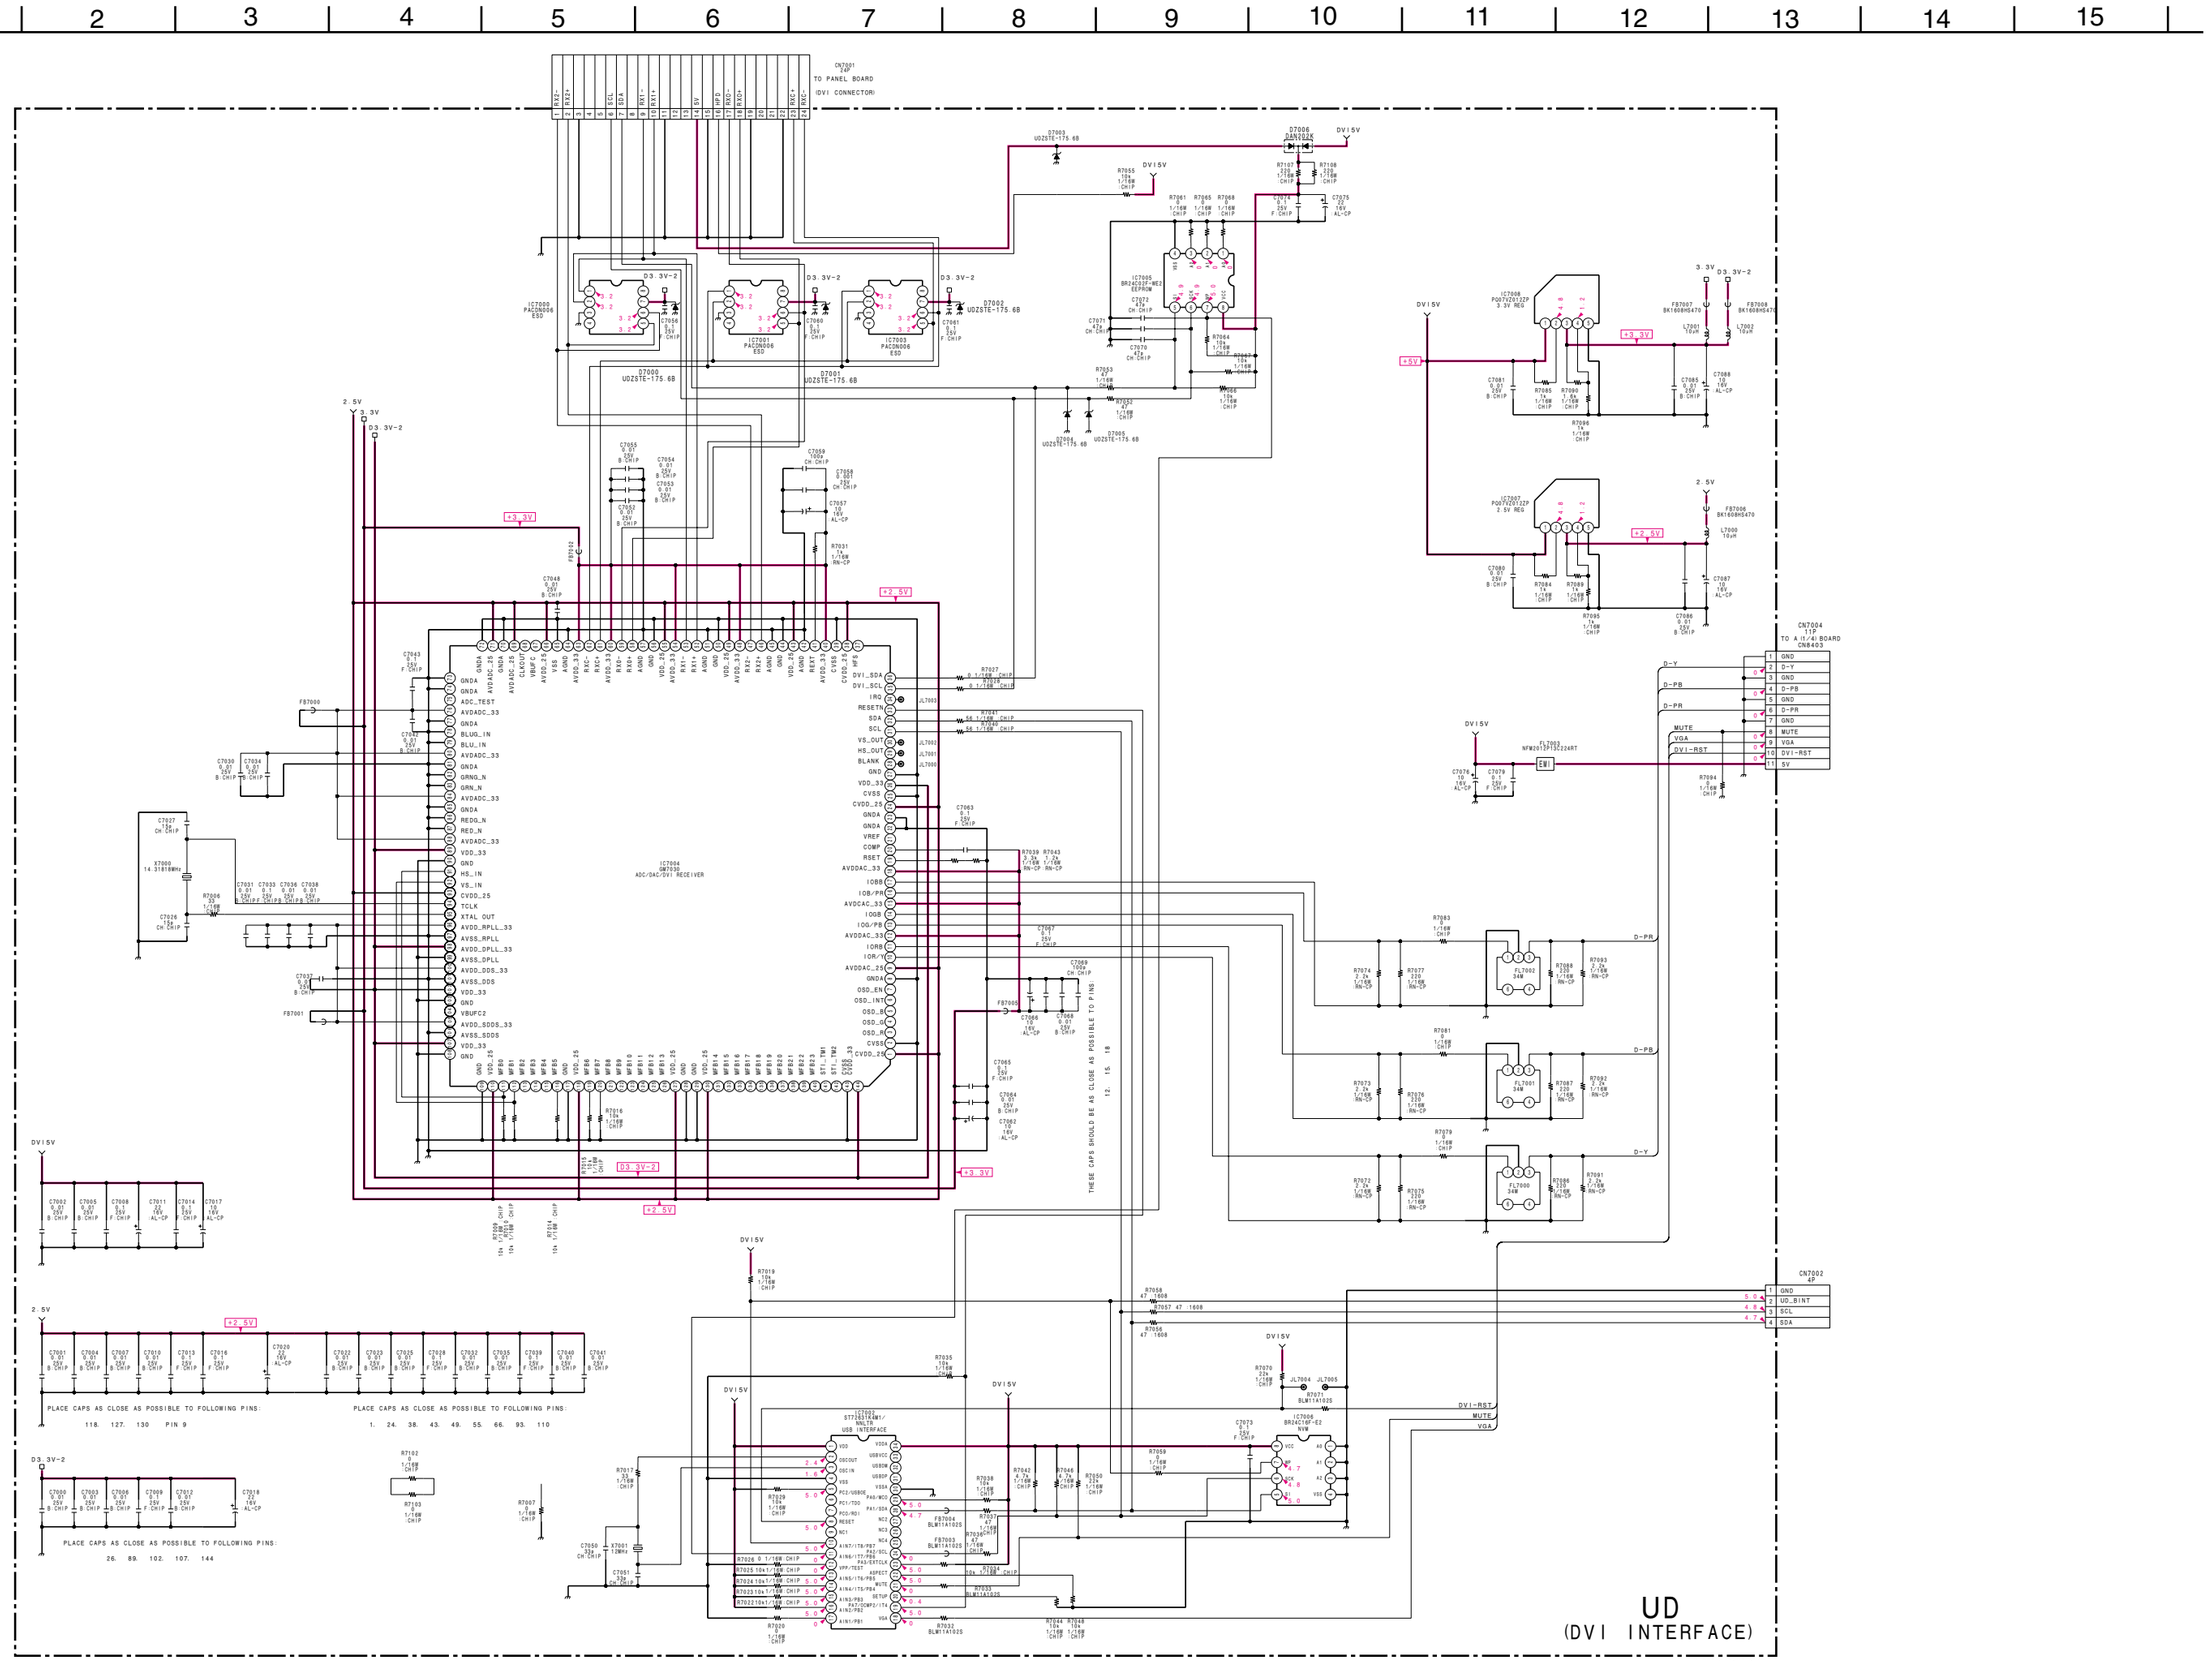

3-5. SEMICONDUCTORS

IC

AK4351VT
AK4352VT-E2
AK5380VT-E2
CY27027ZCT
M52055FP
MAX1644EAE-TG074
MAX1809EEE+TG068



16Pin SOP

BA05FP-E2
BA09FP-E2
BD4729GTR
BD4741G-TR
NJM2870F18(TE2)
PST3629NR
PST9145NL
R3112N221A-TR-FA
SN74CBTLV1G125DCKR
TC7SA00FU(TE85R)
TC7SET32FU(TE85R)
TC7SH04FU
TC7SH04FU-TE85R
TC7SZ02FU(TE85R)



5Pin CHIP

BA18BC0FP-E2
NJM2391DL1-33(TE1)



BR24C02F-WE2
BR24C16F-E2
LMH6658MMX/J5000172
LMH6658MMX/NOPB
M24128-BWMN6T
M24128-BWMN6T(A)
M24C02-WMN6T(A)
M24C64-WMN6T(B)
MM1096AFF
NJM4558E(TE2)
NJM4558V-TE2
NJM4560M
NJM4560M-TE2
PACDN006S
TC4W53FU
TC4W53FU(TE12R)
TC7WH74FK(TE85R)



8Pin SOP

CXA2069Q
NJW1149

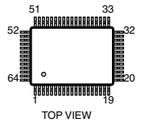

CXA2171AQ-T6



48Pin QFP

CXD2097BQ



208Pin QFP

CXD3802BQ
CXD9690Q



240Pin QFP

GM7030-H



144Pin QFP

HD74LV4066ATEL
SN74LV125APWR
SN74LV4066APWR
TC74LCX125FT(EL)
TC74LCX74FT(EL)
TC74LVX125FT(EL)
TLC2933IPWR-12



14Pin SOP

K4D263238F-UC50T
M306V7FHFP-100
M306V7FHFP-109
MB94918RPF-G-166-BND

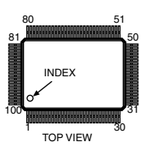

K4S643232F-TC60T
K4S643232F-UC60T
MT48LC2M32B2TG-6-Y94W



86Pin SOP

L88M05T-FA-TL



MB88141APF-ER



24Pin SOP

MB91306RPFV-G-BND-E1
MB91307RPFV-G-BND-E1



120Pin QFP

MBM29LV160BE-90TN-
MS2FUV101
MBM29LV800TA-70PFTN-DE100



48Pin SOP

MSM56V16160F-10TS-K



50Pin SOP

MT48LC8M16A2TG-75-Y95W



54Pin SOP

M306V3FGFP-507
MB94P918PF-G-166A



100Pin QFP

NJU26103FR1



32Pin QFP

PQ070XZ01ZP
PQ07VZ012ZP
PQ20WZ1U



SN65LVDT14PWR
SN65LVDT41PWR
TC74LCX273FT(EL)



20Pin SOP

ST72631K4M1/NNLTR



34Pin SOP

TDA7490L

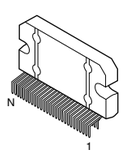

THC63LVDF84B-T



56Pin SOP

THC63LVD103



64Pin QFP

TK11819MTL



6Pin CHIP

TRANSISTOR

DTA114EKA-T146
DTA114EUA-T106
DTA143EK
DTA143EKA-T146
DTA144EE-TL
DTC114EUA-T106
DTC143TKA-T146
DTC144EE-TL
DTC144EUA-T106
MSB1218A-RT1
MSB709-RT1
MSD1819A-RT1
MSD601-RT1
MUN2213T1
PDTC144EK-115
UN2213
2PA1576R-115
2PB709AR-115
2PC4081R-115
2PD601AR-115
2SA1162-G
2SA1226-E4
2SA1226-T1E3E4
2SA1576A-T106-QR
2SA1576A-T106-QR
2SA1611T1-M5M6
2SB709A-QRS-TX
2SC4081-R
2SC4081T106R
2SC4178-F13F14-T1
2SC4178-F14
2SC4617R
2SC4617TL-QR
2SD601A-QRS-TX
2SD601A-Q-TX
2SD601A-R-TX

DTC114EU
DTC114TUA-T106



HN1B01FU-TE85R

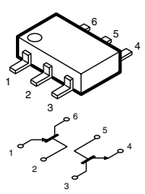

SSM6N15FU(TE85R)



2SK2036(TE85L)



DIODE

BAS316-115
MM3Z3V9ST1
MM3Z9V1ST1
02DZ3.9-Z(TPH3)

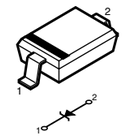

DAN202K-T-146
M1MA152WK-T1



DAN202UT106
1PS184-115



DAP202K
DAP202K-T-146
M1MA152WA-T1
MA3075WA-(TX)
MA3130WA-TX



DTZ10B
DTZ-TT11-6.8B
HZU11B1TRF
MA111-TX
MA113-(TX)
MMDL914T1
RD3.9SB2
RD3.9SB2-T1
UDZSTE-1710B
UDZSTE-173.9B
UDZSTE-175.6B
UDZSTE-176.8B
UDZ-TE-17-3.9B

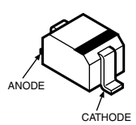

HN1D02FU-TE85R



HN1D03FU-TE85R



MA153-TX
1PS181-115
1SS226



02CZ6.8-TE85L



1SS383(T5RSONY1)

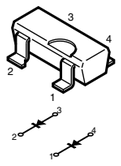

L1503CB/ID

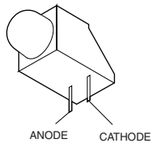

L-53SRD-H

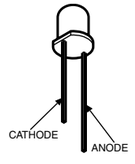

NSPW515BS

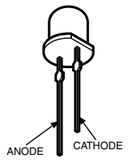

SELU1E50CM

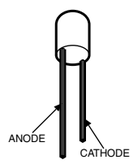

SMLU12D16W

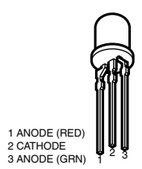

SECTION 4
EXPLODED VIEWS

NOTE:

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- Items with no part number and no description are not stocked because they are seldom required for roution service.
- The construction parts of an assembled part are indicated with a collation number in the remark colum.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

4-1. COVER AND STAND

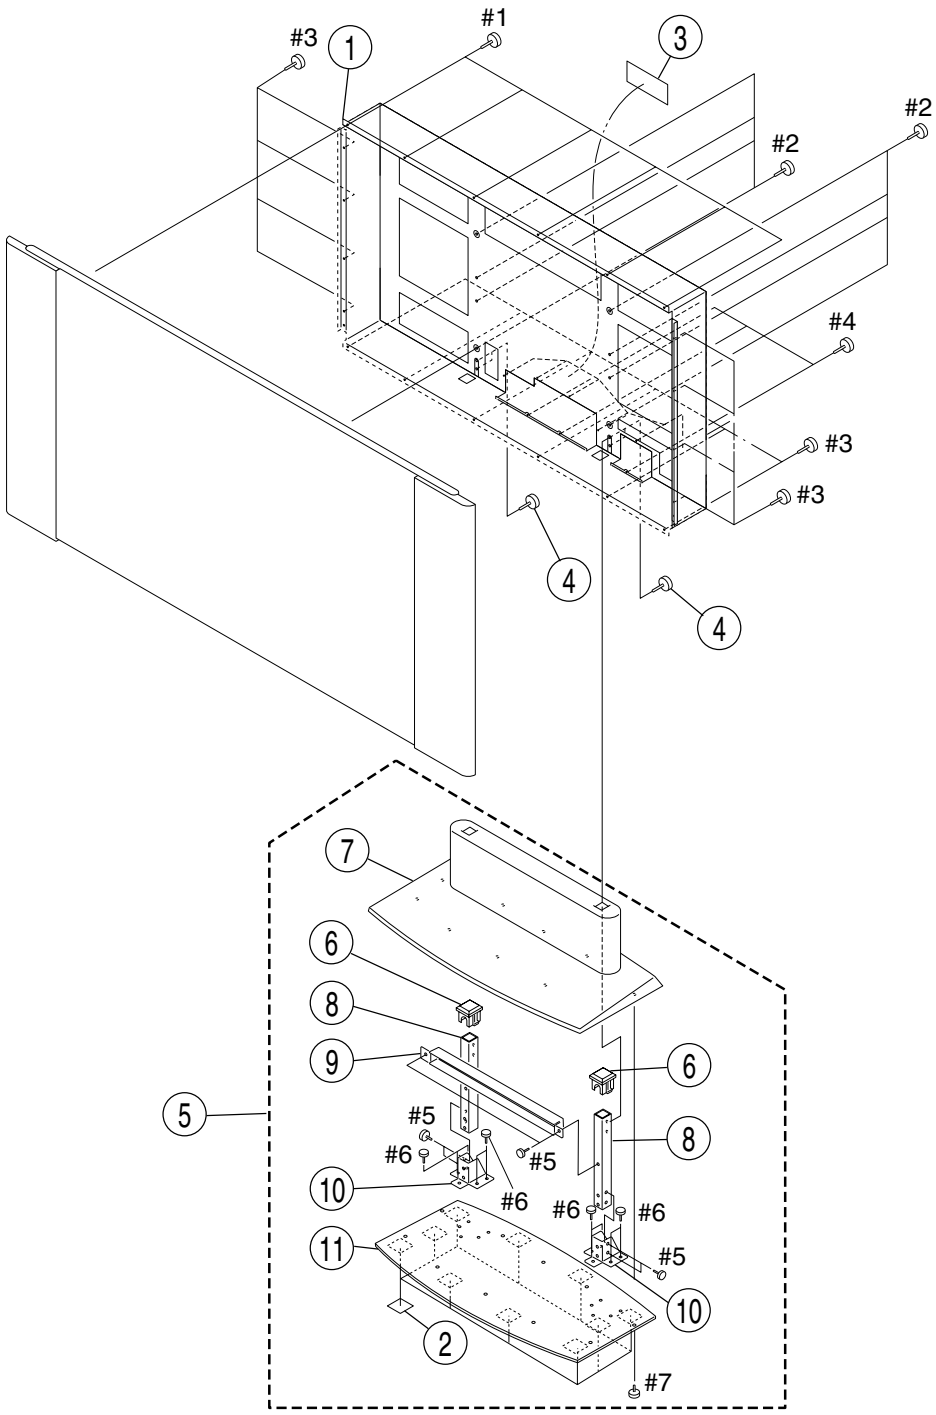

REF. No.		PART No.	DESCRIPTIONRE	MARK
1		X-4042-782-2	COVER , REAR ASSY	
2	*	4-098-264-01	CUSHION A	
3	*	4-097-764-01	LABEL,MODEL NAME	
4		4-957-517-01	SCREW +PSW 5X40	
5		X-4042-806-1	STAND ASSY	2,6-11
6		4-098-263-01	CAP,STAND	
7		4-101-386-01	COVER (50), STAND BASE	
8		4-098-260-01	FRAME (42A),STAND BASE	
9		4-098-261-01	FRAME (42B),STAND BASE	
10		4-098-262-01	BRACKET (42),STAND BASE	
11		4-101-387-01	PLATE (50), STAND BASE	
#1		7-682-962-09	SCREW +PSW 4X10	
#2		7-682-973-19	SCREW +PSW 5X10	
#3		7-685-663-79	SCREW +BVTP 4X16 TYPE2 IT-3	
#4		7-682-947-09	SCREW +PSW 3X6	
#5		7-628-000-07	SCREW +PSW 5X12	
#6		7-682-973-09	SCREW +PSW 5X8	
#7		7-685-663-79	SCREW +BVTP 3X10 TYPE2 IT-3	

4-2. SPEAKER

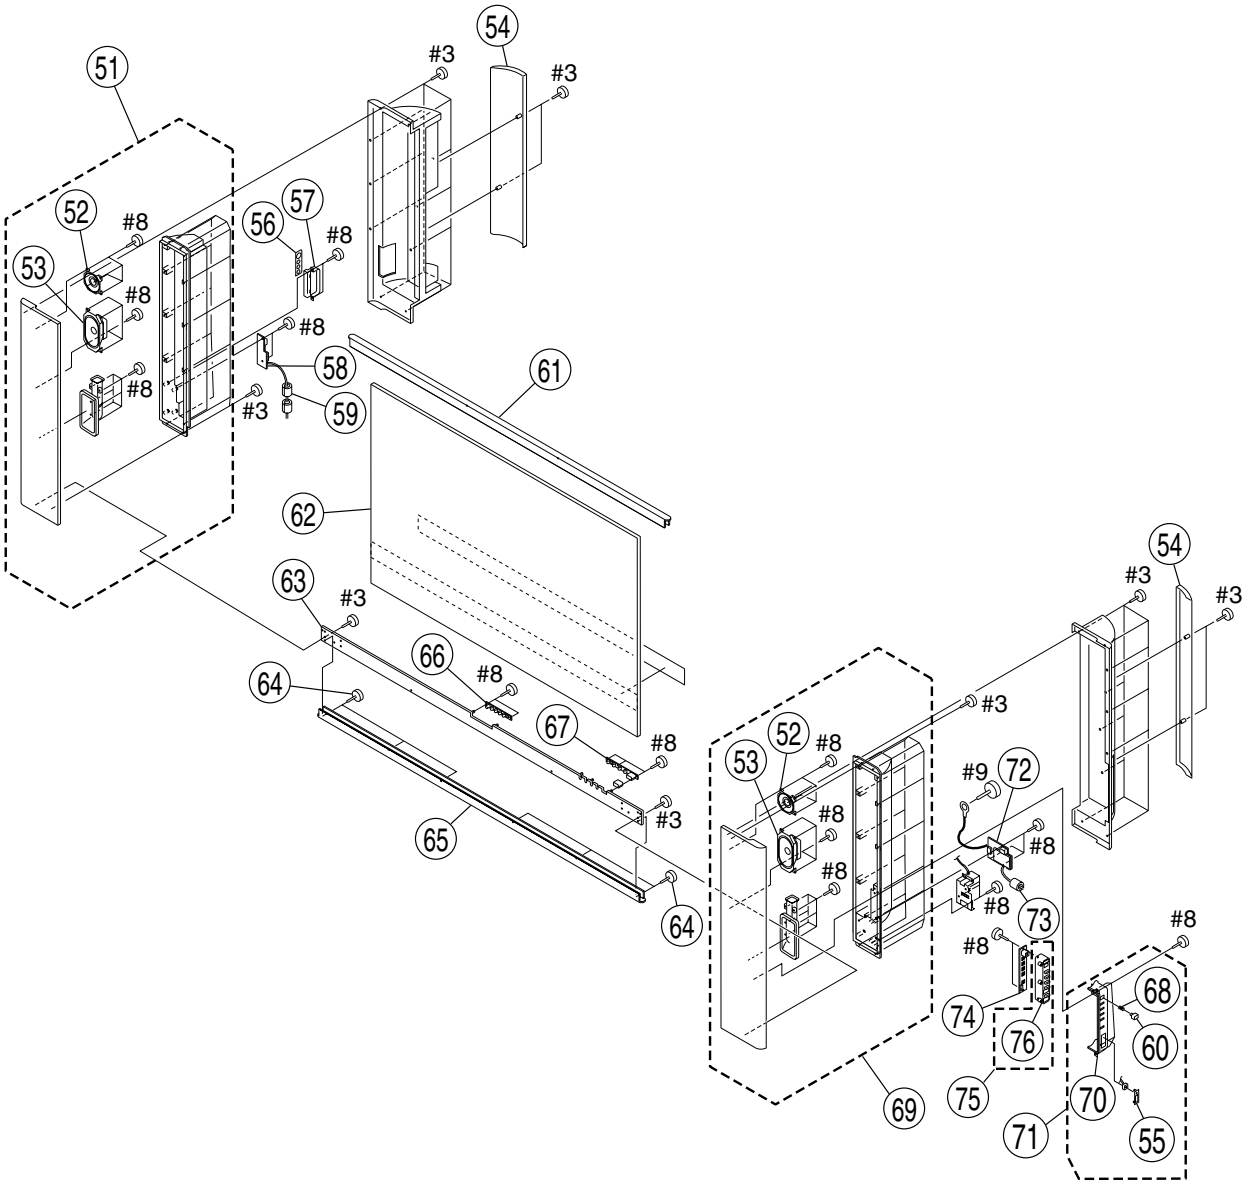

REF. No.	PART No.	DESCRIPTIONRE	MARK
51	A-1606-536-A	SPEAKER (L) ASSY	52, 53
52	1-825-610-11	LOUDSPEAKER (5CM)	
53	1-825-609-11	LOUDSPEAKER (5.5X12CM)	
54	X-4042-855-1	SPEAKER COVER (50 L) ASSY	
55	4-097-828-01	PANEL, MS	
56	4-098-094-01	LID (CONNECTOR PANEL)	
57	4-098-091-02	COVER, CONNECTOR PANEL	
58	* A-1410-998-A	H2 BOARD, MOUNT	
59	1-543-653-11	CORE ASSY,BEAD (DIVISION TYPE)	
60	4-098-108-01	BUTTON, POWER"	
61	X-4042-848-1	BAR (TOP) ASSY	
62	1-788-079-11	GLASS, OPTICAL FILTER	
63	X-4042-859-1	BRACKET, FILTER GLASS (50) ASSY	
64	4-091-675-01	SCREW, FIXED	
65	4-101-360-01	BAR (BOTTOM) ASSY	

REF. No.	PART No.	DESCRIPTIONRE	MARK
66	* A-1415-535-A	H4 BOARD, MOUNT	
67	* A-1410-999-A	H3 BOARD, MOUNT	
68	* 4-098-112-01	SPRING, COMPRESSION	
69	A-1606-537-A	SPEAKER (R) ASSY	52, 53
70	4-098-109-12	COVER, CONTROL PANEL	
71	X-4042-142-2	PANEL, CONTROL ASSY	55,60,68,70
72	* A-1415-536-A	HM BOARD, MOUNT	
73	1-543-653-11	CORE,FERRITE	
74	* A-1410-997-A	H1 BOARD, MOUNT	
75	X-4042-705-1	BUTTON ASSY	76
76	4-098-090-11	BUTTON, MULTI	
#3	7-685-663-79	SCREW +BVTP 4X16 TYPE2 IT-3	
#8	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
#9	7-682-947-01	SCREW +PSW 3X6	

4-3. CHASSIS-1

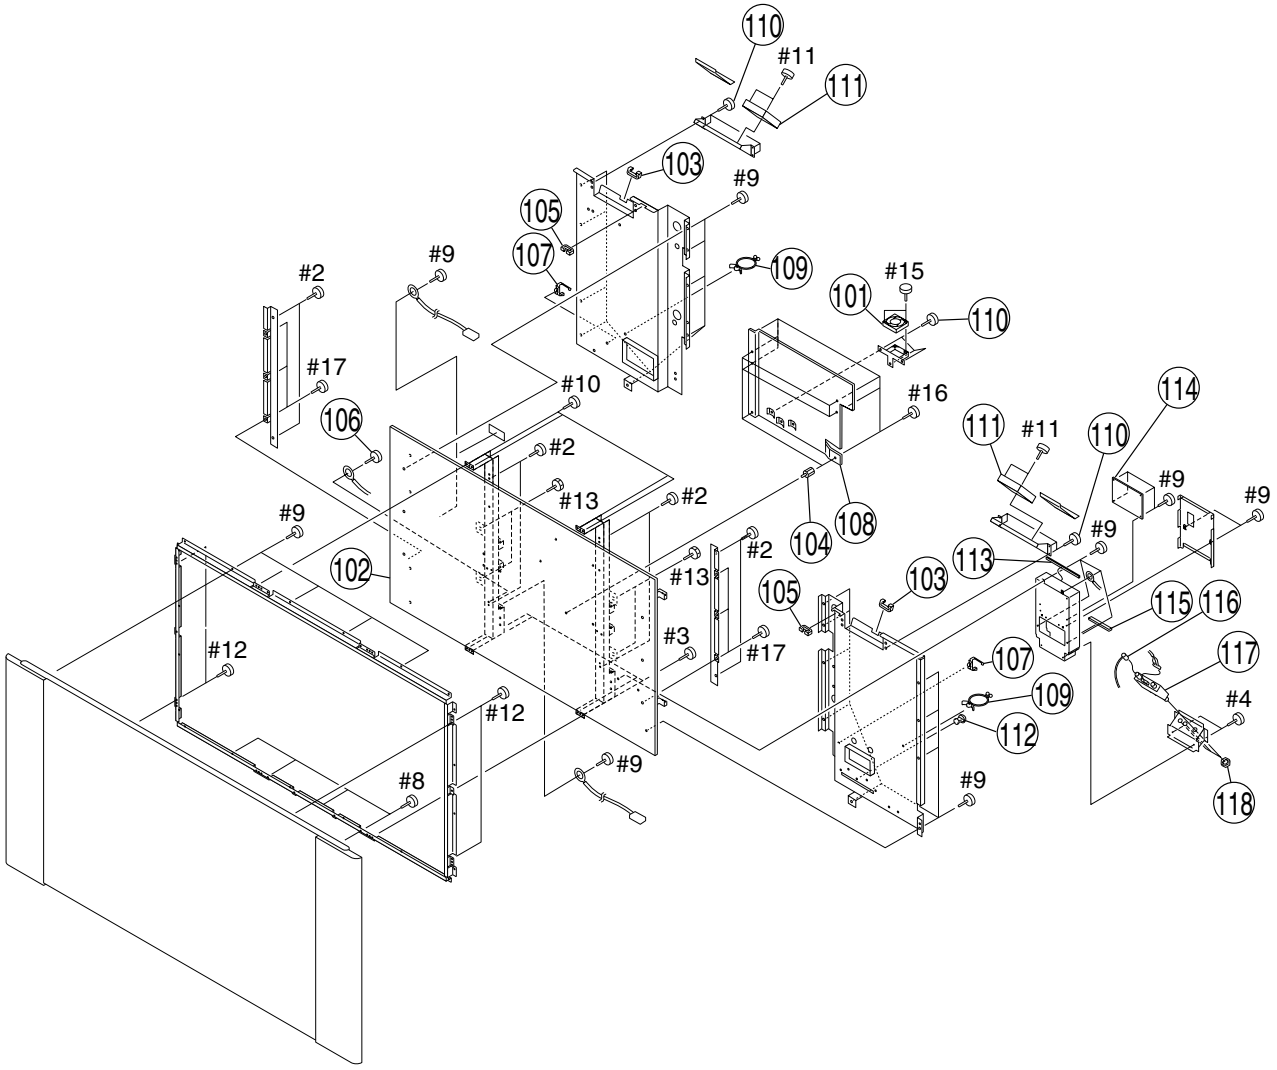

REF. No.		PART No.	DESCRIPTIONRE	MARK
101		1-763-962-11	FAN, DC	
102		1-805-544-11	PLASMA DISPLAY PANEL	
103	*	4-091-688-01	EDGE HOLDER	
104		4-973-980-31	SPAECER	
105	*	4-102-899-01	SADDLE,EDGE	
106		4-389-025-01	SCREW (M4) (EXT TOOTH WASHER)	
107	*	4-098-165-01	CLAMPER	
108		1-468-828-11	REGULATOR, SWITCHING	
109		4-035-160-01	PURSE LOCK (S) (DIA. 12)	
110		4-678-370-01	SCREW (M3X8),CROSS (HOLE) PAN	
111		1-763-963-21	FAN, DC	
112		4-052-842-01	HOLDER,PWB	
113	*	4-098-362-01	CUSHION (RF)	
114	*	A-1405-554-A	K BOARD, MOUNT	
115		4-088-215-01	GASKET (13X13)	

REF. No.		PART No.	DESCRIPTIONRE	MARK
116	*	1-555-400-00	CABLE, PIN	
117		1-771-787-13	SWITCH, RF ANTENNA	
118		3-682-691-00	NUT, WASHER HEXAGON	
#2		7-682-973-19	SCREW +PSW 5X10	
#3		7-685-663-79	SCREW +BVTP 4X16 TYPE2 IT-3	
#4		7-682-947-09	SCREW +PSW 3X6	
#8		7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
#9		7-682-947-01	SCREW +PSW 3X6	
#10		7-682-961-01	SCREW +PSW 4X8	
#11		7-682-966-09	SCREW +PSW 4X20	
#12		7-682-949-01	SCREW +PSW 3X10	
#13		7-683-379-07	“BOLT, HEXAGON”	
#15		7-682-968-01	SCREW +PSW 4X30	
#16		7-685-645-71	SCREW +BVTP 3X6 TYPE2 IT-3	
#17		7-685-661-14	SCREW +BVTP 4X12 TYPE2 IT-3	

4-4. CHASSIS-2

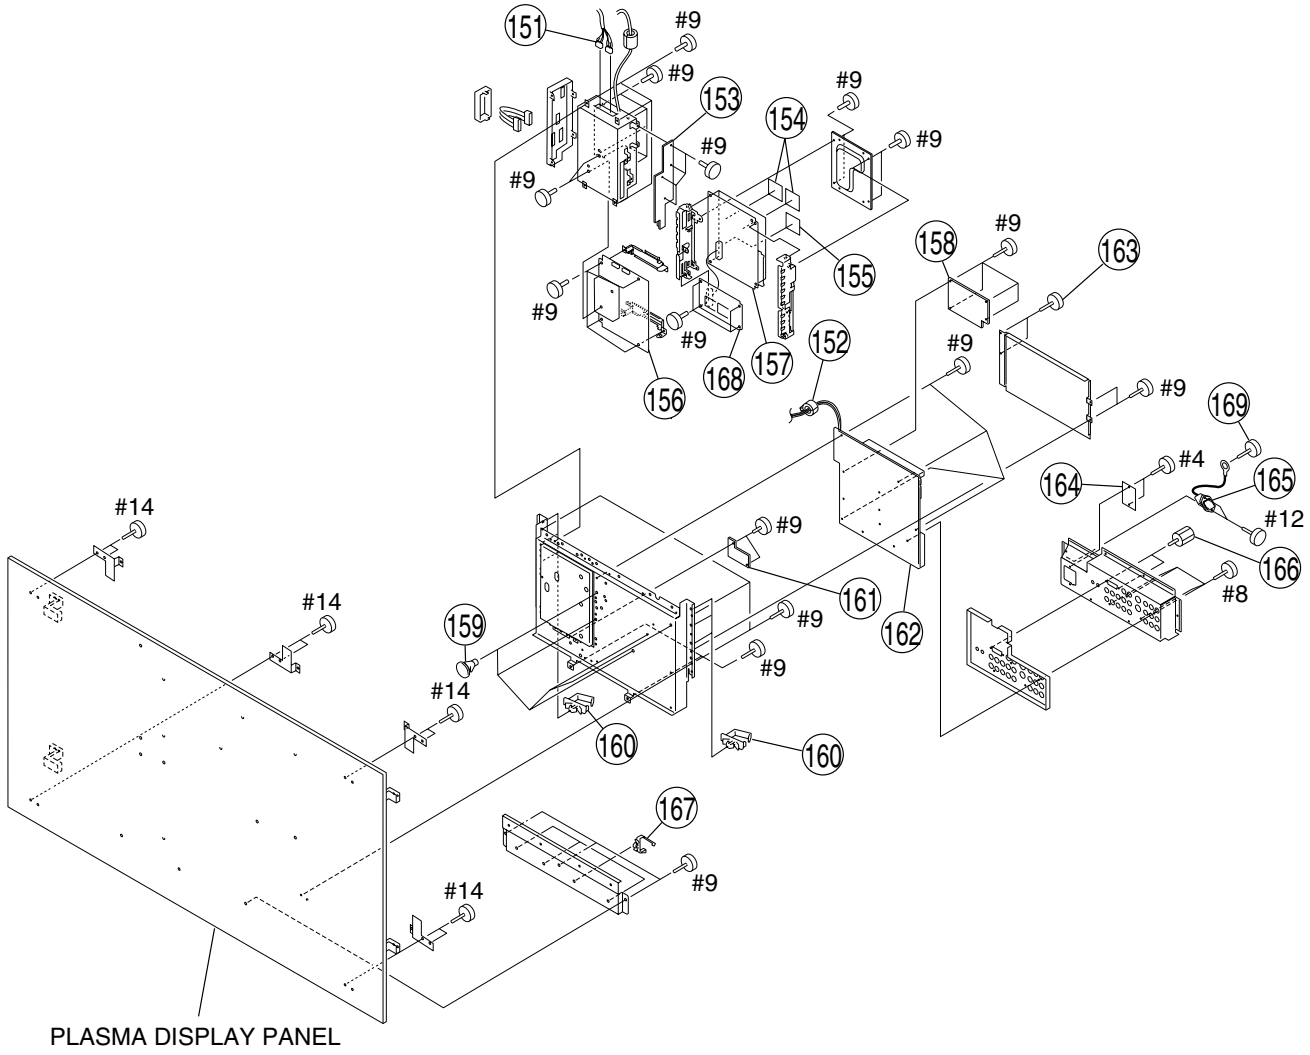

REF. No.		PART No.	DESCRIPTIONRE	MARK
151		1-900-284-48	LVDS CONNECTOR ASSY 31P	
152		1-543-982-12	CORE,FERRITE	
153	*	A-1405-555-A	J1 BOARD, MOUNT	
154	*	4-097-803-01	SHEET,RADIATION	
155	*	4-097-803-11	SHEET,RADIATION	
156	*	A-1302-839-A	DE3 BOARD, COMPLETE	
157	*	A-1302-897-A	DIC2 BOARD, COMPLETE	
158		A-1302-310-A	UD BOARD, COMPLETE	
159		4-052-842-01	HOLDER, PWB	
160	*	3-919-255-01	HOLDER, PC BOARD	

REF. No.		PART No.	DESCRIPTIONRE	MARK
161	*	A-1415-537-A	J2 BOARD, MOUNT	
162	*	A-1410-996-A	A1 BOARD, COMPLETE	
163		4-099-714-01	RIBET,NYLON	
164		4-098-100-01	PLATE, BLIND	
165	*	1-816-517-21	INLET, AC (WITH NOISE FILTER)	
166		4-635-966-01	SCREW (HEX)	
167	*	4-098-165-01	CLAMPER	
168		A-1302-465-B	MS2A BOARD, COMPLETE	
169		4-389-025-01	SCREW(M4)(EXT TOOTH WASHER)	
#4		7-682-947-09	SCREW +PSW 3X6	
#8		7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
#9		7-682-947-01	SCREW +PSW 3X6	
#12		7-682-949-01	SCREW +PSW 3X10	
#14		7-682-948-09	SCREW +PSW 3X8	

4-5. PACKING MATERIALS

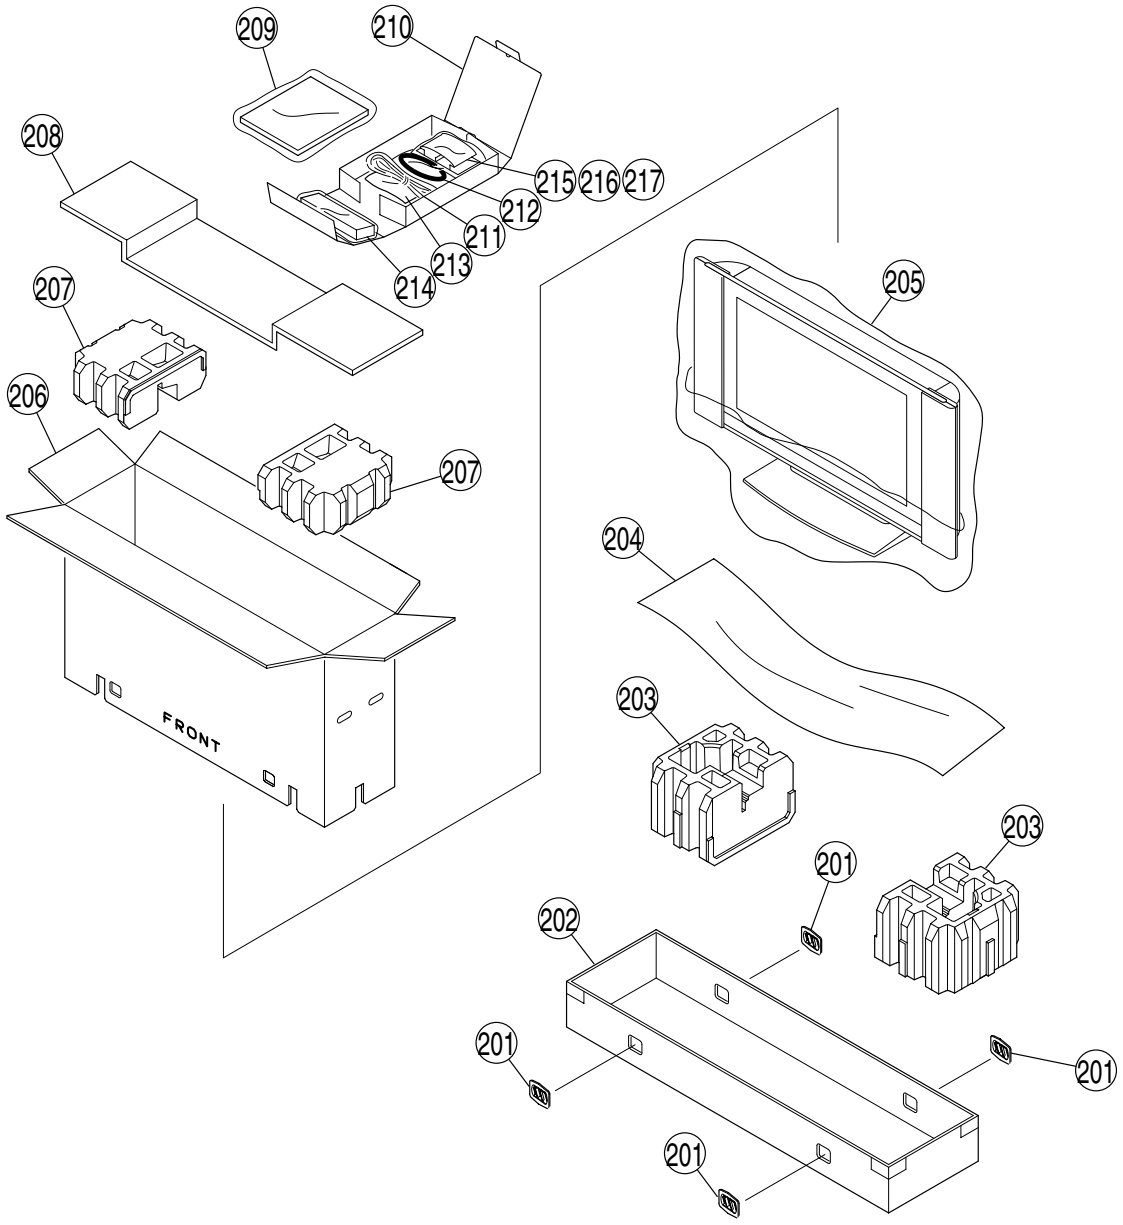

REF. No.		PART No.	DESCRIPTIONRE	MARK
201	*	4-030-895-01	JOINT	
202	*	4-101-467-01	TRAY	
203	*	4-101-407-01	CUSHION, LOWER	
204	*	4-100-528-01	SHEET, PROTECTION	
205	*	4-102-713-01	BAG, PROTECTION	
206	*	4-101-466-01	INDIVIDUAL CARTON	
207	*	4-101-469-01	CUSHION, UPPER	
208	*	4-101-468-01	BOARD TOP	
209		4-097-685-13	MANUAL, INSTRUCTION	
		4-097-685-23	MANUAL, INSTRUCTION	
		4-097-685-33	MANUAL, INSTRUCTION	
210	*	4-100-241-02	BOX, ACCESSORY”	

REF. No.		PART No.	DESCRIPTIONRE	MARK
211	⚠	1-824-668-12	AC POWER-SUPPLY CORD	
212		1-757-319-42	CABLE, COAXIAL (WITH (F) PLUG)	
213	*	X-4040-964-1	ASSY, CLEANING CLOTH (FOR U/C)	
214		1-478-212-11	REMOTE COMMANDER (RM-Y1001)	
215		X-4042-683-2	COVER, CABLE ASSY	
216		4-100-116-02	SCRIVET	
217		4-099-720-01	HOOK	

SECTION 5
ELECTRICAL PARTS LIST

NOTE:

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

RESISTORS
- All resistors are in ohms
- F : nonflammable

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1		H1	CAPACITOR		C9503	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
2		H1	CAPACITOR		C9504	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3		H1	DIODE		D9501	8-719-914-44	DIODE DAP202K		
4		H1	DIODE		D9502	8-719-978-33	DIODE DTZ-TT11-6.8B		
5		H1	DIODE		D9503	8-719-978-33	DIODE DTZ-TT11-6.8B		
6		H1	RESISTOR		R9501	1-218-839-11	METAL CHIP 470 0.5% 1/10W		
7		H1	RESISTOR		R9502	1-218-843-11	METAL CHIP 680 0.5% 1/10W		
8		H1	RESISTOR		R9503	1-218-847-11	METAL CHIP 1K 0.5% 1/10W		
9		H1	RESISTOR		R9504	1-218-855-11	METAL CHIP 2.2K 0.5% 1/10W		
10		H1	RESISTOR		R9505	1-216-821-11	METAL CHIP 1K 5% 1/10W		
11		H1	SWITCH		S9501	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
12		H1	SWITCH		S9502	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
13		H1	SWITCH		S9503	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
14		H1	SWITCH		S9504	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
15		H1	SWITCH		S9505	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
16		H1	SWITCH		S9506	1-554-419-00	SWITCH, PUSH (1 KEY)		
17		H2	CAPACITOR		C9601	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
18		H2	CAPACITOR		C9602	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
19		H2	CAPACITOR		C9603	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
20		H2	CAPACITOR		C9604	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
21		H2	CAPACITOR		C9605	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
22		H2	CAPACITOR		C9606	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
23		H2	CONNECTOR		CN9601	1-766-383-91	PIN, CONNECTOR 12P		
24		H2	DIODE		D9601	8-719-977-28	DIODE DTZ10B		
25		H2	DIODE		D9602	8-719-977-28	DIODE DTZ10B		
26		H2	DIODE		D9603	8-719-977-28	DIODE DTZ10B		
27		H2	DIODE		D9604	8-719-977-28	DIODE DTZ10B		
28		H2	DIODE		D9605	8-719-977-28	DIODE DTZ10B		
29		H2	DIODE		D9606	8-719-977-28	DIODE DTZ10B		
30		H2	DIODE		D9607	8-719-977-28	DIODE DTZ10B		
31		H2	JACK		J9601	1-565-666-12	TERMINAL, S 4P		
32		H2	JACK		J9602	1-770-328-21	JACK, PIN 3P		
33		H2	RESISTOR		R9601	1-216-029-00	RES-CHIP 150 5% 1/10W		
34		H2	RESISTOR		R9602	1-216-029-00	RES-CHIP 150 5% 1/10W		
35		H2	RESISTOR		R9603	1-216-029-00	RES-CHIP 150 5% 1/10W		
36		H2	RESISTOR		R9604	1-216-029-00	RES-CHIP 150 5% 1/10W		
37		H2	RESISTOR		R9605	1-216-029-00	RES-CHIP 150 5% 1/10W		
38		H2	RESISTOR		R9606	1-216-029-00	RES-CHIP 150 5% 1/10W		
39		H2	RESISTOR		R9607	1-216-849-11	METAL CHIP 220K 5% 1/10W		
40		H2	RESISTOR		R9608	1-216-849-11	METAL CHIP 220K 5% 1/10W		
41		HM	CAPACITOR		C1301	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
42		HM	CAPACITOR		C1302	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
43		HM	CAPACITOR		C1305	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
44		HM	CAPACITOR		C1308	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
45		HM	CAPACITOR		C1309	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
46		HM	CAPACITOR		C1310	1-126-390-11	ELECT CHIP 22UF 20.00% 6.3V		
47		HM	CAPACITOR		C1311	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
48		HM	CONNECTOR	*	CN1301	1-793-807-21	PIN, CONNECTOR (WITH PWB) 20P		
49		HM	CONNECTOR	*	CN1304	1-816-402-12	CONNECTOR, MEMORY STICK		
50		HM	LEAD PIN	*	CP1301	4-042-408-02	PIN(45), WIRE		
51		HM	DIODE		D1301	8-719-024-77	DIODE HN1D03FU-TE85L		
52		HM	DIODE		D1303	8-719-024-77	DIODE HN1D03FU-TE85L		
53		HM	DIODE		D1305	8-719-024-77	DIODE HN1D03FU-TE85L		
54		HM	DIODE		D1307	8-719-024-77	DIODE HN1D03FU-TE85L		
55		HM	DIODE		D1309	8-719-024-77	DIODE HN1D03FU-TE85L		
56		HM	DIODE		D1311	6-500-182-01	DIODE L1503CB/ID		
57		HM	DIODE		D1313	8-719-024-77	DIODE HN1D03FU-TE85L		
58		HM	DIODE		D1315	8-719-024-77	DIODE HN1D03FU-TE85L		
59		HM	DIODE		D1316	8-719-056-77	DIODE UDZ-TE-17-3.9B		
60		HM	FERRITE BEAD		FB1301	1-414-921-11	FERRITE 0UH		
61		HM	FERRITE BEAD		FB1303	1-469-152-11	FERRITE 0UH		
62		HM	FERRITE BEAD		FB1304	1-469-152-11	FERRITE 0UH		
63		HM	IC		IC1301	6-702-952-01	IC SN65LVDT14PWR		
64		HM	IC		IC1303	8-759-698-08	IC SN74CBTLV1G125DCKR		
65		HM	COIL		L1302	1-469-555-21	INDUCTOR 10UH		
66		HM	TRANSISTOR		Q1301	8-729-140-63	TRANSISTOR 2SA1611-M5M6		
67		HM	TRANSISTOR		Q1302	8-729-029-14	TRANSISTOR DTC144EUA-T106		
68		HM	TRANSISTOR		Q1304	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
69		HM	RESISTOR		R1303	1-216-864-11	SHORT CHIP 0		
70		HM	RESISTOR		R1305	1-216-864-11	SHORT CHIP 0		
71		HM	RESISTOR		R1307	1-216-864-11	SHORT CHIP 0		
72		HM	RESISTOR		R1309	1-216-864-11	SHORT CHIP 0		
73		HM	RESISTOR		R1311	1-216-864-11	SHORT CHIP 0		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
74		HM	RESISTOR		R1315	1-216-864-11	SHORT CHIP 0		
75		HM	RESISTOR		R1317	1-216-864-11	SHORT CHIP 0		
76		HM	RESISTOR		R1321	1-216-864-11	SHORT CHIP 0		
77		HM	RESISTOR		R1323	1-216-864-11	SHORT CHIP 0		
78		HM	RESISTOR		R1325	1-216-864-11	SHORT CHIP 0		
79		HM	RESISTOR		R1327	1-216-809-11	METAL CHIP 100 5% 1/10W		
80		HM	RESISTOR		R1328	1-216-821-11	METAL CHIP 1K 5% 1/10W		
81		HM	RESISTOR		R1329	1-216-833-11	METAL CHIP 10K 5% 1/10W		
82		HM	RESISTOR		R1330	1-216-801-11	METAL CHIP 22 5% 1/10W		
83		HM	RESISTOR		R1331	1-216-801-11	METAL CHIP 22 5% 1/10W		
84		HM	RESISTOR		R1332	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
85		HM	RESISTOR		R1333	1-216-801-11	METAL CHIP 22 5% 1/10W		
86		HM	RESISTOR		R1336	1-216-845-11	METAL CHIP 100K 5% 1/10W		
87		HM	RESISTOR		R1337	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
88		HM	RESISTOR		R1340	1-216-837-11	METAL CHIP 22K 5% 1/10W		
89		HM	RESISTOR		R1347	1-216-864-11	SHORT CHIP 0		
90		K	CAPACITOR		C3001	1-126-200-11	ELECT CHIP 10UF 20.00% 35V		
91		K	CAPACITOR		C3002	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
92		K	CAPACITOR		C3003	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
93		K	CAPACITOR		C3004	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
94		K	CAPACITOR		C3005	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
95		K	CAPACITOR		C3006	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
96		K	CAPACITOR		C3007	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
97		K	CAPACITOR		C3008	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
98		K	CAPACITOR		C3009	1-126-601-11	ELECT CHIP 2.2UF 20.00% 50V		
99		K	CAPACITOR		C3010	1-126-601-11	ELECT CHIP 2.2UF 20.00% 50V		
100		K	CAPACITOR		C3011	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
101		K	CAPACITOR		C3012	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
102		K	CAPACITOR		C3029	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
103		K	CAPACITOR		C3032	1-126-200-11	ELECT CHIP 10UF 20.00% 35V		
104		K	CAPACITOR		C3033	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
105		K	CAPACITOR		C3056	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
106		K	CAPACITOR		C3060	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
107		K	CAPACITOR		C3061	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
108		K	CAPACITOR		C3063	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
109		K	CAPACITOR		C3064	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
110		K	CAPACITOR		C3066	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
111		K	CAPACITOR		C3067	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
112		K	CAPACITOR		C3068	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
113		K	CAPACITOR		C3069	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V		
114		K	CAPACITOR		C3072	1-113-701-21	ELECT CHIP 22UF 20.00% 16V		
115		K	CAPACITOR		C3075	1-163-133-00	CERAMIC CHIP 470PF 5.00% 50V		
116		K	CAPACITOR		C3076	1-163-102-00	CERAMIC CHIP 24PF 5.00% 50V		
117		K	CAPACITOR		C3077	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
118		K	CAPACITOR		C3078	1-107-704-51	ELECT 470UF 20.00% 25V		
119		K	CAPACITOR		C3079	1-163-133-00	CERAMIC CHIP 470PF 5.00% 50V		
120		K	CAPACITOR		C3080	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
121		K	CAPACITOR		C3081	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
122		K	CAPACITOR		C3083	1-163-263-11	CERAMIC CHIP 330PF 5.00% 50V		
123		K	CAPACITOR		C3084	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
124		K	CAPACITOR		C3086	1-165-319-11	CERAMIC CHIP 0.1UF 50V		
125		K	CAPACITOR		C3087	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
126		K	CAPACITOR		C3088	1-163-263-11	CERAMIC CHIP 330PF 5.00% 50V		
127		K	CAPACITOR		C3089	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
128		K	CAPACITOR		C3090	1-165-319-11	CERAMIC CHIP 0.1UF 50V		
129		K	CAPACITOR		C3091	1-128-992-21	ELECT CHIP 47UF 20% 25V		
130		K	CAPACITOR		C3092	1-163-133-00	CERAMIC CHIP 470PF 5.00% 50V		
131		K	CAPACITOR		C3093	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
132		K	CAPACITOR		C3094	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
133		K	CAPACITOR		C3095	1-163-133-00	CERAMIC CHIP 470PF 5.00% 50V		
134		K	CAPACITOR		C3096	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
135		K	CAPACITOR		C3097	1-126-055-11	ELECT 470UF 20.00% 50V		
136		K	CAPACITOR		C3098	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
137		K	CAPACITOR		C3099	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V		
138		K	CAPACITOR		C3100	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
139		K	CAPACITOR		C3101	1-165-319-11	CERAMIC CHIP 0.1UF 50V		
140		K	CAPACITOR		C3102	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
141		K	CAPACITOR		C3103	1-164-161-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
142		K	CAPACITOR		C3104	1-165-319-11	CERAMIC CHIP 0.1UF 50V		
143		K	CAPACITOR		C3105	1-165-319-11	CERAMIC CHIP 0.1UF 50V		
144		K	CAPACITOR		C3106	1-165-738-31	ELECT 2700UF 20% 25V		
145		K	CAPACITOR		C3107	1-165-738-31	ELECT 2700UF 20% 25V		
146		K	CAPACITOR		C3108	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
147		K	CAPACITOR		C3109	1-164-161-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
148		K	CONNECTOR	*	CN3001	1-691-591-11	PIN, CONNECTOR (1.5MM) (SMD)8P		
149		K	CONNECTOR	*	CN3061	1-564-510-11	PLUG, CONNECTOR 7P		
150		K	CONNECTOR	*	CN3062	1-564-507-11	PLUG, CONNECTOR 4P		
151		K	DIODE		D3060	6-500-028-01	DIODE MM3Z9V1ST1		
152		K	FERRITE BEAD		FB3062	1-410-397-21	FERRITE 1.1UH		
153		K	FERRITE BEAD		FB3063	1-410-397-21	FERRITE 1.1UH		
154		K	IC		IC3002	8-759-745-64	IC NJM4560M		
155		K	IC		IC3003	8-759-745-64	IC NJM4560M		
156		K	IC		IC3004	8-759-745-64	IC NJM4560M		
157		K	IC		IC3060	6-704-237-01	IC TDA7490L		
158		K	COIL		L3004	1-412-029-11	INDUCTOR 10UH		
159		K	COIL		L3005	1-412-029-11	INDUCTOR 10UH		
160		K	COIL		L3060	1-416-966-11	INDUCTOR 30UH		
161		K	COIL		L3061	1-456-610-11	COIL, SN		
162		K	COIL		L3062	1-456-610-11	COIL, SN		
163		K	COIL		L3063	1-416-966-11	INDUCTOR 30UH		
164		K	IC LINK	⚠	PS3060	1-576-658-21	FUSE 2.5A 63V		
165		K	IC LINK	⚠	PS3061	1-576-658-21	FUSE 2.5A 63V		
166		K	TRANSISTOR		Q3001	8-729-422-29	TRANSISTOR 2SD601A-S		
167		K	TRANSISTOR		Q3002	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
168		K	TRANSISTOR		Q3060	8-729-010-25	TRANSISTOR MSD601-RT1		
169		K	TRANSISTOR		Q3061	8-729-010-25	TRANSISTOR MSD601-RT1		
170		K	TRANSISTOR		Q3062	8-729-010-25	TRANSISTOR MSD601-RT1		
171		K	TRANSISTOR		Q3063	8-729-010-05	TRANSISTOR MSB709-RT1		
172		K	RESISTOR		R3001	1-216-864-11	SHORT CHIP 0		
173		K	RESISTOR		R3006	1-216-864-11	SHORT CHIP 0		
174		K	RESISTOR		R3007	1-216-864-11	SHORT CHIP 0		
175		K	RESISTOR		R3008	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
176		K	RESISTOR		R3009	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
177		K	RESISTOR		R3010	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
178		K	RESISTOR		R3011	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
179		K	RESISTOR		R3012	1-216-810-11	METAL CHIP 120 5% 1/10W		
180		K	RESISTOR		R3013	1-216-810-11	METAL CHIP 120 5% 1/10W		
181		K	RESISTOR		R3014	1-216-810-11	METAL CHIP 120 5% 1/10W		
182		K	RESISTOR		R3015	1-216-810-11	METAL CHIP 120 5% 1/10W		
183		K	RESISTOR		R3016	1-216-839-11	METAL CHIP 33K 5% 1/10W		
184		K	RESISTOR		R3017	1-216-848-11	METAL CHIP 180K 5% 1/10W		
185		K	RESISTOR		R3018	1-216-839-11	METAL CHIP 33K 5% 1/10W		
186		K	RESISTOR		R3019	1-216-848-11	METAL CHIP 180K 5% 1/10W		
187		K	RESISTOR		R3020	1-216-864-11	SHORT CHIP 0		
188		K	RESISTOR		R3024	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
189		K	RESISTOR		R3025	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
190		K	RESISTOR		R3026	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
191		K	RESISTOR		R3027	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
192		K	RESISTOR		R3028	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
193		K	RESISTOR		R3029	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
194		K	RESISTOR		R3030	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
195		K	RESISTOR		R3031	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
196		K	RESISTOR		R3038	1-216-821-11	METAL CHIP 1K 5% 1/10W		
197		K	RESISTOR		R3039	1-216-821-11	METAL CHIP 1K 5% 1/10W		
198		K	RESISTOR		R3043	1-216-833-11	METAL CHIP 10K 5% 1/10W		
199		K	RESISTOR		R3044	1-216-833-11	METAL CHIP 10K 5% 1/10W		
200		K	RESISTOR		R3045	1-216-833-11	METAL CHIP 10K 5% 1/10W		
201		K	RESISTOR		R3046	1-216-833-11	METAL CHIP 10K 5% 1/10W		
202		K	RESISTOR		R3060	1-216-821-11	METAL CHIP 1K 5% 1/10W		
203		K	RESISTOR		R3061	1-216-821-11	METAL CHIP 1K 5% 1/10W		
204		K	RESISTOR		R3062	1-216-810-11	METAL CHIP 120 5% 1/10W		
205		K	RESISTOR		R3063	1-216-810-11	METAL CHIP 120 5% 1/10W		
206		K	RESISTOR		R3064	1-216-833-11	METAL CHIP 10K 5% 1/10W		
207		K	RESISTOR		R3067	1-216-835-11	METAL CHIP 15K 5% 1/10W		
208		K	RESISTOR		R3068	1-216-839-11	METAL CHIP 33K 5% 1/10W		
209		K	RESISTOR		R3069	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
210		K	RESISTOR		R3071	1-216-813-11	METAL CHIP 220 5% 1/10W		
211		K	RESISTOR		R3072	1-216-813-11	METAL CHIP 220 5% 1/10W		
212		K	RESISTOR		R3073	1-216-841-11	METAL CHIP 47K 5% 1/10W		
213		K	RESISTOR		R3074	1-216-813-11	METAL CHIP 220 5% 1/10W		
214		K	RESISTOR		R3075	1-216-813-11	METAL CHIP 220 5% 1/10W		
215		K	RESISTOR		R3076	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
216		K	RESISTOR		R3077	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
217		K	RESISTOR		R3078	1-216-837-11	METAL CHIP 22K 5% 1/10W		
218		K	RESISTOR		R3079	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
219		K	RESISTOR		R3080	1-216-837-11	METAL CHIP 22K 5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
220		K	RESISTOR		R3081	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
221		K	RESISTOR		R3082	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
222		K	RESISTOR		R3083	1-216-809-11	METAL CHIP 100 5% 1/10W		
223		K	RESISTOR		R3084	1-216-817-11	METAL CHIP 470 5% 1/10W		
224		K	RESISTOR		R3085	1-216-835-11	METAL CHIP 15K 5% 1/10W		
225		K	RESISTOR		R3086	1-216-821-11	METAL CHIP 1K 5% 1/10W		
226		K	RESISTOR		R3087	1-216-843-11	METAL CHIP 68K 5% 1/10W		
227		K	RESISTOR		R3089	1-218-879-11	METAL CHIP 22K 0.5% 1/10W		
228		K	RESISTOR		R3091	1-216-841-11	METAL CHIP 47K 5% 1/10W		
229		K	RESISTOR		R3092	1-216-821-11	METAL CHIP 1K 5% 1/10W		
230		K	RESISTOR		R3093	1-218-879-11	METAL CHIP 22K 0.5% 1/10W		
231		K	RESISTOR		R3094	1-216-836-11	METAL CHIP 18K 5% 1/10W		
232		K	RESISTOR		R3095	1-216-833-11	METAL CHIP 10K 5% 1/10W		
233		K	RESISTOR		R3096	1-216-846-11	METAL CHIP 120K 5% 1/10W		
234		K	RESISTOR		R3097	1-216-843-11	METAL CHIP 68K 5% 1/10W		
235		K	RESISTOR		R3098	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
236		K	RESISTOR		R3099	1-216-817-11	METAL CHIP 470 5% 1/10W		
237		K	RESISTOR		R3100	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
238		K	RESISTOR		R3101	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
239		K	RESISTOR		R3102	1-216-841-11	METAL CHIP 47K 5% 1/10W		
240		K	RESISTOR		R3103	1-216-813-11	METAL CHIP 220 5% 1/10W		
241		K	RESISTOR		R3104	1-216-813-11	METAL CHIP 220 5% 1/10W		
242		K	RESISTOR		R3105	1-216-813-11	METAL CHIP 220 5% 1/10W		
243		K	RESISTOR		R3106	1-216-813-11	METAL CHIP 220 5% 1/10W		
244		K	RESISTOR		R3107	1-216-795-11	METAL CHIP 6.8 5% 1/10W		
245		K	RESISTOR		R3108	1-216-833-11	METAL CHIP 10K 5% 1/10W		
246		K	RESISTOR		R3109	1-216-833-11	METAL CHIP 10K 5% 1/10W		
247		H3	CAPACITOR		C9701	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
248		H3	CAPACITOR		C9702	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
249		H3	CAPACITOR		C9703	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
250		H3	CAPACITOR		C9705	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
251		H3	CAPACITOR		C9706	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
252		H3	CAPACITOR		C9707	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
253		H3	CAPACITOR		C9708	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
254		H3	CAPACITOR		C9709	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
255		H3	CONNECTOR	*	CN9701	1-764-095-11	PIN, CONNECTOR (PC BOARD) 10P		
256		H3	DIODE		D9701	6-500-487-01	DIODE SMLU12D16W		
257		H3	DIODE		D9702	8-719-081-23	DIODE L-53SRD-H		
258		H3	DIODE		D9703	8-719-081-23	DIODE L-53SRD-H		
259		H3	DIODE		D9704	6-500-425-01	DIODE SELU1E50CM		
260		H3	DIODE		D9705	8-719-421-59	DIODE MA3130WA-TX		
261		H3	IC		IC9701	6-600-117-01	IC GP1UM27SRK		
262		H3	TRANSISTOR		Q9702	8-729-907-00	TRANSISTOR DTC114EU		
263		H3	TRANSISTOR		Q9703	8-729-907-00	TRANSISTOR DTC114EU		
264		H3	TRANSISTOR		Q9704	8-729-907-00	TRANSISTOR DTC114EU		
265		H3	TRANSISTOR		Q9705	8-729-907-00	TRANSISTOR DTC114EU		
266		H3	TRANSISTOR		Q9707	8-729-028-73	TRANSISTOR DTA114EUA-T106		
267		H3	RESISTOR		R9701	1-216-805-11	METAL CHIP 47 5% 1/10W		
268		H3	RESISTOR		R9704	1-216-814-11	METAL CHIP 270 5% 1/10W		
269		H3	RESISTOR		R9705	1-216-833-11	METAL CHIP 10K 5% 1/10W		
270		H3	RESISTOR		R9706	1-216-816-11	METAL CHIP 390 5% 1/10W		
271		H3	RESISTOR		R9707	1-216-833-11	METAL CHIP 10K 5% 1/10W		
272		H3	RESISTOR		R9708	1-216-816-11	METAL CHIP 390 5% 1/10W		
273		H3	RESISTOR		R9709	1-216-833-11	METAL CHIP 10K 5% 1/10W		
274		H3	RESISTOR		R9710	1-216-817-11	METAL CHIP 470 5% 1/10W		
275		H3	RESISTOR		R9711	1-216-837-11	METAL CHIP 22K 5% 1/10W		
276		H3	RESISTOR		R9713	1-216-864-11	SHORT CHIP 0		
277		H3	RESISTOR		R9715	1-216-833-11	METAL CHIP 10K 5% 1/10W		
278		H3	RESISTOR		R9717	1-216-821-11	METAL CHIP 1K 5% 1/10W		
279		H4	CAPACITOR		C9801	1-128-391-11	ELECT CHIP 330UF 20% 6.3V		
280		H4	CONNECTOR		CN9801	1-580-057-91	PIN, CONNECTOR 4P		
281		H4	DIODE		D9801	6-500-820-01	DIODE NSPW515BS-A0ST		
282		H4	DIODE		D9802	6-500-820-01	DIODE NSPW515BS-A0ST		
283		H4	DIODE		D9803	6-500-820-01	DIODE NSPW515BS-A0ST		
284		H4	DIODE		D9804	6-500-820-01	DIODE NSPW515BS-A0ST		
285		H4	DIODE		D9809	8-719-041-97	DIODE MA113-(TX)		
286		H4	DIODE		D9810	6-500-540-01	DIODE RB521S-30FTE61		
287		H4	TRANSISTOR		Q9801	8-729-907-00	TRANSISTOR DTC114EU		
288		H4	TRANSISTOR		Q9802	8-729-907-00	TRANSISTOR DTC114EU		
289		H4	TRANSISTOR		Q9803	8-729-907-00	TRANSISTOR DTC114EU		
290		H4	TRANSISTOR		Q9804	8-729-907-00	TRANSISTOR DTC114EU		
291		H4	RESISTOR		R9801	1-216-810-11	METAL CHIP 120 5% 1/10W		
292		H4	RESISTOR		R9802	1-216-810-11	METAL CHIP 120 5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
293		H4	RESISTOR		R9803	1-216-810-11	METAL CHIP 120 5% 1/10W		
294		H4	RESISTOR		R9804	1-216-810-11	METAL CHIP 120 5% 1/10W		
295		H4	RESISTOR		R9805	1-216-864-11	SHORT CHIP 0		
296		H4	RESISTOR		R9806	1-216-864-11	SHORT CHIP 0		
297		H4	RESISTOR		R9807	1-216-864-11	SHORT CHIP 0		
298		H4	RESISTOR		R9808	1-216-864-11	SHORT CHIP 0		
299		UD	CAPACITOR		C7000	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
300		UD	CAPACITOR		C7001	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
301		UD	CAPACITOR		C7002	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
302		UD	CAPACITOR		C7003	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
303		UD	CAPACITOR		C7004	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
304		UD	CAPACITOR		C7005	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
305		UD	CAPACITOR		C7006	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
306		UD	CAPACITOR		C7007	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
307		UD	CAPACITOR		C7008	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
308		UD	CAPACITOR		C7009	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
309		UD	CAPACITOR		C7010	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
310		UD	CAPACITOR		C7011	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
311		UD	CAPACITOR		C7012	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
312		UD	CAPACITOR		C7013	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
313		UD	CAPACITOR		C7014	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
314		UD	CAPACITOR		C7016	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
315		UD	CAPACITOR		C7017	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
316		UD	CAPACITOR		C7018	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
317		UD	CAPACITOR		C7020	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
318		UD	CAPACITOR		C7022	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
319		UD	CAPACITOR		C7023	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
320		UD	CAPACITOR		C7025	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
321		UD	CAPACITOR		C7026	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V		
322		UD	CAPACITOR		C7027	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V		
323		UD	CAPACITOR		C7028	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
324		UD	CAPACITOR		C7030	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
325		UD	CAPACITOR		C7031	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
326		UD	CAPACITOR		C7032	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
327		UD	CAPACITOR		C7033	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
328		UD	CAPACITOR		C7034	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
329		UD	CAPACITOR		C7035	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
330		UD	CAPACITOR		C7036	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
331		UD	CAPACITOR		C7037	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
332		UD	CAPACITOR		C7038	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
333		UD	CAPACITOR		C7039	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
334		UD	CAPACITOR		C7040	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
335		UD	CAPACITOR		C7041	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
336		UD	CAPACITOR		C7042	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
337		UD	CAPACITOR		C7043	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
338		UD	CAPACITOR		C7048	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
339		UD	CAPACITOR		C7050	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V		
340		UD	CAPACITOR		C7051	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V		
341		UD	CAPACITOR		C7052	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
342		UD	CAPACITOR		C7053	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
343		UD	CAPACITOR		C7054	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
344		UD	CAPACITOR		C7055	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
345		UD	CAPACITOR		C7056	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
346		UD	CAPACITOR		C7057	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
347		UD	CAPACITOR		C7058	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
348		UD	CAPACITOR		C7059	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
349		UD	CAPACITOR		C7060	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
350		UD	CAPACITOR		C7061	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
351		UD	CAPACITOR		C7062	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
352		UD	CAPACITOR		C7063	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
353		UD	CAPACITOR		C7064	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
354		UD	CAPACITOR		C7065	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
355		UD	CAPACITOR		C7066	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
356		UD	CAPACITOR		C7067	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
357		UD	CAPACITOR		C7068	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
358		UD	CAPACITOR		C7069	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
359		UD	CAPACITOR		C7070	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
360		UD	CAPACITOR		C7071	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
361		UD	CAPACITOR		C7072	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
362		UD	CAPACITOR		C7073	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
363		UD	CAPACITOR		C7074	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
364		UD	CAPACITOR		C7075	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
365		UD	CAPACITOR		C7076	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
366		UD	CAPACITOR		C7079	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
367		UD	CAPACITOR		C7080	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
368		UD	CAPACITOR		C7081	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
369		UD	CAPACITOR		C7085	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
370		UD	CAPACITOR		C7086	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
371		UD	CAPACITOR		C7087	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
372		UD	CAPACITOR		C7088	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
373		UD	CONNECTOR	*	CN7001	1-816-228-21	CONNECTOR, DVI		
374		UD	CONNECTOR		CN7002	1-580-057-11	PIN, CONNECTOR (SMD) 4P		
375		UD	CONNECTOR	*	CN7004	1-764-643-21	PIN, CONNECTOR (SMD) 11P		
376		UD	DIODE		D7000	8-719-069-55	DIODE UDZSTE-175.6B		
377		UD	DIODE		D7001	8-719-069-55	DIODE UDZSTE-175.6B		
378		UD	DIODE		D7002	8-719-069-55	DIODE UDZSTE-175.6B		
379		UD	DIODE		D7003	8-719-069-55	DIODE UDZSTE-175.6B		
380		UD	DIODE		D7004	8-719-069-55	DIODE UDZSTE-175.6B		
381		UD	DIODE		D7005	8-719-069-55	DIODE UDZSTE-175.6B		
382		UD	DIODE		D7006	8-719-914-43	DIODE DAN202K		
383		UD	FERRITE BEAD		FB7000	1-414-760-21	FERRITE 0UH		
384		UD	FERRITE BEAD		FB7001	1-414-760-21	FERRITE 0UH		
385		UD	FERRITE BEAD		FB7002	1-414-760-21	FERRITE 0UH		
386		UD	FERRITE BEAD		FB7003	1-414-760-21	FERRITE 0UH		
387		UD	FERRITE BEAD		FB7004	1-414-760-21	FERRITE 0UH		
388		UD	FERRITE BEAD		FB7005	1-414-760-21	FERRITE 0UH		
389		UD	FERRITE BEAD		FB7006	1-469-836-21	FERRITE 0UH		
390		UD	FERRITE BEAD		FB7007	1-469-836-21	FERRITE 0UH		
391		UD	FERRITE BEAD		FB7008	1-469-836-21	FERRITE 0UH		
392		UD	FILTER		FL7000	1-234-560-21	FILTER, LOW PASS		
393		UD	FILTER		FL7001	1-234-560-21	FILTER, LOW PASS		
394		UD	FILTER		FL7002	1-234-560-21	FILTER, LOW PASS		
395		UD	FILTER		FL7003	1-400-087-21	FILTER, EMI REMOVAL (SMD)		
396		UD	IC		IC7000	6-702-170-01	IC PACDN006S		
397		UD	IC		IC7001	6-702-170-01	IC PACDN006S		
398		UD	IC		IC7002	6-802-346-01	IC ST72631K4M1/NNLTR		
399		UD	IC		IC7003	6-702-170-01	IC PACDN006S		
400		UD	IC		IC7004	6-702-080-01	IC GM7030-H		
401		UD	IC		IC7005	8-759-640-39	IC BR24C02F-WE2		
402		UD	IC		IC7006	8-759-641-86	IC BR24C16F-E2		
403		UD	IC		IC7007	8-749-015-18	IC PQ07VZ012ZP		
404		UD	IC		IC7008	8-749-015-18	IC PQ07VZ012ZP		
405		UD	COIL		L7000	1-469-856-21	INDUCTOR 10UH		
406		UD	COIL		L7001	1-412-058-11	INDUCTOR 10UH		
407		UD	COIL		L7002	1-469-856-21	INDUCTOR 10UH		
408		UD	RESISTOR		R7006	1-216-803-11	METAL CHIP 33 5% 1/10W		
409		UD	RESISTOR		R7007	1-216-864-11	SHORT CHIP 0		
410		UD	RESISTOR		R7009	1-216-833-11	METAL CHIP 10K 5% 1/10W		
411		UD	RESISTOR		R7010	1-216-833-11	METAL CHIP 10K 5% 1/10W		
412		UD	RESISTOR		R7014	1-216-833-11	METAL CHIP 10K 5% 1/10W		
413		UD	RESISTOR		R7015	1-216-833-11	METAL CHIP 10K 5% 1/10W		
414		UD	RESISTOR		R7016	1-216-833-11	METAL CHIP 10K 5% 1/10W		
415		UD	RESISTOR		R7017	1-216-803-11	METAL CHIP 33 5% 1/10W		
416		UD	RESISTOR		R7019	1-216-833-11	METAL CHIP 10K 5% 1/10W		
417		UD	RESISTOR		R7020	1-216-864-11	SHORT CHIP 0		
418		UD	RESISTOR		R7022	1-216-833-11	METAL CHIP 10K 5% 1/10W		
419		UD	RESISTOR		R7023	1-216-833-11	METAL CHIP 10K 5% 1/10W		
420		UD	RESISTOR		R7024	1-216-833-11	METAL CHIP 10K 5% 1/10W		
421		UD	RESISTOR		R7025	1-216-833-11	METAL CHIP 10K 5% 1/10W		
422		UD	RESISTOR		R7026	1-216-864-11	SHORT CHIP 0		
423		UD	RESISTOR		R7027	1-216-864-11	SHORT CHIP 0		
424		UD	RESISTOR		R7028	1-216-864-11	SHORT CHIP 0		
425		UD	RESISTOR		R7029	1-216-833-11	METAL CHIP 10K 5% 1/10W		
426		UD	RESISTOR		R7031	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
427		UD	RESISTOR		R7032	1-414-760-21	FERRITE 0UH		
428		UD	RESISTOR		R7033	1-414-760-21	FERRITE 0UH		
429		UD	RESISTOR		R7034	1-216-833-11	METAL CHIP 10K 5% 1/10W		
430		UD	RESISTOR		R7035	1-216-833-11	METAL CHIP 10K 5% 1/10W		
431		UD	RESISTOR		R7036	1-216-805-11	METAL CHIP 47 5% 1/10W		
432		UD	RESISTOR		R7037	1-216-805-11	METAL CHIP 47 5% 1/10W		
433		UD	RESISTOR		R7038	1-216-833-11	METAL CHIP 10K 5% 1/10W		
434		UD	RESISTOR		R7039	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		
435		UD	RESISTOR		R7040	1-216-806-11	METAL CHIP 56 5% 1/10W		
436		UD	RESISTOR		R7041	1-216-806-11	METAL CHIP 56 5% 1/10W		
437		UD	RESISTOR		R7042	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
438		UD	RESISTOR		R7043	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
439		UD	RESISTOR		R7044	1-216-833-11	METAL CHIP 10K 5% 1/10W		
440		UD	RESISTOR		R7046	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
441		UD	RESISTOR		R7048	1-216-833-11	METAL CHIP 10K 5% 1/10W		
442		UD	RESISTOR		R7050	1-216-837-11	METAL CHIP 22K 5% 1/10W		
443		UD	RESISTOR		R7052	1-216-805-11	METAL CHIP 47 5% 1/10W		
444		UD	RESISTOR		R7053	1-216-805-11	METAL CHIP 47 5% 1/10W		
445		UD	RESISTOR		R7055	1-216-833-11	METAL CHIP 10K 5% 1/10W		
446		UD	RESISTOR		R7056	1-216-805-11	METAL CHIP 47 5% 1/10W		
447		UD	RESISTOR		R7057	1-216-805-11	METAL CHIP 47 5% 1/10W		
448		UD	RESISTOR		R7058	1-216-805-11	METAL CHIP 47 5% 1/10W		
449		UD	RESISTOR		R7059	1-216-864-11	SHORT CHIP 0		
450		UD	RESISTOR		R7061	1-216-864-11	SHORT CHIP 0		
451		UD	RESISTOR		R7064	1-216-833-11	METAL CHIP 10K 5% 1/10W		
452		UD	RESISTOR		R7065	1-216-864-11	SHORT CHIP 0		
453		UD	RESISTOR		R7066	1-216-833-11	METAL CHIP 10K 5% 1/10W		
454		UD	RESISTOR		R7067	1-216-833-11	METAL CHIP 10K 5% 1/10W		
455		UD	RESISTOR		R7068	1-216-864-11	SHORT CHIP 0		
456		UD	RESISTOR		R7070	1-216-837-11	METAL CHIP 22K 5% 1/10W		
457		UD	RESISTOR		R7071	1-414-760-21	FERRITE 0UH		
458		UD	RESISTOR		R7072	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
459		UD	RESISTOR		R7073	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
460		UD	RESISTOR		R7074	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
461		UD	RESISTOR		R7075	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
462		UD	RESISTOR		R7076	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
463		UD	RESISTOR		R7077	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
464		UD	RESISTOR		R7079	1-216-864-11	SHORT CHIP 0		
465		UD	RESISTOR		R7081	1-216-864-11	SHORT CHIP 0		
466		UD	RESISTOR		R7083	1-216-864-11	SHORT CHIP 0		
467		UD	RESISTOR		R7084	1-216-821-11	METAL CHIP 1K 5% 1/10W		
468		UD	RESISTOR		R7085	1-216-821-11	METAL CHIP 1K 5% 1/10W		
469		UD	RESISTOR		R7086	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
470		UD	RESISTOR		R7087	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
471		UD	RESISTOR		R7088	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
472		UD	RESISTOR		R7089	1-216-821-11	METAL CHIP 1K 5% 1/10W		
473		UD	RESISTOR		R7090	1-218-852-11	METAL CHIP 1.6K 0.5% 1/10W		
474		UD	RESISTOR		R7091	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
475		UD	RESISTOR		R7092	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
476		UD	RESISTOR		R7093	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
477		UD	RESISTOR		R7094	1-216-864-11	SHORT CHIP 0		
478		UD	RESISTOR		R7095	1-216-821-11	METAL CHIP 1K 5% 1/10W		
479		UD	RESISTOR		R7096	1-216-821-11	METAL CHIP 1K 5% 1/10W		
480		UD	RESISTOR		R7102	1-216-864-11	SHORT CHIP 0		
481		UD	RESISTOR		R7103	1-216-864-11	SHORT CHIP 0		
482		UD	RESISTOR		R7107	1-216-813-11	METAL CHIP 220 5% 1/10W		
483		UD	RESISTOR		R7108	1-216-813-11	METAL CHIP 220 5% 1/10W		
484		UD	CRYSTAL		X7000	1-795-568-21	VIBRATOR, CRYSTAL		
485		UD	CRYSTAL		X7001	1-795-567-21	VIBRATOR, CRYSTAL		
486		A1	CAPACITOR		C8001	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
487		A1	CAPACITOR		C8002	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
488		A1	CAPACITOR		C8003	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
489		A1	CAPACITOR		C8004	1-164-360-11	CERAMIC CHIP 0.1UF 16V		
490		A1	CAPACITOR		C8005	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
491		A1	CAPACITOR		C8006	1-216-864-11	SHORT CHIP 0		
492		A1	CAPACITOR		C8007	1-216-864-11	SHORT CHIP 0		
493		A1	CAPACITOR		C8008	1-216-864-11	SHORT CHIP 0		
494		A1	CAPACITOR		C8015	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
495		A1	CAPACITOR		C8016	1-128-407-11	ELECT CHIP 47UF 20% 50V		
496		A1	CAPACITOR		C8017	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
497		A1	CAPACITOR		C8018	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
498		A1	CAPACITOR		C8019	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
499		A1	CAPACITOR		C8020	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
500		A1	CAPACITOR		C8021	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
501		A1	CAPACITOR		C8022	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
502		A1	CAPACITOR		C8024	1-107-778-11	ELECT CHIP 470UF 20% 16V		
503		A1	CAPACITOR		C8025	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
504		A1	CAPACITOR		C8026	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
505		A1	CAPACITOR		C8027	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
506		A1	CAPACITOR		C8028	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
507		A1	CAPACITOR		C8029	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
508		A1	CAPACITOR		C8031	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
509		A1	CAPACITOR		C8032	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V		
510		A1	CAPACITOR		C8033	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
511		A1	CAPACITOR		C8034	1-128-594-11	ELECT CHIP 1UF 20.00% 50V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
512		A1	CAPACITOR		C8035	1-128-594-11	ELECT CHIP 1UF 20.00% 50V		
513		A1	CAPACITOR		C8036	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
514		A1	CAPACITOR		C8037	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
515		A1	CAPACITOR		C8038	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
516		A1	CAPACITOR		C8039	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
517		A1	CAPACITOR		C8040	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
518		A1	CAPACITOR		C8041	1-128-996-11	ELECT CHIP 4.7UF 20% 50V		
519		A1	CAPACITOR		C8042	1-128-996-11	ELECT CHIP 4.7UF 20% 50V		
520		A1	CAPACITOR		C8043	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
521		A1	CAPACITOR		C8044	1-162-995-11	CERAMIC CHIP 0.022UF 50V		
522		A1	CAPACITOR		C8045	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
523		A1	CAPACITOR		C8046	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
524		A1	CAPACITOR		C8048	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
525		A1	CAPACITOR		C8049	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
526		A1	CAPACITOR		C8050	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
527		A1	CAPACITOR		C8202	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
528		A1	CAPACITOR		C8203	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
529		A1	CAPACITOR		C8204	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
530		A1	CAPACITOR		C8205	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
531		A1	CAPACITOR		C8206	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
532		A1	CAPACITOR		C8207	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
533		A1	CAPACITOR		C8208	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
534		A1	CAPACITOR		C8210	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
535		A1	CAPACITOR		C8211	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
536		A1	CAPACITOR		C8212	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
537		A1	CAPACITOR		C8214	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
538		A1	CAPACITOR		C8215	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
539		A1	CAPACITOR		C8216	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
540		A1	CAPACITOR		C8217	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
541		A1	CAPACITOR		C8218	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
542		A1	CAPACITOR		C8219	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
543		A1	CAPACITOR		C8227	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
544		A1	CAPACITOR		C8230	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
545		A1	CAPACITOR		C8231	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
546		A1	CAPACITOR		C8232	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
547		A1	CAPACITOR		C8233	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
548		A1	CAPACITOR		C8234	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
549		A1	CAPACITOR		C8235	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
550		A1	CAPACITOR		C8236	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
551		A1	CAPACITOR		C8237	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
552		A1	CAPACITOR		C8238	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
553		A1	CAPACITOR		C8239	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
554		A1	CAPACITOR		C8240	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
555		A1	CAPACITOR		C8241	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
556		A1	CAPACITOR		C8242	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
557		A1	CAPACITOR		C8243	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
558		A1	CAPACITOR		C8244	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
559		A1	CAPACITOR		C8245	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
560		A1	CAPACITOR		C8246	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
561		A1	CAPACITOR		C8247	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
562		A1	CAPACITOR		C8248	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
563		A1	CAPACITOR		C8249	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
564		A1	CAPACITOR		C8252	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
565		A1	CAPACITOR		C8253	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
566		A1	CAPACITOR		C8254	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
567		A1	CAPACITOR		C8255	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
568		A1	CAPACITOR		C8256	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
569		A1	CAPACITOR		C8257	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
570		A1	CAPACITOR		C8258	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
571		A1	CAPACITOR		C8400	1-164-360-11	CERAMIC CHIP 0.1UF 16V		
572		A1	CAPACITOR		C8401	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
573		A1	CAPACITOR		C8402	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
574		A1	CAPACITOR		C8403	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
575		A1	CAPACITOR		C8404	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
576		A1	CAPACITOR		C8405	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
577		A1	CAPACITOR		C8406	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
578		A1	CAPACITOR		C8407	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
579		A1	CAPACITOR		C8409	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
580		A1	CAPACITOR		C8411	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
581		A1	CAPACITOR		C8413	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
582		A1	CAPACITOR		C8414	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
583		A1	CAPACITOR		C8415	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
584		A1	CAPACITOR		C8416	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
585		A1	CAPACITOR		C8417	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
586		A1	CAPACITOR		C8418	1-128-391-11	ELECT CHIP 330UF 20% 6.3V		
587		A1	CAPACITOR		C8420	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
588		A1	CAPACITOR		C8421	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
589		A1	CAPACITOR		C8422	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
590		A1	CAPACITOR		C8424	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
591		A1	CAPACITOR		C8425	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
592		A1	CAPACITOR		C8426	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
593		A1	CAPACITOR		C8427	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
594		A1	CAPACITOR		C8429	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
595		A1	CAPACITOR		C8430	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
596		A1	CAPACITOR		C8431	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
597		A1	CAPACITOR		C8432	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
598		A1	CAPACITOR		C8433	1-128-994-21	ELECT CHIP 47UF 20% 10V		
599		A1	CAPACITOR		C8434	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
600		A1	CAPACITOR		C8435	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
601		A1	CAPACITOR		C8437	1-128-994-21	ELECT CHIP 47UF 20% 10V		
602		A1	CAPACITOR		C8438	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
603		A1	CAPACITOR		C8442	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
604		A1	CAPACITOR		C8443	1-135-341-21	ELECT CHIP 330UF 20% 6.3V		
605		A1	CAPACITOR		C8444	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
606		A1	CAPACITOR		C8445	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
607		A1	CAPACITOR		C8446	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
608		A1	CAPACITOR		C8447	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
609		A1	CAPACITOR		C8448	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
610		A1	CAPACITOR		C8449	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
611		A1	CAPACITOR		C8450	1-162-920-11	CERAMIC CHIP 27PF 5.00% 50V		
612		A1	CAPACITOR		C8451	1-162-922-11	CERAMIC CHIP 39PF 5.00% 50V		
613		A1	CAPACITOR		C8452	1-162-922-11	CERAMIC CHIP 39PF 5.00% 50V		
614		A1	CAPACITOR		C8600	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
615		A1	CAPACITOR		C8609	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
616		A1	CAPACITOR		C8610	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
617		A1	CAPACITOR		C8611	1-162-916-11	CERAMIC CHIP 12PF 5.00% 50V		
618		A1	CAPACITOR		C8612	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
619		A1	CAPACITOR		C8613	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
620		A1	CAPACITOR		C8614	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
621		A1	CAPACITOR		C8615	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
622		A1	CAPACITOR		C8616	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
623		A1	CAPACITOR		C8617	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
624		A1	CAPACITOR		C8618	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
625		A1	CAPACITOR		C8619	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
626		A1	CAPACITOR		C8620	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
627		A1	CAPACITOR		C8621	1-126-601-11	ELECT CHIP 2.2UF 20.00% 50V		
628		A1	CAPACITOR		C8622	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
629		A1	CAPACITOR		C8623	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
630		A1	CAPACITOR		C8624	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
631		A1	CAPACITOR		C8625	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
632		A1	CAPACITOR		C8626	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
633		A1	CAPACITOR		C8627	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
634		A1	CAPACITOR		C8628	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
635		A1	CAPACITOR		C8629	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
636		A1	CAPACITOR		C8630	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
637		A1	CAPACITOR		C8631	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
638		A1	CAPACITOR		C8651	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
639		A1	CAPACITOR		C8668	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
640		A1	CAPACITOR		C8669	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
641		A1	CAPACITOR		C8671	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
642		A1	CAPACITOR		C8672	1-128-993-21	ELECT CHIP 22UF 20% 10V		
643		A1	CAPACITOR		C8673	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
644		A1	CAPACITOR		C8674	1-128-993-21	ELECT CHIP 22UF 20% 10V		
645		A1	CAPACITOR		C8675	1-128-993-21	ELECT CHIP 22UF 20% 10V		
646		A1	CAPACITOR		C8676	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
647		A1	CAPACITOR		C8677	1-128-993-21	ELECT CHIP 22UF 20% 10V		
648		A1	CAPACITOR		C8678	1-128-993-21	ELECT CHIP 22UF 20% 10V		
649		A1	CAPACITOR		C8679	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
650		A1	CAPACITOR		C8680	1-128-993-21	ELECT CHIP 22UF 20% 10V		
651		A1	CAPACITOR		C8802	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
652		A1	CAPACITOR		C8803	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
653		A1	CAPACITOR		C8804	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
654		A1	CAPACITOR		C8805	1-164-360-11	CERAMIC CHIP 0.1UF 16V		
655		A1	CAPACITOR		C8806	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
656		A1	CAPACITOR		C8807	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
657		A1	CAPACITOR		C8808	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
658		A1	CAPACITOR		C8809	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
659		A1	CAPACITOR		C8810	1-127-804-91	CERAMIC CHIP 100PF 1% 50V		
660		A1	CAPACITOR		C8811	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
661		A1	CAPACITOR		C8812	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
662		A1	CAPACITOR		C8813	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
663		A1	CAPACITOR		C8814	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
664		A1	CAPACITOR		C8815	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
665		A1	CAPACITOR		C8816	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
666		A1	CAPACITOR		C8817	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
667		A1	CAPACITOR		C8818	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
668		A1	CAPACITOR		C8819	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
669		A1	CAPACITOR		C8820	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
670		A1	CAPACITOR		C8821	1-127-804-91	CERAMIC CHIP 100PF 1% 50V		
671		A1	CAPACITOR		C8822	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
672		A1	CAPACITOR		C8823	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
673		A1	CAPACITOR		C8824	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
674		A1	CAPACITOR		C8825	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
675		A1	CAPACITOR		C8826	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
676		A1	CAPACITOR		C8827	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
677		A1	CAPACITOR		C8828	1-131-664-91	CERAMIC CHIP 0.15UF 10% 10V		
678		A1	CAPACITOR		C8829	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V		
679		A1	CAPACITOR		C8830	1-104-700-11	CERAMIC CHIP 0.027UF 10.00% 16V		
680		A1	CAPACITOR		C8831	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
681		A1	CAPACITOR		C8832	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
682		A1	CAPACITOR		C8833	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
683		A1	CAPACITOR		C8834	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
684		A1	CAPACITOR		C8835	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
685		A1	CAPACITOR		C8836	1-128-934-91	CERAMIC CHIP 0.33UF 20% 10V		
686		A1	CAPACITOR		C8837	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
687		A1	CAPACITOR		C8838	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
688		A1	CAPACITOR		C8839	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
689		A1	CAPACITOR		C8840	1-128-993-21	ELECT CHIP 22UF 20% 10V		
690		A1	CAPACITOR		C8841	1-216-864-11	SHORT CHIP 0		
691		A1	CAPACITOR		C8842	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
692		A1	CAPACITOR		C8843	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
693		A1	CAPACITOR		C8844	1-216-864-11	SHORT CHIP 0		
694		A1	CAPACITOR		C8845	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
695		A1	CAPACITOR		C8846	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
696		A1	CAPACITOR		C8847	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
697		A1	CAPACITOR		C8848	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
698		A1	CAPACITOR		C8849	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
699		A1	CAPACITOR		C8850	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
700		A1	CAPACITOR		C8851	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
701		A1	CAPACITOR		C8852	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
702		A1	CAPACITOR		C8854	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
703		A1	CAPACITOR		C8855	1-107-778-11	ELECT CHIP 470UF 20% 16V		
704		A1	CAPACITOR		C8856	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
705		A1	CAPACITOR		C8857	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
706		A1	CAPACITOR		C8858	1-117-720-11	CERAMIC CHIP 4.7UF 10V		
707		A1	CAPACITOR		C8859	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
708		A1	CAPACITOR		C8860	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
709		A1	CAPACITOR		C8861	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
710		A1	CAPACITOR		C8862	1-117-720-11	CERAMIC CHIP 4.7UF 10V		
711		A1	CAPACITOR		C8863	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
712		A1	CAPACITOR		C8864	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
713		A1	CAPACITOR		C8865	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
714		A1	CAPACITOR		C8866	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
715		A1	CAPACITOR		C8867	1-131-664-91	CERAMIC CHIP 0.15UF 10% 10V		
716		A1	CAPACITOR		C8868	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V		
717		A1	CAPACITOR		C8869	1-104-700-11	CERAMIC CHIP 0.027UF 10.00% 16V		
718		A1	CAPACITOR		C8870	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
719		A1	CAPACITOR		C8871	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
720		A1	CAPACITOR		C8872	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
721		A1	CAPACITOR		C8873	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
722		A1	CAPACITOR		C8874	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
723		A1	CAPACITOR		C8875	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
724		A1	CAPACITOR		C8876	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
725		A1	CAPACITOR		C8877	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
726		A1	CAPACITOR		C8878	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
727		A1	CONNECTOR	*	CN8001	1-817-755-11	CONNECTOR, BOARD TO BOARD 100P		
728		A1	CONNECTOR		CN8003	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD)4P		
729		A1	CONNECTOR		CN8004	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD)4P		
730		A1	CONNECTOR	*	CN8005	1-695-208-21	PIN, CONNECTOR (PC BOARD) 7P		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
731		A1	CONNECTOR	*	CN8403	1-779-268-21	PIN, CONNECTOR (1.5MM)(SMD)11P		
732		A1	CONNECTOR	*	CN8601	1-691-591-11	PIN, CONNECTOR (1.5MM) (SMD)8P		
733		A1	LEAD PIN	*	CP8001	4-042-408-02	PIN(45), WIRE		
734		A1	LEAD PIN	*	CP8002	4-042-408-02	PIN(45), WIRE		
735		A1	LEAD PIN	*	CP8003	4-042-408-02	PIN(45), WIRE		
736		A1	LEAD PIN	*	CP8004	4-042-408-02	PIN(45), WIRE		
737		A1	DIODE		D8006	8-719-158-02	DIODE RD3.9SB2		
738		A1	DIODE		D8008	8-719-024-76	DIODE HN1D02FU-TE85R		
739		A1	DIODE		D8009	8-719-404-50	DIODE MA111-TX		
740		A1	DIODE		D8230	8-719-081-97	DIODE MMDL914T1		
741		A1	DIODE		D8231	8-719-977-28	DIODE DTZ10B		
742		A1	DIODE		D8232	8-719-977-28	DIODE DTZ10B		
743		A1	DIODE		D8233	8-719-977-28	DIODE DTZ10B		
744		A1	DIODE		D8234	8-719-977-28	DIODE DTZ10B		
745		A1	DIODE		D8235	8-719-977-28	DIODE DTZ10B		
746		A1	DIODE		D8236	8-719-977-28	DIODE DTZ10B		
747		A1	DIODE		D8237	8-719-977-28	DIODE DTZ10B		
748		A1	DIODE		D8238	8-719-977-28	DIODE DTZ10B		
749		A1	DIODE		D8239	8-719-977-28	DIODE DTZ10B		
750		A1	DIODE		D8240	8-719-977-28	DIODE DTZ10B		
751		A1	DIODE		D8241	8-719-977-28	DIODE DTZ10B		
752		A1	DIODE		D8242	8-719-977-28	DIODE DTZ10B		
753		A1	DIODE		D8243	8-719-977-28	DIODE DTZ10B		
754		A1	DIODE		D8244	8-719-977-28	DIODE DTZ10B		
755		A1	DIODE		D8245	8-719-977-28	DIODE DTZ10B		
756		A1	DIODE		D8246	8-719-977-28	DIODE DTZ10B		
757		A1	DIODE		D8247	8-719-977-28	DIODE DTZ10B		
758		A1	DIODE		D8248	8-719-977-28	DIODE DTZ10B		
759		A1	DIODE		D8249	8-719-977-28	DIODE DTZ10B		
760		A1	DIODE		D8250	8-719-977-28	DIODE DTZ10B		
761		A1	DIODE		D8251	8-719-941-86	DIODE DAN202U		
762		A1	DIODE		D8252	8-719-977-28	DIODE DTZ10B		
763		A1	DIODE		D8253	8-719-977-28	DIODE DTZ10B		
764		A1	DIODE		D8800	8-719-041-97	DIODE MA113-(TX)		
765		A1	DIODE		D8801	8-719-914-44	DIODE DAP202K		
766		A1	DIODE		D8802	8-719-041-97	DIODE MA113-(TX)		
767		A1	DIODE		D8803	8-719-404-50	DIODE MA111-TX		
768		A1	DIODE		D8806	8-719-914-44	DIODE DAP202K		
769		A1	DIODE		D8807	8-719-041-97	DIODE MA113-(TX)		
770		A1	DIODE		D8808	8-719-041-97	DIODE MA113-(TX)		
771		A1	DIODE		D8809	8-719-404-50	DIODE MA111-TX		
772		A1	FERRITE BEAD		FB8001	1-216-295-91	SHORT CHIP 0		
773		A1	FERRITE BEAD		FB8002	1-414-233-22	FERRITE 0UH		
774		A1	FERRITE BEAD		FB8003	1-216-295-91	SHORT CHIP 0		
775		A1	FERRITE BEAD		FB8006	1-414-233-22	FERRITE 0UH		
776		A1	FERRITE BEAD		FB8007	1-414-233-22	FERRITE 0UH		
777		A1	FERRITE BEAD		FB8008	1-414-233-22	FERRITE 0UH		
778		A1	FERRITE BEAD		FB8009	1-414-233-22	FERRITE 0UH		
779		A1	FERRITE BEAD		FB8010	1-414-233-22	FERRITE 0UH		
780		A1	FERRITE BEAD		FB8011	1-414-233-22	FERRITE 0UH		
781		A1	FERRITE BEAD		FB8012	1-414-233-22	FERRITE 0UH		
782		A1	FERRITE BEAD		FB8200	1-216-295-91	SHORT CHIP 0		
783		A1	FERRITE BEAD		FB8230	1-216-295-91	SHORT CHIP 0		
784		A1	FERRITE BEAD		FB8400	1-216-295-91	SHORT CHIP 0		
785		A1	FERRITE BEAD		FB8601	1-216-864-11	SHORT CHIP 0		
786		A1	FERRITE BEAD		FB8602	1-216-864-11	SHORT CHIP 0		
787		A1	FERRITE BEAD		FB8603	1-469-179-21	FERRITE 0UH		
788		A1	FERRITE BEAD		FB8604	1-469-179-21	FERRITE 0UH		
789		A1	FILTER		FL8000	1-234-128-21	FERRITE 0UH		
790		A1	FILTER		FL8002	1-234-177-21	FERRITE 0UH		
791		A1	FILTER		FL8003	1-234-128-21	FERRITE 0UH		
792		A1	FILTER		FL8004	1-234-124-21	FERRITE 0UH		
793		A1	FILTER		FL8005	1-234-177-21	FERRITE 0UH		
794		A1	FILTER		FL8401	1-234-177-21	FERRITE 0UH		
795		A1	IC		IC8001	8-749-925-00	IC TK11819MTL		
796		A1	IC		IC8002	8-759-579-31	IC PQ20WZ1U		
797		A1	IC		IC8003	8-759-667-18	IC PQ018EZ01ZP		
798		A1	IC		IC8200	8-752-080-04	IC CXA2069Q		
799		A1	IC		IC8230	8-752-080-04	IC CXA2069Q		
800		A1	IC		IC8400	8-752-108-36	IC CXA2171AQ-T6		
801		A1	IC		IC8402	8-759-548-56	IC M52055FP		
802		A1	IC		IC8404	8-759-533-85	IC L88M05T-FA-TL		
803		A1	IC		IC8405	8-759-460-79	IC BA09FP-E2		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
804		A1	IC		IC8600	6-704-643-01	IC R3112N221A-TR-FA		
805		A1	IC		IC8602	8-759-745-64	IC NJM4560M		
806		A1	IC		IC8603	6-704-777-01	IC NJU26103FR1		
807		A1	IC		IC8604	8-759-745-64	IC NJM4560M		
808		A1	IC		IC8605	8-759-745-64	IC NJM4560M		
809		A1	IC		IC8606	8-759-475-43	IC TC74LCX125FT(EL)		
810		A1	IC		IC8607	6-702-527-01	IC AK5380VT-E2		
811		A1	IC		IC8608	8-759-643-25	IC AK4351VT		
812		A1	IC		IC8609	8-759-475-43	IC TC74LCX125FT(EL)		
813		A1	IC		IC8800	8-759-278-58	IC NJM4558V-TE2		
814		A1	IC		IC8801	8-759-278-58	IC NJM4558V-TE2		
815		A1	IC		IC8802	8-759-278-58	IC NJM4558V-TE2		
816		A1	IC		IC8803	8-759-082-61	IC TC4W53FU		
817		A1	IC		IC8804	8-759-278-58	IC NJM4558V-TE2		
818		A1	IC		IC8805	6-702-716-01	IC NJW1149		
819		A1	IC		IC8806	8-759-278-58	IC NJM4558V-TE2		
820		A1	JACK		J8230	1-816-393-11	JACK BLOCK, PIN 3P		
821		A1	JACK		J8231	1-565-838-11	JACK BLOCK, PIN 2P		
822		A1	JACK		J8232	1-816-393-11	JACK BLOCK, PIN 3P		
823		A1	JACK		J8233	1-565-838-11	JACK BLOCK, PIN 2P		
824		A1	JACK		J8234	1-780-051-11	TERMINAL BLOCK, (S)		
825		A1	JACK		J8235	1-565-838-11	JACK BLOCK, PIN 2P		
826		A1	JACK		J8236	1-817-098-11	PIN JACK BLOCK 3P		
827		A1	JACK		J8237	1-764-143-11	JACK		
828		A1	JACK		J8238	1-764-143-11	JACK		
829		A1	COIL		L8001	1-412-058-11	INDUCTOR 10UH		
830		A1	COIL		L8003	1-416-510-21	INDUCTOR 100UH		
831		A1	COIL		L8004	1-416-510-21	INDUCTOR 100UH		
832		A1	COIL		L8005	1-416-344-11	INDUCTOR 10UH		
833		A1	COIL		L8006	1-416-510-21	INDUCTOR 100UH		
834		A1	COIL		L8007	1-419-707-11	INDUCTOR 1000UH		
835		A1	COIL		L8008	1-412-058-11	INDUCTOR 10UH		
836		A1	COIL		L8200	1-469-856-21	INDUCTOR 10UH		
837		A1	COIL		L8400	1-412-058-11	INDUCTOR 10UH		
838		A1	COIL		L8401	1-412-060-11	INDUCTOR 22UH		
839		A1	COIL		L8600	1-412-029-11	INDUCTOR 10UH		
840		A1	COIL		L8601	1-412-029-11	INDUCTOR 10UH		
841		A1	COIL		L8603	1-469-844-11	INDUCTOR 2.2UH		
842		A1	COIL		L8604	1-412-029-11	INDUCTOR 10UH		
843		A1	COIL		L8800	1-412-058-11	INDUCTOR 10UH		
844		A1	COIL		L8801	1-412-058-11	INDUCTOR 10UH		
845		A1	COIL		L8802	1-412-058-11	INDUCTOR 10UH		
846		A1	TRANSISTOR		Q8001	8-729-907-00	TRANSISTOR DTC114EU		
847		A1	TRANSISTOR		Q8002	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
848		A1	TRANSISTOR		Q8003	8-729-216-22	TRANSISTOR 2SA1162-G		
849		A1	TRANSISTOR		Q8004	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
850		A1	TRANSISTOR		Q8005	8-729-422-29	TRANSISTOR 2SD601A-S		
851		A1	TRANSISTOR		Q8006	8-729-422-29	TRANSISTOR 2SD601A-S		
852		A1	TRANSISTOR		Q8008	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
853		A1	TRANSISTOR		Q8010	8-729-907-00	TRANSISTOR DTC114EU		
854		A1	TRANSISTOR		Q8011	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
855		A1	TRANSISTOR		Q8012	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
856		A1	TRANSISTOR		Q8013	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
857		A1	TRANSISTOR		Q8200	8-729-905-35	TRANSISTOR 2SC4081-R		
858		A1	TRANSISTOR		Q8201	8-729-905-35	TRANSISTOR 2SC4081-R		
859		A1	TRANSISTOR		Q8202	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
860		A1	TRANSISTOR		Q8204	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
861		A1	TRANSISTOR		Q8205	8-729-905-35	TRANSISTOR 2SC4081-R		
862		A1	TRANSISTOR		Q8206	8-729-905-35	TRANSISTOR 2SC4081-R		
863		A1	TRANSISTOR		Q8207	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
864		A1	TRANSISTOR		Q8208	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
865		A1	TRANSISTOR		Q8210	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
866		A1	TRANSISTOR		Q8230	8-729-905-35	TRANSISTOR 2SC4081-R		
867		A1	TRANSISTOR		Q8231	8-729-905-35	TRANSISTOR 2SC4081-R		
868		A1	TRANSISTOR		Q8232	8-729-905-35	TRANSISTOR 2SC4081-R		
869		A1	TRANSISTOR		Q8233	8-729-905-35	TRANSISTOR 2SC4081-R		
870		A1	TRANSISTOR		Q8234	8-729-216-22	TRANSISTOR 2SA1162-G		
871		A1	TRANSISTOR		Q8235	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
872		A1	TRANSISTOR		Q8236	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
873		A1	TRANSISTOR		Q8237	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
874		A1	TRANSISTOR		Q8238	8-729-216-22	TRANSISTOR 2SA1162-G		
875		A1	TRANSISTOR		Q8239	8-729-216-22	TRANSISTOR 2SA1162-G		
876		A1	TRANSISTOR		Q8240	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
877		A1	TRANSISTOR		Q8400	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
878		A1	TRANSISTOR		Q8401	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
879		A1	TRANSISTOR		Q8402	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
880		A1	TRANSISTOR		Q8403	8-729-905-35	TRANSISTOR 2SC4081-R		
881		A1	TRANSISTOR		Q8404	8-729-905-35	TRANSISTOR 2SC4081-R		
882		A1	TRANSISTOR		Q8405	8-729-905-35	TRANSISTOR 2SC4081-R		
883		A1	TRANSISTOR		Q8406	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
884		A1	TRANSISTOR		Q8407	8-729-907-00	TRANSISTOR DTC114EU		
885		A1	TRANSISTOR		Q8410	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
886		A1	TRANSISTOR		Q8411	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
887		A1	TRANSISTOR		Q8412	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
888		A1	TRANSISTOR		Q8600	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
889		A1	TRANSISTOR		Q8801	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
890		A1	TRANSISTOR		Q8802	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
891		A1	TRANSISTOR		Q8803	8-729-905-35	TRANSISTOR 2SC4081-R		
892		A1	TRANSISTOR		Q8804	8-729-905-35	TRANSISTOR 2SC4081-R		
893		A1	TRANSISTOR		Q8805	8-729-907-00	TRANSISTOR DTC114EU		
894		A1	TRANSISTOR		Q8806	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
895		A1	TRANSISTOR		Q8807	8-729-216-22	TRANSISTOR 2SA1162-G		
896		A1	TRANSISTOR		Q8808	8-729-216-22	TRANSISTOR 2SA1162-G		
897		A1	TRANSISTOR		Q8809	8-729-907-00	TRANSISTOR DTC114EU		
898		A1	TRANSISTOR		Q8810	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
899		A1	RESISTOR		R8002	1-216-864-11	SHORT CHIP 0		
900		A1	RESISTOR		R8003	1-216-833-11	METAL CHIP 10K 5% 1/10W		
901		A1	RESISTOR		R8004	1-216-833-11	METAL CHIP 10K 5% 1/10W		
902		A1	RESISTOR		R8005	1-216-809-11	METAL CHIP 100 5% 1/10W		
903		A1	RESISTOR		R8006	1-216-809-11	METAL CHIP 100 5% 1/10W		
904		A1	RESISTOR		R8007	1-216-809-11	METAL CHIP 100 5% 1/10W		
905		A1	RESISTOR		R8008	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
906		A1	RESISTOR		R8009	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
907		A1	RESISTOR		R8010	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
908		A1	RESISTOR		R8011	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
909		A1	RESISTOR		R8012	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
910		A1	RESISTOR		R8014	1-216-864-11	SHORT CHIP 0		
911		A1	RESISTOR		R8015	1-216-833-11	METAL CHIP 10K 5% 1/10W		
912		A1	RESISTOR		R8016	1-216-813-11	METAL CHIP 220 5% 1/10W		
913		A1	RESISTOR		R8017	1-216-813-11	METAL CHIP 220 5% 1/10W		
914		A1	RESISTOR		R8018	1-216-813-11	METAL CHIP 220 5% 1/10W		
915		A1	RESISTOR		R8019	1-216-864-11	SHORT CHIP 0		
916		A1	RESISTOR		R8020	1-216-864-11	SHORT CHIP 0		
917		A1	RESISTOR		R8021	1-216-835-11	METAL CHIP 15K 5% 1/10W		
918		A1	RESISTOR		R8022	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
919		A1	RESISTOR		R8023	1-216-835-11	METAL CHIP 15K 5% 1/10W		
920		A1	RESISTOR		R8024	1-216-805-11	METAL CHIP 47 5% 1/10W		
921		A1	RESISTOR		R8025	1-216-805-11	METAL CHIP 47 5% 1/10W		
922		A1	RESISTOR		R8026	1-216-833-11	METAL CHIP 10K 5% 1/10W		
923		A1	RESISTOR		R8028	1-216-864-11	SHORT CHIP 0		
924		A1	RESISTOR		R8029	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
925		A1	RESISTOR		R8030	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
926		A1	RESISTOR		R8031	1-216-833-11	METAL CHIP 10K 5% 1/10W		
927		A1	RESISTOR		R8032	1-216-847-11	METAL CHIP 150K 5% 1/10W		
928		A1	RESISTOR		R8033	1-216-837-11	METAL CHIP 22K 5% 1/10W		
929		A1	RESISTOR		R8034	1-216-833-11	METAL CHIP 10K 5% 1/10W		
930		A1	RESISTOR		R8035	1-216-839-11	METAL CHIP 33K 5% 1/10W		
931		A1	RESISTOR		R8036	1-216-813-11	METAL CHIP 220 5% 1/10W		
932		A1	RESISTOR		R8037	1-216-857-11	METAL CHIP 1M 5% 1/10W		
933		A1	RESISTOR		R8038	1-216-847-11	METAL CHIP 150K 5% 1/10W		
934		A1	RESISTOR		R8039	1-216-864-11	SHORT CHIP 0		
935		A1	RESISTOR		R8040	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
936		A1	RESISTOR		R8041	1-216-864-11	SHORT CHIP 0		
937		A1	RESISTOR		R8042	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
938		A1	RESISTOR		R8043	1-216-821-11	METAL CHIP 1K 5% 1/10W		
939		A1	RESISTOR		R8044	1-216-809-11	METAL CHIP 100 5% 1/10W		
940		A1	RESISTOR		R8045	1-216-833-11	METAL CHIP 10K 5% 1/10W		
941		A1	RESISTOR		R8046	1-216-833-11	METAL CHIP 10K 5% 1/10W		
942		A1	RESISTOR		R8047	1-216-864-11	SHORT CHIP 0		
943		A1	RESISTOR		R8048	1-216-833-11	METAL CHIP 10K 5% 1/10W		
944		A1	RESISTOR		R8049	1-216-809-11	METAL CHIP 100 5% 1/10W		
945		A1	RESISTOR		R8050	1-216-809-11	METAL CHIP 100 5% 1/10W		
946		A1	RESISTOR		R8051	1-218-698-11	METAL CHIP 1.8K 0.5% 1/10W		
947		A1	RESISTOR		R8052	1-218-711-11	METAL CHIP 6.2K 0.5% 1/10W		
948		A1	RESISTOR		R8054	1-216-835-11	METAL CHIP 15K 5% 1/10W		
949		A1	RESISTOR		R8055	1-216-821-11	METAL CHIP 1K 5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
950		A1	RESISTOR		R8058	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
951		A1	RESISTOR		R8059	1-216-833-11	METAL CHIP 10K 5% 1/10W		
952		A1	RESISTOR		R8060	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
953		A1	RESISTOR		R8062	1-216-864-11	SHORT CHIP 0		
954		A1	RESISTOR		R8064	1-216-805-11	METAL CHIP 47 5% 1/10W		
955		A1	RESISTOR		R8065	1-216-821-11	METAL CHIP 1K 5% 1/10W		
956		A1	RESISTOR		R8066	1-216-864-11	SHORT CHIP 0		
957		A1	RESISTOR		R8071	1-216-864-11	SHORT CHIP 0		
958		A1	RESISTOR		R8073	1-216-864-11	SHORT CHIP 0		
959		A1	RESISTOR		R8200	1-216-805-11	METAL CHIP 47 5% 1/10W		
960		A1	RESISTOR		R8201	1-216-821-11	METAL CHIP 1K 5% 1/10W		
961		A1	RESISTOR		R8202	1-216-805-11	METAL CHIP 47 5% 1/10W		
962		A1	RESISTOR		R8203	1-216-809-11	METAL CHIP 100 5% 1/10W		
963		A1	RESISTOR		R8204	1-216-821-11	METAL CHIP 1K 5% 1/10W		
964		A1	RESISTOR		R8205	1-216-809-11	METAL CHIP 100 5% 1/10W		
965		A1	RESISTOR		R8206	1-216-809-11	METAL CHIP 100 5% 1/10W		
966		A1	RESISTOR		R8207	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
967		A1	RESISTOR		R8208	1-218-684-11	METAL CHIP 470 0.5% 1/10W		
968		A1	RESISTOR		R8211	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
969		A1	RESISTOR		R8212	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
970		A1	RESISTOR		R8213	1-218-680-11	METAL CHIP 330 0.5% 1/10W		
971		A1	RESISTOR		R8214	1-216-805-11	METAL CHIP 47 5% 1/10W		
972		A1	RESISTOR		R8215	1-216-821-11	METAL CHIP 1K 5% 1/10W		
973		A1	RESISTOR		R8216	1-216-809-11	METAL CHIP 100 5% 1/10W		
974		A1	RESISTOR		R8217	1-216-809-11	METAL CHIP 100 5% 1/10W		
975		A1	RESISTOR		R8218	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
976		A1	RESISTOR		R8219	1-218-684-11	METAL CHIP 470 0.5% 1/10W		
977		A1	RESISTOR		R8220	1-216-805-11	METAL CHIP 47 5% 1/10W		
978		A1	RESISTOR		R8221	1-216-821-11	METAL CHIP 1K 5% 1/10W		
979		A1	RESISTOR		R8222	1-218-680-11	METAL CHIP 330 0.5% 1/10W		
980		A1	RESISTOR		R8223	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
981		A1	RESISTOR		R8224	1-216-809-11	METAL CHIP 100 5% 1/10W		
982		A1	RESISTOR		R8225	1-216-809-11	METAL CHIP 100 5% 1/10W		
983		A1	RESISTOR		R8226	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
984		A1	RESISTOR		R8227	1-218-688-11	METAL CHIP 680 0.5% 1/10W		
985		A1	RESISTOR		R8228	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
986		A1	RESISTOR		R8229	1-218-685-11	METAL CHIP 510 0.5% 1/10W		
987		A1	RESISTOR		R8230	1-165-875-11	CERAMIC CHIP 10UF 10% 10V		
988		A1	RESISTOR		R8231	1-216-809-11	METAL CHIP 100 5% 1/10W		
989		A1	RESISTOR		R8232	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
990		A1	RESISTOR		R8233	1-165-875-11	CERAMIC CHIP 10UF 10% 10V		
991		A1	RESISTOR		R8234	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
992		A1	RESISTOR		R8235	1-218-688-11	METAL CHIP 680 0.5% 1/10W		
993		A1	RESISTOR		R8236	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
994		A1	RESISTOR		R8237	1-218-685-11	METAL CHIP 510 0.5% 1/10W		
995		A1	RESISTOR		R8238	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
996		A1	RESISTOR		R8239	1-216-813-11	METAL CHIP 220 5% 1/10W		
997		A1	RESISTOR		R8240	1-216-809-11	METAL CHIP 100 5% 1/10W		
998		A1	RESISTOR		R8241	1-216-809-11	METAL CHIP 100 5% 1/10W		
999		A1	RESISTOR		R8242	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
1000		A1	RESISTOR		R8243	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
1001		A1	RESISTOR		R8244	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
1002		A1	RESISTOR		R8247	1-216-049-11	RES-CHIP 1K 5% 1/10W		
1003		A1	RESISTOR		R8249	1-218-691-11	METAL CHIP 910 0.5% 1/10W		
1004		A1	RESISTOR		R8253	1-218-693-11	METAL CHIP 1.1K 0.5% 1/10W		
1005		A1	RESISTOR		R8260	1-216-811-11	METAL CHIP 150 5% 1/10W		
1006		A1	RESISTOR		R8261	1-216-811-11	METAL CHIP 150 5% 1/10W		
1007		A1	RESISTOR		R8262	1-216-811-11	METAL CHIP 150 5% 1/10W		
1008		A1	RESISTOR		R8263	1-216-811-11	METAL CHIP 150 5% 1/10W		
1009		A1	RESISTOR		R8264	1-216-811-11	METAL CHIP 150 5% 1/10W		
1010		A1	RESISTOR		R8265	1-216-811-11	METAL CHIP 150 5% 1/10W		
1011		A1	RESISTOR		R8266	1-216-809-11	METAL CHIP 100 5% 1/10W		
1012		A1	RESISTOR		R8267	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1013		A1	RESISTOR		R8268	1-218-344-11	METAL CHIP 7.5K 5% 1/10W		
1014		A1	RESISTOR		R8269	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1015		A1	RESISTOR		R8270	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1016		A1	RESISTOR		R8271	1-218-344-11	METAL CHIP 7.5K 5% 1/10W		
1017		A1	RESISTOR		R8272	1-216-809-11	METAL CHIP 100 5% 1/10W		
1018		A1	RESISTOR		R8273	1-216-811-11	METAL CHIP 150 5% 1/10W		
1019		A1	RESISTOR		R8274	1-216-811-11	METAL CHIP 150 5% 1/10W		
1020		A1	RESISTOR		R8275	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1021		A1	RESISTOR		R8276	1-216-811-11	METAL CHIP 150 5% 1/10W		
1022		A1	RESISTOR		R8277	1-216-811-11	METAL CHIP 150 5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1023		A1	RESISTOR		R8278	1-216-809-11	METAL CHIP 100 5% 1/10W		
1024		A1	RESISTOR		R8279	1-216-811-11	METAL CHIP 150 5% 1/10W		
1025		A1	RESISTOR		R8280	1-216-811-11	METAL CHIP 150 5% 1/10W		
1026		A1	RESISTOR		R8281	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1027		A1	RESISTOR		R8282	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1028		A1	RESISTOR		R8283	1-218-344-11	METAL CHIP 7.5K 5% 1/10W		
1029		A1	RESISTOR		R8284	1-216-809-11	METAL CHIP 100 5% 1/10W		
1030		A1	RESISTOR		R8285	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1031		A1	RESISTOR		R8286	1-218-344-11	METAL CHIP 7.5K 5% 1/10W		
1032		A1	RESISTOR		R8287	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1033		A1	RESISTOR		R8288	1-216-029-00	RES-CHIP 150 5% 1/10W		
1034		A1	RESISTOR		R8289	1-216-029-00	RES-CHIP 150 5% 1/10W		
1035		A1	RESISTOR		R8290	1-216-809-11	METAL CHIP 100 5% 1/10W		
1036		A1	RESISTOR		R8291	1-216-029-00	RES-CHIP 150 5% 1/10W		
1037		A1	RESISTOR		R8292	1-216-029-00	RES-CHIP 150 5% 1/10W		
1038		A1	RESISTOR		R8293	1-216-809-11	METAL CHIP 100 5% 1/10W		
1039		A1	RESISTOR		R8294	1-216-809-11	METAL CHIP 100 5% 1/10W		
1040		A1	RESISTOR		R8295	1-216-809-11	METAL CHIP 100 5% 1/10W		
1041		A1	RESISTOR		R8296	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1042		A1	RESISTOR		R8297	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1043		A1	RESISTOR		R8298	1-216-029-00	RES-CHIP 150 5% 1/10W		
1044		A1	RESISTOR		R8299	1-216-029-00	RES-CHIP 150 5% 1/10W		
1045		A1	RESISTOR		R8300	1-216-809-11	METAL CHIP 100 5% 1/10W		
1046		A1	RESISTOR		R8301	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1047		A1	RESISTOR		R8302	1-218-344-11	METAL CHIP 7.5K 5% 1/10W		
1048		A1	RESISTOR		R8303	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1049		A1	RESISTOR		R8304	1-218-344-11	METAL CHIP 7.5K 5% 1/10W		
1050		A1	RESISTOR		R8305	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1051		A1	RESISTOR		R8306	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1052		A1	RESISTOR		R8307	1-216-809-11	METAL CHIP 100 5% 1/10W		
1053		A1	RESISTOR		R8308	1-216-029-00	RES-CHIP 150 5% 1/10W		
1054		A1	RESISTOR		R8309	1-216-029-00	RES-CHIP 150 5% 1/10W		
1055		A1	RESISTOR		R8310	1-216-809-11	METAL CHIP 100 5% 1/10W		
1056		A1	RESISTOR		R8311	1-218-344-11	METAL CHIP 7.5K 5% 1/10W		
1057		A1	RESISTOR		R8312	1-216-809-11	METAL CHIP 100 5% 1/10W		
1058		A1	RESISTOR		R8313	1-216-029-00	RES-CHIP 150 5% 1/10W		
1059		A1	RESISTOR		R8314	1-216-029-00	RES-CHIP 150 5% 1/10W		
1060		A1	RESISTOR		R8315	1-216-809-11	METAL CHIP 100 5% 1/10W		
1061		A1	RESISTOR		R8316	1-218-344-11	METAL CHIP 7.5K 5% 1/10W		
1062		A1	RESISTOR		R8317	1-216-809-11	METAL CHIP 100 5% 1/10W		
1063		A1	RESISTOR		R8323	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1064		A1	RESISTOR		R8324	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1065		A1	RESISTOR		R8325	1-216-029-00	RES-CHIP 150 5% 1/10W		
1066		A1	RESISTOR		R8326	1-216-029-00	RES-CHIP 150 5% 1/10W		
1067		A1	RESISTOR		R8327	1-216-809-11	METAL CHIP 100 5% 1/10W		
1068		A1	RESISTOR		R8328	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1069		A1	RESISTOR		R8329	1-218-344-11	METAL CHIP 7.5K 5% 1/10W		
1070		A1	RESISTOR		R8330	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1071		A1	RESISTOR		R8331	1-218-344-11	METAL CHIP 7.5K 5% 1/10W		
1072		A1	RESISTOR		R8332	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1073		A1	RESISTOR		R8333	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1074		A1	RESISTOR		R8334	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1075		A1	RESISTOR		R8335	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1076		A1	RESISTOR		R8336	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1077		A1	RESISTOR		R8337	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1078		A1	RESISTOR		R8338	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1079		A1	RESISTOR		R8339	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1080		A1	RESISTOR		R8340	1-216-809-11	METAL CHIP 100 5% 1/10W		
1081		A1	RESISTOR		R8341	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1082		A1	RESISTOR		R8342	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1083		A1	RESISTOR		R8343	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1084		A1	RESISTOR		R8344	1-216-809-11	METAL CHIP 100 5% 1/10W		
1085		A1	RESISTOR		R8345	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1086		A1	RESISTOR		R8346	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1087		A1	RESISTOR		R8400	1-216-809-11	METAL CHIP 100 5% 1/10W		
1088		A1	RESISTOR		R8401	1-216-809-11	METAL CHIP 100 5% 1/10W		
1089		A1	RESISTOR		R8402	1-216-809-11	METAL CHIP 100 5% 1/10W		
1090		A1	RESISTOR		R8403	1-218-666-11	METAL CHIP 82 0.5% 1/10W		
1091		A1	RESISTOR		R8404	1-216-651-11	METAL CHIP 1K 0.5% 1/10W		
1092		A1	RESISTOR		R8405	1-218-666-11	METAL CHIP 82 0.5% 1/10W		
1093		A1	RESISTOR		R8406	1-216-651-11	METAL CHIP 1K 0.5% 1/10W		
1094		A1	RESISTOR		R8407	1-218-666-11	METAL CHIP 82 0.5% 1/10W		
1095		A1	RESISTOR		R8408	1-216-651-11	METAL CHIP 1K 0.5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1096		A1	RESISTOR		R8410	1-216-809-11	METAL CHIP 100 5% 1/10W		
1097		A1	RESISTOR		R8411	1-216-809-11	METAL CHIP 100 5% 1/10W		
1098		A1	RESISTOR		R8412	1-216-809-11	METAL CHIP 100 5% 1/10W		
1099		A1	RESISTOR		R8413	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
1100		A1	RESISTOR		R8414	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
1101		A1	RESISTOR		R8415	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
1102		A1	RESISTOR		R8422	1-216-809-11	METAL CHIP 100 5% 1/10W		
1103		A1	RESISTOR		R8423	1-216-809-11	METAL CHIP 100 5% 1/10W		
1104		A1	RESISTOR		R8425	1-216-809-11	METAL CHIP 100 5% 1/10W		
1105		A1	RESISTOR		R8427	1-216-809-11	METAL CHIP 100 5% 1/10W		
1106		A1	RESISTOR		R8429	1-218-285-11	METAL CHIP 75 5% 1/10W		
1107		A1	RESISTOR		R8430	1-216-805-11	METAL CHIP 47 5% 1/10W		
1108		A1	RESISTOR		R8431	1-216-809-11	METAL CHIP 100 5% 1/10W		
1109		A1	RESISTOR		R8432	1-216-805-11	METAL CHIP 47 5% 1/10W		
1110		A1	RESISTOR		R8434	1-216-809-11	METAL CHIP 100 5% 1/10W		
1111		A1	RESISTOR		R8435	1-216-851-11	METAL CHIP 330K 5% 1/10W		
1112		A1	RESISTOR		R8436	1-216-809-11	METAL CHIP 100 5% 1/10W		
1113		A1	RESISTOR		R8439	1-218-285-11	METAL CHIP 75 5% 1/10W		
1114		A1	RESISTOR		R8440	1-218-285-11	METAL CHIP 75 5% 1/10W		
1115		A1	RESISTOR		R8441	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1116		A1	RESISTOR		R8442	1-218-716-11	METAL CHIP 10K 0.5% 1/10W		
1117		A1	RESISTOR		R8443	1-216-864-11	SHORT CHIP 0		
1118		A1	RESISTOR		R8445	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1119		A1	RESISTOR		R8446	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1120		A1	RESISTOR		R8447	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1121		A1	RESISTOR		R8448	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1122		A1	RESISTOR		R8450	1-216-809-11	METAL CHIP 100 5% 1/10W		
1123		A1	RESISTOR		R8451	1-216-809-11	METAL CHIP 100 5% 1/10W		
1124		A1	RESISTOR		R8452	1-216-809-11	METAL CHIP 100 5% 1/10W		
1125		A1	RESISTOR		R8454	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
1126		A1	RESISTOR		R8455	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
1127		A1	RESISTOR		R8456	1-216-039-00	RES-CHIP 390 5% 1/10W		
1128		A1	RESISTOR		R8457	1-216-805-11	METAL CHIP 47 5% 1/10W		
1129		A1	RESISTOR		R8458	1-216-805-11	METAL CHIP 47 5% 1/10W		
1130		A1	RESISTOR		R8459	1-216-809-11	METAL CHIP 100 5% 1/10W		
1131		A1	RESISTOR		R8460	1-216-864-11	SHORT CHIP 0		
1132		A1	RESISTOR		R8466	1-216-864-11	SHORT CHIP 0		
1133		A1	RESISTOR		R8470	1-216-864-11	SHORT CHIP 0		
1134		A1	RESISTOR		R8600	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1135		A1	RESISTOR		R8601	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1136		A1	RESISTOR		R8602	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1137		A1	RESISTOR		R8603	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
1138		A1	RESISTOR		R8604	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
1139		A1	RESISTOR		R8605	1-216-848-11	METAL CHIP 180K 5% 1/10W		
1140		A1	RESISTOR		R8606	1-216-848-11	METAL CHIP 180K 5% 1/10W		
1141		A1	RESISTOR		R8612	1-216-809-11	METAL CHIP 100 5% 1/10W		
1142		A1	RESISTOR		R8613	1-216-809-11	METAL CHIP 100 5% 1/10W		
1143		A1	RESISTOR		R8616	1-216-857-11	METAL CHIP 1M 5% 1/10W		
1144		A1	RESISTOR		R8617	1-218-832-11	METAL CHIP 240 0.5% 1/10W		
1145		A1	RESISTOR		R8618	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1146		A1	RESISTOR		R8619	1-216-803-11	METAL CHIP 33 5% 1/10W		
1147		A1	RESISTOR		R8620	1-216-803-11	METAL CHIP 33 5% 1/10W		
1148		A1	RESISTOR		R8621	1-216-817-11	METAL CHIP 470 5% 1/10W		
1149		A1	RESISTOR		R8622	1-216-814-11	METAL CHIP 270 5% 1/10W		
1150		A1	RESISTOR		R8623	1-216-817-11	METAL CHIP 470 5% 1/10W		
1151		A1	RESISTOR		R8624	1-216-803-11	METAL CHIP 33 5% 1/10W		
1152		A1	RESISTOR		R8625	1-216-803-11	METAL CHIP 33 5% 1/10W		
1153		A1	RESISTOR		R8626	1-216-803-11	METAL CHIP 33 5% 1/10W		
1154		A1	RESISTOR		R8627	1-216-803-11	METAL CHIP 33 5% 1/10W		
1155		A1	RESISTOR		R8628	1-216-803-11	METAL CHIP 33 5% 1/10W		
1156		A1	RESISTOR		R8629	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1157		A1	RESISTOR		R8630	1-216-803-11	METAL CHIP 33 5% 1/10W		
1158		A1	RESISTOR		R8631	1-216-803-11	METAL CHIP 33 5% 1/10W		
1159		A1	RESISTOR		R8632	1-216-803-11	METAL CHIP 33 5% 1/10W		
1160		A1	RESISTOR		R8633	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1161		A1	RESISTOR		R8634	1-216-803-11	METAL CHIP 33 5% 1/10W		
1162		A1	RESISTOR		R8635	1-216-838-11	METAL CHIP 27K 5% 1/10W		
1163		A1	RESISTOR		R8636	1-216-838-11	METAL CHIP 27K 5% 1/10W		
1164		A1	RESISTOR		R8637	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1165		A1	RESISTOR		R8638	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1166		A1	RESISTOR		R8639	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1167		A1	RESISTOR		R8640	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1168		A1	RESISTOR		R8641	1-216-833-11	METAL CHIP 10K 5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1169		A1	RESISTOR		R8642	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1170		A1	RESISTOR		R8643	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1171		A1	RESISTOR		R8644	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1172		A1	RESISTOR		R8645	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1173		A1	RESISTOR		R8646	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1174		A1	RESISTOR		R8647	1-216-813-11	METAL CHIP 220 5% 1/10W		
1175		A1	RESISTOR		R8648	1-216-813-11	METAL CHIP 220 5% 1/10W		
1176		A1	RESISTOR		R8649	1-216-817-11	METAL CHIP 470 5% 1/10W		
1177		A1	RESISTOR		R8650	1-216-817-11	METAL CHIP 470 5% 1/10W		
1178		A1	RESISTOR		R8651	1-216-817-11	METAL CHIP 470 5% 1/10W		
1179		A1	RESISTOR		R8652	1-216-814-11	METAL CHIP 270 5% 1/10W		
1180		A1	RESISTOR		R8653	1-216-803-11	METAL CHIP 33 5% 1/10W		
1181		A1	RESISTOR		R8654	1-216-803-11	METAL CHIP 33 5% 1/10W		
1182		A1	RESISTOR		R8655	1-216-803-11	METAL CHIP 33 5% 1/10W		
1183		A1	RESISTOR		R8656	1-216-803-11	METAL CHIP 33 5% 1/10W		
1184		A1	RESISTOR		R8657	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1185		A1	RESISTOR		R8658	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1186		A1	RESISTOR		R8661	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1187		A1	RESISTOR		R8662	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1188		A1	RESISTOR		R8663	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1189		A1	RESISTOR		R8666	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1190		A1	RESISTOR		R8667	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1191		A1	RESISTOR		R8682	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1192		A1	RESISTOR		R8683	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
1193		A1	RESISTOR		R8684	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
1194		A1	RESISTOR		R8685	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
1195		A1	RESISTOR		R8687	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1196		A1	RESISTOR		R8688	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1197		A1	RESISTOR		R8689	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1198		A1	RESISTOR		R8690	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1199		A1	RESISTOR		R8691	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1200		A1	RESISTOR		R8692	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1201		A1	RESISTOR		R8801	1-218-693-11	METAL CHIP 1.1K 0.5% 1/10W		
1202		A1	RESISTOR		R8802	1-218-693-11	METAL CHIP 1.1K 0.5% 1/10W		
1203		A1	RESISTOR		R8803	1-216-836-11	METAL CHIP 18K 5% 1/10W		
1204		A1	RESISTOR		R8804	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1205		A1	RESISTOR		R8805	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1206		A1	RESISTOR		R8806	1-216-838-11	METAL CHIP 27K 5% 1/10W		
1207		A1	RESISTOR		R8807	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1208		A1	RESISTOR		R8808	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1209		A1	RESISTOR		R8809	1-216-037-00	RES-CHIP 330 5% 1/10W		
1210		A1	RESISTOR		R8810	1-216-037-00	RES-CHIP 330 5% 1/10W		
1211		A1	RESISTOR		R8811	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1212		A1	RESISTOR		R8812	1-216-857-11	METAL CHIP 1M 5% 1/10W		
1213		A1	RESISTOR		R8813	1-216-815-11	METAL CHIP 330 5% 1/10W		
1214		A1	RESISTOR		R8814	1-216-815-11	METAL CHIP 330 5% 1/10W		
1215		A1	RESISTOR		R8815	1-216-864-11	SHORT CHIP 0		
1216		A1	RESISTOR		R8816	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1217		A1	RESISTOR		R8817	1-216-853-11	METAL CHIP 470K 5% 1/10W		
1218		A1	RESISTOR		R8818	1-216-853-11	METAL CHIP 470K 5% 1/10W		
1219		A1	RESISTOR		R8819	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1220		A1	RESISTOR		R8820	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1221		A1	RESISTOR		R8821	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1222		A1	RESISTOR		R8822	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
1223		A1	RESISTOR		R8823	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
1224		A1	RESISTOR		R8824	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1225		A1	RESISTOR		R8825	1-216-809-11	METAL CHIP 100 5% 1/10W		
1226		A1	RESISTOR		R8826	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1227		A1	RESISTOR		R8827	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1228		A1	RESISTOR		R8828	1-216-809-11	METAL CHIP 100 5% 1/10W		
1229		A1	RESISTOR		R8829	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1230		A1	RESISTOR		R8830	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1231		A1	RESISTOR		R8831	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1232		A1	RESISTOR		R8832	1-216-864-11	SHORT CHIP 0		
1233		A1	RESISTOR		R8833	1-216-864-11	SHORT CHIP 0		
1234		A1	RESISTOR		R8836	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1235		A1	RESISTOR		R8837	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1236		A1	RESISTOR		R8838	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1237		A1	RESISTOR		R8839	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1238		A1	RESISTOR		R8840	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1239		A1	RESISTOR		R8841	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
1240		A1	RESISTOR		R8842	1-216-815-11	METAL CHIP 330 5% 1/10W		
1241		A1	RESISTOR		R8843	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1242		A1	RESISTOR		R8845	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1243		A1	RESISTOR		R8846	1-216-857-11	METAL CHIP 1M 5% 1/10W		
1244		A1	RESISTOR		R8848	1-216-838-11	METAL CHIP 27K 5% 1/10W		
1245		A1	RESISTOR		R8849	1-216-836-11	METAL CHIP 18K 5% 1/10W		
1246		A1	RESISTOR		R8850	1-216-864-11	SHORT CHIP 0		
1247		A1	RESISTOR		R8851	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1248		A1	RESISTOR		R8852	1-218-292-11	METAL CHIP 20K 5% 1/10W		
1249		A1	RESISTOR		R8853	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
1250		A1	RESISTOR		R8854	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
1251		A1	RESISTOR		R8855	1-216-840-11	METAL CHIP 39K 5% 1/10W		
1252		A1	RESISTOR		R8856	1-216-837-11	METAL CHIP 22K 5% 1/10W		
1253		A1	RESISTOR		R8857	1-218-292-11	METAL CHIP 20K 5% 1/10W		
1254		A1	RESISTOR		R8858	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1255		A1	RESISTOR		R8859	1-216-809-11	METAL CHIP 100 5% 1/10W		
1256		A1	RESISTOR		R8860	1-216-809-11	METAL CHIP 100 5% 1/10W		
1257		A1	RESISTOR		R8863	1-218-292-11	METAL CHIP 20K 5% 1/10W		
1258		A1	RESISTOR		R8864	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
1259		A1	RESISTOR		R8865	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
1260		A1	RESISTOR		R8866	1-218-292-11	METAL CHIP 20K 5% 1/10W		
1261		A1	RESISTOR		R8869	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
1262		A1	RESISTOR		R8870	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
1263		A1	RESISTOR		R8871	1-216-864-11	SHORT CHIP 0		
1264		A1	TUNER		TU8001	8-598-593-50	TUNER, FSS BTF-WA421		
1265		A1	VARISTOR		VD9400	1-803-974-21	VARISTOR, CHIP (1608)		
1266		A1	VARISTOR		VD9401	1-803-974-21	VARISTOR, CHIP (1608)		
1267		A1	VARISTOR		VD9402	1-803-974-21	VARISTOR, CHIP (1608)		
1268		A1	VARISTOR		VD9403	1-803-974-21	VARISTOR, CHIP (1608)		
1269		A1	VARISTOR		VD9404	1-803-974-21	VARISTOR, CHIP (1608)		
1270		A1	VARISTOR		VD9405	1-803-974-21	VARISTOR, CHIP (1608)		
1271		A1	VARISTOR		VD9406	1-803-974-21	VARISTOR, CHIP (1608)		
1272		A1	VARISTOR		VD9407	1-803-974-21	VARISTOR, CHIP (1608)		
1273		A1	VARISTOR		VD9408	1-803-974-21	VARISTOR, CHIP (1608)		
1274		A1	VARISTOR		VD9409	1-803-974-21	VARISTOR, CHIP (1608)		
1275		A1	VARISTOR		VD9410	1-803-974-21	VARISTOR, CHIP (1608)		
1276		A1	VARISTOR		VD9411	1-803-974-21	VARISTOR, CHIP (1608)		
1277		A1	VARISTOR		VD9412	1-803-974-21	VARISTOR, CHIP (1608)		
1278		A1	VARISTOR		VD9413	1-803-974-21	VARISTOR, CHIP (1608)		
1279		A1	VARISTOR		VD9414	1-803-974-21	VARISTOR, CHIP (1608)		
1280		A1	CRYSTAL		X8400	1-813-124-21	VIBRATOR, CERAMIC		
1281		A1	CRYSTAL		X8600	1-813-094-11	VIBRATOR, CRYSTAL		
1282		J2	CONNECTOR		CN2402	1-770-703-11	CONNECTOR, FFC/FPC 20P		
1283		MS2A	CAPACITOR		C2000	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1284		MS2A	CAPACITOR		C2003	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1285		MS2A	CAPACITOR		C2006	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1286		MS2A	CAPACITOR		C2011	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1287		MS2A	CAPACITOR		C2014	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1288		MS2A	CAPACITOR		C2015	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1289		MS2A	CAPACITOR		C2016	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1290		MS2A	CAPACITOR		C2017	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1291		MS2A	CAPACITOR		C2024	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1292		MS2A	CAPACITOR		C2025	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1293		MS2A	CAPACITOR		C2026	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1294		MS2A	CAPACITOR		C2027	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V		
1295		MS2A	CAPACITOR		C2028	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1296		MS2A	CAPACITOR		C2029	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1297		MS2A	CAPACITOR		C2100	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1298		MS2A	CAPACITOR		C2101	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1299		MS2A	CAPACITOR		C2102	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1300		MS2A	CAPACITOR		C2103	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1301		MS2A	CAPACITOR		C2105	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1302		MS2A	CAPACITOR		C2109	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V		
1303		MS2A	CAPACITOR		C2110	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1304		MS2A	CAPACITOR		C2111	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1305		MS2A	CAPACITOR		C2112	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1306		MS2A	CAPACITOR		C2113	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1307		MS2A	CAPACITOR		C2114	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V		
1308		MS2A	CAPACITOR		C2115	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1309		MS2A	CAPACITOR		C2116	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1310		MS2A	CAPACITOR		C2117	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1311		MS2A	CAPACITOR		C2118	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1312		MS2A	CAPACITOR		C2119	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1313		MS2A	CAPACITOR		C2120	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1314		MS2A	CAPACITOR		C2121	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1315		MS2A	CAPACITOR		C2122	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1316		MS2A	CAPACITOR		C2123	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1317		MS2A	CAPACITOR		C2124	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1318		MS2A	CAPACITOR		C2125	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1319		MS2A	CAPACITOR		C2126	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1320		MS2A	CAPACITOR		C2127	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1321		MS2A	CAPACITOR		C2128	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1322		MS2A	CAPACITOR		C2129	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1323		MS2A	CAPACITOR		C2130	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1324		MS2A	CAPACITOR		C2131	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1325		MS2A	CAPACITOR		C2132	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1326		MS2A	CAPACITOR		C2133	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1327		MS2A	CAPACITOR		C2134	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1328		MS2A	CAPACITOR		C2135	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1329		MS2A	CAPACITOR		C2136	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
1330		MS2A	CAPACITOR		C2137	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1331		MS2A	CAPACITOR		C2138	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1332		MS2A	CAPACITOR		C2200	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1333		MS2A	CAPACITOR		C2201	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1334		MS2A	CAPACITOR		C2202	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1335		MS2A	CAPACITOR		C2203	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1336		MS2A	CAPACITOR		C2204	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1337		MS2A	CAPACITOR		C2205	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1338		MS2A	CAPACITOR		C2206	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1339		MS2A	CAPACITOR		C2207	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1340		MS2A	CAPACITOR		C2208	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1341		MS2A	CAPACITOR		C2209	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1342		MS2A	CAPACITOR		C2210	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1343		MS2A	CAPACITOR		C2211	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1344		MS2A	CAPACITOR		C2212	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1345		MS2A	CAPACITOR		C2213	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1346		MS2A	CAPACITOR		C2214	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1347		MS2A	CAPACITOR		C2215	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1348		MS2A	CAPACITOR		C2216	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1349		MS2A	CAPACITOR		C2217	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1350		MS2A	CAPACITOR		C2218	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1351		MS2A	CAPACITOR		C2219	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1352		MS2A	CAPACITOR		C2220	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1353		MS2A	CAPACITOR		C2221	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1354		MS2A	CAPACITOR		C2222	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1355		MS2A	CAPACITOR		C2223	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1356		MS2A	CAPACITOR		C2224	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1357		MS2A	CAPACITOR		C2225	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1358		MS2A	CAPACITOR		C2226	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1359		MS2A	CAPACITOR		C2227	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1360		MS2A	CAPACITOR		C2228	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1361		MS2A	CAPACITOR		C2229	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1362		MS2A	CAPACITOR		C2230	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1363		MS2A	CAPACITOR		C2231	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1364		MS2A	CAPACITOR		C2232	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1365		MS2A	CAPACITOR		C2233	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1366		MS2A	CAPACITOR		C2234	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1367		MS2A	CAPACITOR		C2235	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1368		MS2A	CAPACITOR		C2236	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1369		MS2A	CAPACITOR		C2237	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1370		MS2A	CAPACITOR		C2238	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1371		MS2A	CAPACITOR		C2239	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1372		MS2A	CAPACITOR		C2240	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1373		MS2A	CAPACITOR		C2241	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1374		MS2A	CAPACITOR		C2242	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1375		MS2A	CAPACITOR		C2243	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1376		MS2A	CAPACITOR		C2244	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1377		MS2A	CAPACITOR		C2245	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1378		MS2A	CAPACITOR		C2246	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
1379		MS2A	CAPACITOR		C2247	1-126-208-21	ELECT CHIP 47UF 20.00% 4V		
1380		MS2A	CAPACITOR		C2248	1-126-208-21	ELECT CHIP 47UF 20.00% 4V		
1381		MS2A	CONNECTOR	*	CN2100	1-794-959-21	PIN, CONNECTOR (PWB, PRINT)20P		
1382		MS2A	DIODE		D2000	8-719-081-97	DIODE MMDL914T1		
1383		MS2A	DIODE		D2001	6-500-019-01	DIODE MM3Z3V9ST1		
1384		MS2A	DIODE		D2200	6-500-019-01	DIODE MM3Z3V9ST1		
1385		MS2A	DIODE		D2201	6-500-019-01	DIODE MM3Z3V9ST1		
1386		MS2A	DIODE		D2202	6-500-019-01	DIODE MM3Z3V9ST1		
1387		MS2A	FERRITE BEAD		FB2003	1-500-451-11	FERRITE 0UH		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1388		MS2A	FERRITE BEAD		FB2004	1-500-451-11	FERRITE 0UH		
1389		MS2A	FERRITE BEAD		FB2100	1-414-921-11	FERRITE 0UH		
1390		MS2A	FERRITE BEAD	*	FB2101	1-469-670-21	FERRITE 0UH		
1391		MS2A	FERRITE BEAD		FB2102	1-414-228-11	FERRITE 0UH		
1392		MS2A	FERRITE BEAD		FB2103	1-414-228-11	FERRITE 0UH		
1393		MS2A	FERRITE BEAD		FB2104	1-414-921-11	FERRITE 0UH		
1394		MS2A	FERRITE BEAD	*	FB2105	1-469-670-21	FERRITE 0UH		
1395		MS2A	FERRITE BEAD	*	FB2200	1-469-670-21	FERRITE 0UH		
1396		MS2A	FERRITE BEAD	*	FB2201	1-469-670-21	FERRITE 0UH		
1397		MS2A	FERRITE BEAD	*	FB2202	1-469-670-21	FERRITE 0UH		
1398		MS2A	FERRITE BEAD	*	FB2203	1-469-670-21	FERRITE 0UH		
1399		MS2A	FERRITE BEAD	*	FB2204	1-469-670-21	FERRITE 0UH		
1400		MS2A	IC		IC2000	8-759-832-05	IC BA18BC0FP-E2		
1401		MS2A	IC		IC2003	6-702-812-11	IC CY27027ZCT		
1402		MS2A	IC		IC2004	8-759-331-27	IC MM1096AFF		
1403		MS2A	IC		IC2006	8-759-698-31	IC TC7WH74FK(TE85R)		
1404		MS2A	IC		IC2007	8-759-698-08	IC SN74CBTLV1G125DCKR		
1405		MS2A	IC		IC2010	8-759-698-31	IC TC7WH74FK(TE85R)		
1406		MS2A	IC		IC2101	8-759-698-08	IC SN74CBTLV1G125DCKR		
1407		MS2A	IC		IC2102	8-759-331-71	IC NJM4558E(TE2)		
1408		MS2A	IC		IC2103	6-702-951-01	IC SN65LVDT41PWR		
1409		MS2A	IC		IC2104	8-759-665-50	IC AK4352VT-E2		
1410		MS2A	IC		IC2105	6-704-521-01	IC MB93493PB-GE1		
1411		MS2A	IC		IC2106	8-759-672-79	IC M24C02-WMN6T(A)		
1412		MS2A	IC		IC2200	6-702-511-01	IC MT48LC8M16A2TG-75-Y95W		
1413		MS2A	IC		IC2201	6-702-511-01	IC MT48LC8M16A2TG-75-Y95W		
1414		MS2A	IC		IC2202	6-803-937-01	IC MBM29LV160BE-90TN-MS2FUV103		
1415		MS2A	IC		IC2203	6-704-509-01	IC MB93403-26PB-GE1		
1416		MS2A	COIL		L2004	1-469-555-21	INDUCTOR 10UH		
1417		MS2A	COIL		L2100	1-469-561-21	INDUCTOR 100UH		
1418		MS2A	TRANSISTOR		Q2000	8-729-030-54	TRANSISTOR MSB1218A-RT1		
1419		MS2A	TRANSISTOR		Q2001	8-729-013-28	TRANSISTOR HN1B01FU-TE85R		
1420		MS2A	TRANSISTOR		Q2100	8-729-928-81	TRANSISTOR DTC144EE		
1421		MS2A	TRANSISTOR		Q2101	8-729-928-27	TRANSISTOR DTA144EE		
1422		MS2A	TRANSISTOR		Q2102	8-729-927-99	TRANSISTOR 2SC4617R		
1423		MS2A	TRANSISTOR		Q2103	8-729-927-99	TRANSISTOR 2SC4617R		
1424		MS2A	TRANSISTOR		Q2305	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
1425		MS2A	TRANSISTOR		Q2306	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
1426		MS2A	RESISTOR		R2005	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
1427		MS2A	RESISTOR		R2014	1-218-990-11	SHORT CHIP 0		
1428		MS2A	RESISTOR		R2015	1-218-990-11	SHORT CHIP 0		
1429		MS2A	RESISTOR		R2016	1-218-933-11	RES-CHIP 22 5% 1/16W		
1430		MS2A	RESISTOR		R2017	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
1431		MS2A	RESISTOR		R2021	1-218-937-11	RES-CHIP 47 5% 1/16W		
1432		MS2A	RESISTOR		R2022	1-218-937-11	RES-CHIP 47 5% 1/16W		
1433		MS2A	RESISTOR		R2023	1-218-990-11	SHORT CHIP 0		
1434		MS2A	RESISTOR		R2040	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1435		MS2A	RESISTOR		R2057	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W		
1436		MS2A	RESISTOR		R2058	1-208-700-11	METAL CHIP 5.1K 0.5% 1/16W		
1437		MS2A	RESISTOR		R2059	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1438		MS2A	RESISTOR		R2060	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1439		MS2A	RESISTOR		R2061	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1440		MS2A	RESISTOR		R2062	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1441		MS2A	RESISTOR		R2063	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1442		MS2A	RESISTOR		R2064	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1443		MS2A	RESISTOR		R2065	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1444		MS2A	RESISTOR		R2066	1-216-864-11	SHORT CHIP 0		
1445		MS2A	RESISTOR		R2067	1-216-864-11	SHORT CHIP 0		
1446		MS2A	RESISTOR		R2082	1-218-990-11	SHORT CHIP 0		
1447		MS2A	RESISTOR		R2083	1-218-937-11	RES-CHIP 47 5% 1/16W		
1448		MS2A	RESISTOR		R2084	1-218-937-11	RES-CHIP 47 5% 1/16W		
1449		MS2A	RESISTOR		R2088	1-218-937-11	RES-CHIP 47 5% 1/16W		
1450		MS2A	RESISTOR		R2089	1-218-990-11	SHORT CHIP 0		
1451		MS2A	RESISTOR		R2090	1-218-990-11	SHORT CHIP 0		
1452		MS2A	RESISTOR		R2091	1-218-990-11	SHORT CHIP 0		
1453		MS2A	RESISTOR		R2092	1-218-990-11	SHORT CHIP 0		
1454		MS2A	RESISTOR		R2094	1-218-990-11	SHORT CHIP 0		
1455		MS2A	RESISTOR		R2095	1-218-933-11	RES-CHIP 22 5% 1/16W		
1456		MS2A	RESISTOR		R2096	1-218-933-11	RES-CHIP 22 5% 1/16W		
1457		MS2A	RESISTOR		R2097	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1458		MS2A	RESISTOR		R2100	1-218-941-81	RES-CHIP 100 5% 1/16W		
1459		MS2A	RESISTOR		R2102	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
1460		MS2A	RESISTOR		R2103	1-218-965-11	RES-CHIP 10K 5% 1/16W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1461		MS2A	RESISTOR		R2106	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1462		MS2A	RESISTOR		R2108	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1463		MS2A	RESISTOR		R2109	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1464		MS2A	RESISTOR		R2112	1-218-990-11	SHORT CHIP 0		
1465		MS2A	RESISTOR		R2113	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1466		MS2A	RESISTOR		R2114	1-219-606-11	METAL CHIP 100K 0.5% 1/16W		
1467		MS2A	RESISTOR		R2115	1-208-715-11	METAL CHIP 22K 0.5% 1/16W		
1468		MS2A	RESISTOR		R2116	1-219-606-11	METAL CHIP 100K 0.5% 1/16W		
1469		MS2A	RESISTOR		R2117	1-208-715-11	METAL CHIP 22K 0.5% 1/16W		
1470		MS2A	RESISTOR		R2118	1-208-715-11	METAL CHIP 22K 0.5% 1/16W		
1471		MS2A	RESISTOR		R2119	1-208-715-11	METAL CHIP 22K 0.5% 1/16W		
1472		MS2A	RESISTOR		R2120	1-208-715-11	METAL CHIP 22K 0.5% 1/16W		
1473		MS2A	RESISTOR		R2122	1-208-715-11	METAL CHIP 22K 0.5% 1/16W		
1474		MS2A	RESISTOR		R2123	1-219-606-11	METAL CHIP 100K 0.5% 1/16W		
1475		MS2A	RESISTOR		R2124	1-219-606-11	METAL CHIP 100K 0.5% 1/16W		
1476		MS2A	RESISTOR		R2127	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1477		MS2A	RESISTOR		R2129	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
1478		MS2A	RESISTOR		R2131	1-218-990-11	SHORT CHIP 0		
1479		MS2A	RESISTOR		R2133	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
1480		MS2A	RESISTOR		R2134	1-218-990-11	SHORT CHIP 0		
1481		MS2A	RESISTOR		R2136	1-218-933-11	RES-CHIP 22 5% 1/16W		
1482		MS2A	RESISTOR		R2137	1-218-933-11	RES-CHIP 22 5% 1/16W		
1483		MS2A	RESISTOR		R2138	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1484		MS2A	RESISTOR		R2141	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1485		MS2A	RESISTOR		R2142	1-218-933-11	RES-CHIP 22 5% 1/16W		
1486		MS2A	RESISTOR		R2143	1-218-933-11	RES-CHIP 22 5% 1/16W		
1487		MS2A	RESISTOR		R2144	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1488		MS2A	RESISTOR		R2145	1-218-933-11	RES-CHIP 22 5% 1/16W		
1489		MS2A	RESISTOR		R2146	1-218-933-11	RES-CHIP 22 5% 1/16W		
1490		MS2A	RESISTOR		R2147	1-218-933-11	RES-CHIP 22 5% 1/16W		
1491		MS2A	RESISTOR		R2148	1-218-933-11	RES-CHIP 22 5% 1/16W		
1492		MS2A	RESISTOR		R2149	1-218-933-11	RES-CHIP 22 5% 1/16W		
1493		MS2A	RESISTOR		R2150	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
1494		MS2A	RESISTOR		R2151	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1495		MS2A	RESISTOR		R2153	1-218-933-11	RES-CHIP 22 5% 1/16W		
1496		MS2A	RESISTOR		R2154	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1497		MS2A	RESISTOR		R2155	1-218-933-11	RES-CHIP 22 5% 1/16W		
1498		MS2A	RESISTOR		R2156	1-218-985-11	RES-CHIP 470K 5% 1/16W		
1499		MS2A	RESISTOR		R2157	1-218-985-11	RES-CHIP 470K 5% 1/16W		
1500		MS2A	RESISTOR		R2158	1-218-981-11	RES-CHIP 220K 5% 1/16W		
1501		MS2A	RESISTOR		R2159	1-218-981-11	RES-CHIP 220K 5% 1/16W		
1502		MS2A	RESISTOR		R2161	1-218-990-11	SHORT CHIP 0		
1503		MS2A	RESISTOR		R2162	1-218-990-11	SHORT CHIP 0		
1504		MS2A	RESISTOR		R2163	1-218-990-11	SHORT CHIP 0		
1505		MS2A	RESISTOR		R2164	1-218-990-11	SHORT CHIP 0		
1506		MS2A	RESISTOR		R2165	1-218-990-11	SHORT CHIP 0		
1507		MS2A	RESISTOR		R2166	1-218-990-11	SHORT CHIP 0		
1508		MS2A	RESISTOR		R2167	1-218-990-11	SHORT CHIP 0		
1509		MS2A	RESISTOR		R2168	1-218-990-11	SHORT CHIP 0		
1510		MS2A	RESISTOR		R2169	1-218-990-11	SHORT CHIP 0		
1511		MS2A	RESISTOR		R2170	1-218-990-11	SHORT CHIP 0		
1512		MS2A	RESISTOR		R2200	1-218-939-11	RES-CHIP 68 5% 1/16W		
1513		MS2A	RESISTOR		R2201	1-218-939-11	RES-CHIP 68 5% 1/16W		
1514		MS2A	RESISTOR		R2202	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1515		MS2A	RESISTOR		R2203	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1516		MS2A	RESISTOR		R2204	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1517		MS2A	RESISTOR		R2205	1-218-990-11	SHORT CHIP 0		
1518		MS2A	RESISTOR		R2206	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1519		MS2A	RESISTOR		R2207	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1520		MS2A	RESISTOR		R2208	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1521		MS2A	RESISTOR		R2209	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1522		MS2A	RESISTOR		R2210	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1523		MS2A	RESISTOR		R2211	1-218-933-11	RES-CHIP 22 5% 1/16W		
1524		MS2A	RESISTOR		R2212	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1525		MS2A	RESISTOR		R2213	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1526		MS2A	RESISTOR		R2214	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1527		MS2A	RESISTOR		R2215	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1528		MS2A	RESISTOR		R2216	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1529		MS2A	RESISTOR		R2217	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1530		MS2A	RESISTOR		R2218	1-218-937-11	RES-CHIP 47 5% 1/16W		
1531		MS2A	RESISTOR		R2219	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1532		MS2A	RESISTOR		R2220	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1533		MS2A	RESISTOR		R2221	1-218-933-11	RES-CHIP 22 5% 1/16W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1534		MS2A	RESISTOR		R2222	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1535		MS2A	RESISTOR		R2223	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1536		MS2A	RESISTOR		R2224	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1537		MS2A	RESISTOR		R2225	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1538		MS2A	RESISTOR		R2226	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1539		MS2A	RESISTOR		R2227	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1540		MS2A	RESISTOR		R2228	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1541		MS2A	RESISTOR		R2229	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1542		MS2A	RESISTOR		R2332	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1543		MS2A	RESISTOR		R2333	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1544		MS2A	RESISTOR		R2335	1-218-933-11	RES-CHIP 22 5% 1/16W		
1545		MS2A	RESISTOR		R2336	1-218-933-11	RES-CHIP 22 5% 1/16W		
1546		MS2A	RESISTOR		R2337	1-218-933-11	RES-CHIP 22 5% 1/16W		
1547		MS2A	RESISTOR		R2338	1-218-933-11	RES-CHIP 22 5% 1/16W		
1548		MS2A	RESISTOR		R2339	1-218-933-11	RES-CHIP 22 5% 1/16W		
1549		MS2A	RESISTOR		R2340	1-218-933-11	RES-CHIP 22 5% 1/16W		
1550		MS2A	NETWORK		RB2005	1-234-371-21	RES, NETWORK 47X4 (1005)		
1551		MS2A	NETWORK		RB2006	1-234-371-21	RES, NETWORK 47X4 (1005)		
1552		MS2A	NETWORK		RB2007	1-234-371-21	RES, NETWORK 47X4 (1005)		
1553		MS2A	NETWORK		RB2008	1-234-371-21	RES, NETWORK 47X4 (1005)		
1554		MS2A	NETWORK		RB2009	1-234-795-21	RES, NETWORK 0X4 (2010)		
1555		MS2A	NETWORK		RB2010	1-234-795-21	RES, NETWORK 0X4 (2010)		
1556		MS2A	NETWORK		RB2011	1-234-795-21	RES, NETWORK 0X4 (2010)		
1557		MS2A	NETWORK		RB2012	1-234-795-21	RES, NETWORK 0X4 (2010)		
1558		MS2A	NETWORK		RB2100	1-234-370-21	RES, NETWORK 22X4 (1005)		
1559		MS2A	NETWORK		RB2101	1-234-370-21	RES, NETWORK 22X4 (1005)		
1560		MS2A	NETWORK		RB2102	1-234-370-21	RES, NETWORK 22X4 (1005)		
1561		MS2A	NETWORK		RB2103	1-242-963-21	RES, NETWORK 33X4 (1005)		
1562		MS2A	NETWORK		RB2104	1-242-963-21	RES, NETWORK 33X4 (1005)		
1563		MS2A	NETWORK		RB2105	1-242-963-21	RES, NETWORK 33X4 (1005)		
1564		MS2A	NETWORK		RB2106	1-234-370-21	RES, NETWORK 22X4 (1005)		
1565		MS2A	NETWORK		RB2107	1-234-370-21	RES, NETWORK 22X4 (1005)		
1566		MS2A	NETWORK		RB2108	1-234-370-21	RES, NETWORK 22X4 (1005)		
1567		MS2A	NETWORK		RB2109	1-234-370-21	RES, NETWORK 22X4 (1005)		
1568		MS2A	NETWORK		RB2110	1-234-370-21	RES, NETWORK 22X4 (1005)		
1569		MS2A	NETWORK		RB2111	1-242-963-21	RES, NETWORK 33X4 (1005)		
1570		MS2A	NETWORK		RB2112	1-242-963-21	RES, NETWORK 33X4 (1005)		
1571		MS2A	NETWORK		RB2113	1-234-370-21	RES, NETWORK 22X4 (1005)		
1572		MS2A	NETWORK		RB2114	1-234-370-21	RES, NETWORK 22X4 (1005)		
1573		MS2A	NETWORK		RB2115	1-234-370-21	RES, NETWORK 22X4 (1005)		
1574		MS2A	NETWORK		RB2116	1-242-963-21	RES, NETWORK 33X4 (1005)		
1575		MS2A	NETWORK		RB2117	1-242-963-21	RES, NETWORK 33X4 (1005)		
1576		MS2A	NETWORK		RB2118	1-234-370-21	RES, NETWORK 22X4 (1005)		
1577		MS2A	NETWORK		RB2119	1-242-963-21	RES, NETWORK 33X4 (1005)		
1578		MS2A	NETWORK		RB2120	1-234-370-21	RES, NETWORK 22X4 (1005)		
1579		MS2A	NETWORK		RB2200	1-234-702-11	RES, NETWORK 68X4 (1005)		
1580		MS2A	NETWORK		RB2201	1-234-702-11	RES, NETWORK 68X4 (1005)		
1581		MS2A	NETWORK		RB2202	1-234-702-11	RES, NETWORK 68X4 (1005)		
1582		MS2A	NETWORK		RB2203	1-234-702-11	RES, NETWORK 68X4 (1005)		
1583		MS2A	NETWORK		RB2204	1-234-702-11	RES, NETWORK 68X4 (1005)		
1584		MS2A	NETWORK		RB2205	1-234-702-11	RES, NETWORK 68X4 (1005)		
1585		MS2A	NETWORK		RB2206	1-234-702-11	RES, NETWORK 68X4 (1005)		
1586		MS2A	NETWORK		RB2207	1-234-702-11	RES, NETWORK 68X4 (1005)		
1587		MS2A	NETWORK		RB2208	1-234-702-11	RES, NETWORK 68X4 (1005)		
1588		MS2A	NETWORK		RB2209	1-234-702-11	RES, NETWORK 68X4 (1005)		
1589		MS2A	NETWORK		RB2210	1-234-702-11	RES, NETWORK 68X4 (1005)		
1590		MS2A	NETWORK		RB2211	1-234-702-11	RES, NETWORK 68X4 (1005)		
1591		MS2A	NETWORK		RB2212	1-234-702-11	RES, NETWORK 68X4 (1005)		
1592		MS2A	NETWORK		RB2213	1-234-702-11	RES, NETWORK 68X4 (1005)		
1593		MS2A	NETWORK		RB2214	1-234-370-21	RES, NETWORK 22X4 (1005)		
1594		MS2A	NETWORK		RB2215	1-234-370-21	RES, NETWORK 22X4 (1005)		
1595		MS2A	NETWORK		RB2216	1-234-371-21	RES, NETWORK 47X4 (1005)		
1596		MS2A	NETWORK		RB2217	1-234-371-21	RES, NETWORK 47X4 (1005)		
1597		MS2A	NETWORK		RB2218	1-234-371-21	RES, NETWORK 47X4 (1005)		
1598		MS2A	NETWORK		RB2219	1-234-370-21	RES, NETWORK 22X4 (1005)		
1599		MS2A	NETWORK		RB2220	1-234-370-21	RES, NETWORK 22X4 (1005)		
1600		MS2A	NETWORK		RB2221	1-234-371-21	RES, NETWORK 47X4 (1005)		
1601		MS2A	NETWORK		RB2222	1-234-371-21	RES, NETWORK 47X4 (1005)		
1602		MS2A	NETWORK		RB2223	1-234-371-21	RES, NETWORK 47X4 (1005)		
1603		MS2A	NETWORK		RB2224	1-234-370-21	RES, NETWORK 22X4 (1005)		
1604		MS2A	NETWORK		RB2225	1-234-370-21	RES, NETWORK 22X4 (1005)		
1605		MS2A	NETWORK		RB2226	1-234-371-21	RES, NETWORK 47X4 (1005)		
1606		MS2A	NETWORK		RB2227	1-234-371-21	RES, NETWORK 47X4 (1005)		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1607		MS2A	NETWORK		RB2228	1-234-370-21	RES, NETWORK 22X4 (1005)		
1608		MS2A	CRYSTAL		X2000	1-795-690-22	OSCILLATOR, CRYSTAL (SMD)		
1609		DE3	CAPACITOR		C3401	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1610		DE3	CAPACITOR		C3402	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1611		DE3	CAPACITOR		C3404	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1612		DE3	CAPACITOR		C3407	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1613		DE3	CAPACITOR		C3408	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1614		DE3	CAPACITOR		C3409	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1615		DE3	CAPACITOR		C3410	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1616		DE3	CAPACITOR		C3415	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1617		DE3	CAPACITOR		C3451	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
1618		DE3	CAPACITOR		C3452	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1619		DE3	CAPACITOR		C3453	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
1620		DE3	CAPACITOR		C3501	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
1621		DE3	CAPACITOR		C3502	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1622		DE3	CAPACITOR		C3503	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1623		DE3	CAPACITOR		C3504	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1624		DE3	CAPACITOR		C3505	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1625		DE3	CAPACITOR		C3506	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1626		DE3	CAPACITOR		C3507	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1627		DE3	CAPACITOR		C3508	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1628		DE3	CAPACITOR		C3509	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1629		DE3	CAPACITOR		C3510	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1630		DE3	CAPACITOR		C3511	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1631		DE3	CAPACITOR		C3512	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1632		DE3	CAPACITOR		C3513	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1633		DE3	CAPACITOR		C3514	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1634		DE3	CAPACITOR		C3515	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1635		DE3	CAPACITOR		C3516	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1636		DE3	CAPACITOR		C3517	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1637		DE3	CAPACITOR		C3518	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1638		DE3	CAPACITOR		C3519	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1639		DE3	CAPACITOR		C3520	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1640		DE3	CAPACITOR		C3521	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1641		DE3	CAPACITOR		C3522	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1642		DE3	CAPACITOR		C3523	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1643		DE3	CAPACITOR		C3524	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1644		DE3	CAPACITOR		C3525	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1645		DE3	CAPACITOR		C3526	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1646		DE3	CAPACITOR		C3527	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1647		DE3	CAPACITOR		C3528	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1648		DE3	CAPACITOR		C3529	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1649		DE3	CAPACITOR		C3530	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1650		DE3	CAPACITOR		C3531	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1651		DE3	CAPACITOR		C3532	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1652		DE3	CAPACITOR		C3533	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1653		DE3	CAPACITOR		C3534	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
1654		DE3	CAPACITOR		C3535	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
1655		DE3	CAPACITOR		C3536	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1656		DE3	CAPACITOR		C3537	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1657		DE3	CAPACITOR		C3538	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1658		DE3	CAPACITOR		C3539	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1659		DE3	CAPACITOR		C3540	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1660		DE3	CAPACITOR		C3541	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1661		DE3	CAPACITOR		C3542	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1662		DE3	CAPACITOR		C3543	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1663		DE3	CAPACITOR		C3544	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1664		DE3	CAPACITOR		C3545	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1665		DE3	CAPACITOR		C3546	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1666		DE3	CAPACITOR		C3547	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1667		DE3	CAPACITOR		C3548	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1668		DE3	CAPACITOR		C3549	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1669		DE3	CAPACITOR		C3550	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1670		DE3	CAPACITOR		C3551	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1671		DE3	CAPACITOR		C3552	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1672		DE3	CAPACITOR		C3553	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1673		DE3	CAPACITOR		C3554	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1674		DE3	CAPACITOR		C3555	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1675		DE3	CAPACITOR		C3556	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1676		DE3	CAPACITOR		C3557	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1677		DE3	CAPACITOR		C3558	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1678		DE3	CAPACITOR		C3559	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1679		DE3	CAPACITOR		C3560	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1680		DE3	CAPACITOR		C3561	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1681		DE3	CAPACITOR		C3562	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1682		DE3	CAPACITOR		C3563	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1683		DE3	CAPACITOR		C3564	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1684		DE3	CAPACITOR		C3565	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1685		DE3	CAPACITOR		C3566	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1686		DE3	CAPACITOR		C3567	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1687		DE3	CAPACITOR		C3568	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1688		DE3	CAPACITOR		C3569	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1689		DE3	CAPACITOR		C3570	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1690		DE3	CAPACITOR		C3571	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1691		DE3	CAPACITOR		C3572	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1692		DE3	CAPACITOR		C3573	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1693		DE3	CAPACITOR		C3574	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1694		DE3	CAPACITOR		C3575	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1695		DE3	CAPACITOR		C3576	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1696		DE3	CAPACITOR		C3577	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1697		DE3	CAPACITOR		C3578	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1698		DE3	CAPACITOR		C3579	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1699		DE3	CAPACITOR		C3580	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1700		DE3	CAPACITOR		C3581	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1701		DE3	CAPACITOR		C3582	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1702		DE3	CAPACITOR		C3583	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1703		DE3	CAPACITOR		C3584	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1704		DE3	CAPACITOR		C3585	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
1705		DE3	CAPACITOR		C3586	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1706		DE3	CAPACITOR		C3587	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1707		DE3	CAPACITOR		C3588	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1708		DE3	CAPACITOR		C3589	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1709		DE3	CAPACITOR		C3590	1-165-880-21	ELECT CHIP 220UF 20% 2.5V		
1710		DE3	CAPACITOR		C3601	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1711		DE3	CAPACITOR		C3602	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1712		DE3	CAPACITOR		C3603	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1713		DE3	CAPACITOR		C3604	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1714		DE3	CAPACITOR		C3605	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1715		DE3	CAPACITOR		C3606	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1716		DE3	CAPACITOR		C3607	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1717		DE3	CAPACITOR		C3608	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1718		DE3	CAPACITOR		C3609	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1719		DE3	CAPACITOR		C3610	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1720		DE3	CAPACITOR		C3611	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1721		DE3	CAPACITOR		C3612	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1722		DE3	CAPACITOR		C3613	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1723		DE3	CAPACITOR		C3614	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1724		DE3	CAPACITOR		C3615	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1725		DE3	CAPACITOR		C3616	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1726		DE3	CAPACITOR		C3617	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1727		DE3	CAPACITOR		C3618	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1728		DE3	CAPACITOR		C3619	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1729		DE3	CAPACITOR		C3620	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1730		DE3	CAPACITOR		C3621	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1731		DE3	CAPACITOR		C3622	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1732		DE3	CAPACITOR		C3623	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1733		DE3	CAPACITOR		C3624	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1734		DE3	CAPACITOR		C3625	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1735		DE3	CAPACITOR		C3626	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1736		DE3	CAPACITOR		C3627	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1737		DE3	CAPACITOR		C3628	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1738		DE3	CAPACITOR		C3629	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1739		DE3	CAPACITOR		C3630	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1740		DE3	CAPACITOR		C3631	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1741		DE3	CAPACITOR		C3632	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1742		DE3	CAPACITOR		C3633	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1743		DE3	CAPACITOR		C3634	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
1744		DE3	CAPACITOR		C3635	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1745		DE3	CAPACITOR		C3636	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1746		DE3	CAPACITOR		C3637	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
1747		DE3	CAPACITOR		C3638	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1748		DE3	CAPACITOR		C3639	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1749		DE3	CAPACITOR		C3642	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1750		DE3	CAPACITOR		C3701	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
1751		DE3	CAPACITOR		C3703	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
1752		DE3	CAPACITOR		C3705	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1753		DE3	CAPACITOR		C3707	1-164-852-11	CERAMIC CHIP 12PF 5.00% 50V		
1754		DE3	CAPACITOR		C3708	1-164-852-11	CERAMIC CHIP 12PF 5.00% 50V		
1755		DE3	CAPACITOR		C3709	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1756		DE3	CAPACITOR		C3710	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1757		DE3	CAPACITOR		C3711	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1758		DE3	CAPACITOR		C3712	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1759		DE3	CAPACITOR		C3713	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1760		DE3	CAPACITOR		C3714	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1761		DE3	CAPACITOR		C3715	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1762		DE3	CAPACITOR		C3716	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1763		DE3	CAPACITOR		C3801	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1764		DE3	CAPACITOR		C3803	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1765		DE3	CAPACITOR		C3804	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1766		DE3	CAPACITOR		C3805	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1767		DE3	CAPACITOR		C3806	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
1768		DE3	CAPACITOR		C3807	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
1769		DE3	CAPACITOR		C3809	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1770		DE3	CAPACITOR		C3810	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1771		DE3	CAPACITOR		C3811	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1772		DE3	CAPACITOR		C3812	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1773		DE3	CAPACITOR		C3813	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1774		DE3	CAPACITOR		C3814	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1775		DE3	CAPACITOR		C3815	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1776		DE3	CAPACITOR		C3816	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1777		DE3	CAPACITOR		C3817	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1778		DE3	CAPACITOR		C3818	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1779		DE3	CAPACITOR		C3819	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1780		DE3	CAPACITOR		C3820	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
1781		DE3	CAPACITOR		C3821	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1782		DE3	CAPACITOR		C3822	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1783		DE3	CAPACITOR		C3823	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1784		DE3	CAPACITOR		C3824	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1785		DE3	CAPACITOR		C3827	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1786		DE3	CAPACITOR		C3828	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1787		DE3	CAPACITOR		C3829	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1788		DE3	CAPACITOR		C3830	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1789		DE3	CAPACITOR		C3831	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1790		DE3	CAPACITOR		C3832	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1791		DE3	CAPACITOR		C3833	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1792		DE3	CAPACITOR		C3834	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1793		DE3	CAPACITOR		C3835	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1794		DE3	CAPACITOR		C3836	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1795		DE3	CAPACITOR		C3837	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1796		DE3	CAPACITOR		C3838	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1797		DE3	CAPACITOR		C3839	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1798		DE3	CAPACITOR		C3840	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1799		DE3	CAPACITOR		C3841	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1800		DE3	CAPACITOR		C3842	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1801		DE3	CAPACITOR		C3843	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1802		DE3	CAPACITOR		C3844	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1803		DE3	CAPACITOR		C3845	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1804		DE3	CAPACITOR		C3846	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1805		DE3	CAPACITOR		C3847	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1806		DE3	CAPACITOR		C3848	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1807		DE3	CAPACITOR		C3849	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1808		DE3	CAPACITOR		C3850	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1809		DE3	CAPACITOR		C3851	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1810		DE3	CAPACITOR		C3852	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1811		DE3	CAPACITOR		C3853	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1812		DE3	CAPACITOR		C3854	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1813		DE3	CAPACITOR		C3855	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1814		DE3	CAPACITOR		C3856	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1815		DE3	CAPACITOR		C3857	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1816		DE3	CAPACITOR		C3901	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1817		DE3	CAPACITOR		C3902	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1818		DE3	CAPACITOR		C3903	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
1819		DE3	CAPACITOR		C3904	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1820		DE3	CAPACITOR		C3905	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
1821		DE3	CAPACITOR		C3906	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1822		DE3	CAPACITOR		C3907	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1823		DE3	CAPACITOR		C3908	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1824		DE3	CAPACITOR		C3909	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1825		DE3	CAPACITOR		C3910	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1826		DE3	CAPACITOR		C3911	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1827		DE3	CAPACITOR		C3912	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1828		DE3	CAPACITOR		C3913	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1829		DE3	CAPACITOR		C3914	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1830		DE3	CAPACITOR		C3915	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1831		DE3	CAPACITOR		C4001	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1832		DE3	CAPACITOR		C4100	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1833		DE3	CAPACITOR		C4103	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1834		DE3	CAPACITOR		C4400	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1835		DE3	CAPACITOR		C4401	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1836		DE3	CAPACITOR		C4402	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1837		DE3	CAPACITOR		C4403	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1838		DE3	CAPACITOR		C4404	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1839		DE3	CAPACITOR		C4405	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1840		DE3	CAPACITOR		C4406	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1841		DE3	CAPACITOR		C4407	1-104-607-11	ELECT CHIP 47UF 20.00% 16V		
1842		DE3	CAPACITOR		C4409	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1843		DE3	CAPACITOR		C4410	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1844		DE3	CAPACITOR		C4411	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1845		DE3	CAPACITOR		C4412	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
1846		DE3	CAPACITOR		C4414	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
1847		DE3	CAPACITOR		C4415	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1848		DE3	CAPACITOR		C4416	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
1849		DE3	CAPACITOR		C4417	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
1850		DE3	CAPACITOR		C4418	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1851		DE3	CAPACITOR		C4419	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1852		DE3	CAPACITOR		C4420	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
1853		DE3	CAPACITOR		C4421	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1854		DE3	CAPACITOR		C4422	1-164-940-11	CERAMIC CHIP 0.0033UF 10.00% 16V		
1855		DE3	CAPACITOR		C4423	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
1856		DE3	CAPACITOR		C4426	1-164-852-11	CERAMIC CHIP 12PF 5.00% 50V		
1857		DE3	CAPACITOR		C4427	1-164-852-11	CERAMIC CHIP 12PF 5.00% 50V		
1858		DE3	CAPACITOR		C4430	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1859		DE3	CAPACITOR		C4432	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1860		DE3	CAPACITOR		C4433	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
1861		DE3	CAPACITOR		C4434	1-115-156-11	CERAMIC CHIP 1UF 10V		
1862		DE3	CAPACITOR		C4435	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
1863		DE3	CAPACITOR		C4436	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1864		DE3	CAPACITOR		C4439	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
1865		DE3	CAPACITOR		C4444	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
1866		DE3	CAPACITOR		C4445	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
1867		DE3	CAPACITOR		C4447	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1868		DE3	CAPACITOR		C4448	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1869		DE3	CAPACITOR		C4450	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1870		DE3	CAPACITOR		C4451	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1871		DE3	CAPACITOR		C4452	1-164-874-11	CERAMIC CHIP 100PF 5.00% 50V		
1872		DE3	CAPACITOR		C4453	1-164-874-11	CERAMIC CHIP 100PF 5.00% 50V		
1873		DE3	CONNECTOR		CN3901	1-815-161-11	CONNECTOR, BOARD TO WIRE 31P		
1874		DE3	CONNECTOR	*	CN3902	1-764-093-21	PIN, CONNECTOR (PC BOARD) 8P		
1875		DE3	CONNECTOR		CN4401	1-770-703-11	CONNECTOR, FFC/FPC 20P		
1876		DE3	DIODE		D3401	8-719-083-58	DIODE UDZSTE-173.9B		
1877		DE3	DIODE		D3402	8-719-081-19	DIODE 1SS383(T5RSONY1)		
1878		DE3	DIODE		D3801	8-719-050-37	DIODE M1MA152WA-T1		
1879		DE3	DIODE		D3802	8-719-050-38	DIODE M1MA152WK-T1		
1880		DE3	DIODE		D3901	8-719-404-50	DIODE MA111-TX		
1881		DE3	DIODE		D4005	8-719-404-50	DIODE MA111-TX		
1882		DE3	DIODE		D4006	8-719-404-50	DIODE MA111-TX		
1883		DE3	DIODE		D4101	8-719-404-50	DIODE MA111-TX		
1884		DE3	DIODE		D4400	8-719-914-43	DIODE DAN202K		
1885		DE3	DIODE		D4401	8-719-914-44	DIODE DAP202K		
1886		DE3	DIODE		D4402	8-719-404-50	DIODE MA111-TX		
1887		DE3	DIODE		D4403	8-719-404-50	DIODE MA111-TX		
1888		DE3	DIODE		D4404	8-719-914-43	DIODE DAN202K		
1889		DE3	DIODE		D4405	8-719-914-44	DIODE DAP202K		
1890		DE3	DIODE		D4407	8-719-914-43	DIODE DAN202K		
1891		DE3	DIODE		D4409	8-719-914-43	DIODE DAN202K		
1892		DE3	DIODE		D4410	8-719-404-50	DIODE MA111-TX		
1893		DE3	DIODE		D4412	8-719-914-43	DIODE DAN202K		
1894		DE3	DIODE		D4413	8-719-914-43	DIODE DAN202K		
1895		DE3	FERRITE BEAD		FB3402	1-414-445-11	FERRITE 0UH		
1896		DE3	FERRITE BEAD		FB3404	1-414-445-11	FERRITE 0UH		
1897		DE3	FERRITE BEAD		FB3501	1-414-864-11	FERRITE 0UH		
1898		DE3	FERRITE BEAD		FB3502	1-414-864-11	FERRITE 0UH		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1899		DE3	FERRITE BEAD		FB3503	1-414-864-11	FERRITE 0UH		
1900		DE3	FERRITE BEAD		FB3504	1-414-864-11	FERRITE 0UH		
1901		DE3	FERRITE BEAD		FB3601	1-414-864-11	FERRITE 0UH		
1902		DE3	FERRITE BEAD		FB3602	1-414-864-11	FERRITE 0UH		
1903		DE3	FERRITE BEAD		FB3603	1-414-864-11	FERRITE 0UH		
1904		DE3	FERRITE BEAD		FB3701	1-414-864-11	FERRITE 0UH		
1905		DE3	FERRITE BEAD		FB3702	1-414-864-11	FERRITE 0UH		
1906		DE3	FERRITE BEAD		FB3803	1-414-229-11	FERRITE 0UH		
1907		DE3	FERRITE BEAD		FB3901	1-414-445-11	FERRITE 0UH		
1908		DE3	FERRITE BEAD		FB3902	1-414-445-11	FERRITE 0UH		
1909		DE3	FERRITE BEAD		FB3903	1-414-445-11	FERRITE 0UH		
1910		DE3	FERRITE BEAD		FB4001	1-414-445-11	FERRITE 0UH		
1911		DE3	FERRITE BEAD		FB4101	1-414-229-11	FERRITE 0UH		
1912		DE3	FERRITE BEAD		FB4102	1-414-229-11	FERRITE 0UH		
1913		DE3	FERRITE BEAD		FB4103	1-414-229-11	FERRITE 0UH		
1914		DE3	FERRITE BEAD		FB4104	1-414-229-11	FERRITE 0UH		
1915		DE3	FERRITE BEAD		FB4105	1-414-229-11	FERRITE 0UH		
1916		DE3	FERRITE BEAD		FB4106	1-414-229-11	FERRITE 0UH		
1917		DE3	FERRITE BEAD		FB4107	1-414-229-11	FERRITE 0UH		
1918		DE3	FERRITE BEAD		FB4108	1-414-229-11	FERRITE 0UH		
1919		DE3	FERRITE BEAD		FB4109	1-414-229-11	FERRITE 0UH		
1920		DE3	FERRITE BEAD		FB4110	1-414-445-11	FERRITE 0UH		
1921		DE3	FERRITE BEAD		FB4111	1-414-229-11	FERRITE 0UH		
1922		DE3	FERRITE BEAD		FB4112	1-414-229-11	FERRITE 0UH		
1923		DE3	FERRITE BEAD		FB4113	1-414-229-11	FERRITE 0UH		
1924		DE3	FERRITE BEAD		FB4114	1-414-229-11	FERRITE 0UH		
1925		DE3	FERRITE BEAD		FB4115	1-414-229-11	FERRITE 0UH		
1926		DE3	FERRITE BEAD		FB4116	1-414-229-11	FERRITE 0UH		
1927		DE3	FERRITE BEAD		FB4117	1-414-229-11	FERRITE 0UH		
1928		DE3	FERRITE BEAD		FB4118	1-414-229-11	FERRITE 0UH		
1929		DE3	FERRITE BEAD		FB4119	1-414-229-11	FERRITE 0UH		
1930		DE3	FERRITE BEAD		FB4120	1-414-229-11	FERRITE 0UH		
1931		DE3	FERRITE BEAD		FB4121	1-414-229-11	FERRITE 0UH		
1932		DE3	FERRITE BEAD		FB4122	1-414-229-11	FERRITE 0UH		
1933		DE3	FERRITE BEAD		FB4123	1-414-229-11	FERRITE 0UH		
1934		DE3	FERRITE BEAD		FB4124	1-414-229-11	FERRITE 0UH		
1935		DE3	FERRITE BEAD		FB4125	1-414-229-11	FERRITE 0UH		
1936		DE3	FERRITE BEAD		FB4126	1-414-229-11	FERRITE 0UH		
1937		DE3	FERRITE BEAD		FB4127	1-414-229-11	FERRITE 0UH		
1938		DE3	FERRITE BEAD		FB4128	1-414-229-11	FERRITE 0UH		
1939		DE3	FERRITE BEAD		FB4129	1-414-229-11	FERRITE 0UH		
1940		DE3	FERRITE BEAD		FB4130	1-414-229-11	FERRITE 0UH		
1941		DE3	FERRITE BEAD		FB4131	1-414-229-11	FERRITE 0UH		
1942		DE3	FERRITE BEAD		FB4132	1-414-229-11	FERRITE 0UH		
1943		DE3	FERRITE BEAD		FB4133	1-414-229-11	FERRITE 0UH		
1944		DE3	FERRITE BEAD		FB4134	1-414-229-11	FERRITE 0UH		
1945		DE3	FERRITE BEAD		FB4135	1-414-229-11	FERRITE 0UH		
1946		DE3	FERRITE BEAD		FB4140	1-414-229-11	FERRITE 0UH		
1947		DE3	FERRITE BEAD		FB4141	1-414-229-11	FERRITE 0UH		
1948		DE3	FERRITE BEAD		FB4142	1-414-229-11	FERRITE 0UH		
1949		DE3	FERRITE BEAD		FB4143	1-414-229-11	FERRITE 0UH		
1950		DE3	FERRITE BEAD		FB4144	1-414-229-11	FERRITE 0UH		
1951		DE3	FERRITE BEAD		FB4145	1-414-229-11	FERRITE 0UH		
1952		DE3	FERRITE BEAD		FB4146	1-414-229-11	FERRITE 0UH		
1953		DE3	FERRITE BEAD		FB4147	1-414-229-11	FERRITE 0UH		
1954		DE3	FERRITE BEAD		FB4148	1-414-229-11	FERRITE 0UH		
1955		DE3	FERRITE BEAD		FB4149	1-414-229-11	FERRITE 0UH		
1956		DE3	FERRITE BEAD		FB4412	1-414-234-22	FERRITE 0UH		
1957		DE3	FERRITE BEAD		FB4420	1-414-233-22	FERRITE 0UH		
1958		DE3	IC		IC3401	6-704-654-01	IC MB91306RPFV-G-BND-E1		
1959		DE3	IC		IC3402	6-703-176-01	IC PST3627UL		
1960		DE3	IC		IC3403	6-804-191-01	IC MBM29LV800TA-70PFTN-DE3PI		
1961		DE3	IC		IC3451	6-700-263-01	IC NJM2870F18(TE2)		
1962		DE3	IC		IC3501	6-705-919-01	IC CXD9762AGF		
1963		DE3	IC		IC3502	8-759-694-55	IC MAX1644EAE-TG074		
1964		DE3	IC		IC3602	6-705-089-01	IC K4D263238F-UC50T		
1965		DE3	IC		IC3603	6-704-520-01	IC MAX1809EEE+TG068		
1966		DE3	IC		IC3801	6-703-176-01	IC PST3627UL		
1967		DE3	IC		IC3802	6-701-870-01	IC THC63LVDF84B-T		
1968		DE3	IC		IC3803	6-702-982-01	IC TC7SA00FU(TE85R)		
1969		DE3	IC		IC3804	6-705-019-01	IC PST3620UL		
1970		DE3	IC		IC3805	6-703-176-01	IC PST3627UL		
1971		DE3	IC		IC3806	6-702-973-01	IC CXD9690Q		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1972		DE3	IC		IC3901	6-700-592-01	IC DS90C387VJDX		
1973		DE3	IC		IC3902	6-703-176-01	IC PST3627UL		
1974		DE3	IC		IC4001	6-702-688-01	IC M24C64-WMN6T(B)		
1975		DE3	IC		IC4100	8-759-567-08	IC MB88141APF-ER		
1976		DE3	IC		IC4103	8-759-570-08	IC TC7SET32FU(TE85R)		
1977		DE3	IC		IC4400	6-702-983-01	IC TC74LCX273FT(EL)		
1978		DE3	IC		IC4401	8-759-082-61	IC TC4W53FU		
1979		DE3	IC		IC4403	8-759-271-86	IC TC7SH04FU		
1980		DE3	IC		IC4404	8-759-592-43	IC TC7SZ02FU(TE85R)		
1981		DE3	IC		IC4405	8-759-475-39	IC TC74LCX74FT(EL)		
1982		DE3	IC		IC4406	8-759-596-29	IC SN74LV4066APWR		
1983		DE3	IC		IC4407	6-801-402-01	IC BD4729GTR		
1984		DE3	IC		IC4408	6-704-067-01	IC M24128-BWMN6T(A)		
1985		DE3	IC		IC4409	8-759-641-26	IC NJM2391DL1-33(TE1)		
1986		DE3	IC		IC4410	6-804-217-01	IC M306V7FHFP-120		
1987		DE3	IC		IC4411	6-702-766-01	IC BD4741G-TR		
1988		DE3	COIL		L3501	1-419-630-21	INDUCTOR 4.7UH		
1989		DE3	COIL		L3601	1-419-630-21	INDUCTOR 4.7UH		
1990		DE3	COIL		L3801	1-469-555-21	INDUCTOR 10UH		
1991		DE3	COIL		L3802	1-469-555-21	INDUCTOR 10UH		
1992		DE3	COIL		L3803	1-469-555-21	INDUCTOR 10UH		
1993		DE3	COIL		L3804	1-469-555-21	INDUCTOR 10UH		
1994		DE3	COIL		L3805	1-469-555-21	INDUCTOR 10UH		
1995		DE3	COIL		L3806	1-469-555-21	INDUCTOR 10UH		
1996		DE3	COIL		L3807	1-469-555-21	INDUCTOR 10UH		
1997		DE3	COIL		L3808	1-412-026-11	INDUCTOR 1UH		
1998		DE3	COIL		L3809	1-412-026-11	INDUCTOR 1UH		
1999		DE3	COIL		L4400	1-412-026-11	INDUCTOR 1UH		
2000		DE3	COIL		L4401	1-412-029-11	INDUCTOR 10UH		
2001		DE3	COIL		L4402	1-412-029-11	INDUCTOR 10UH		
2002		DE3	TRANSISTOR		Q3801	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
2003		DE3	TRANSISTOR		Q3802	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
2004		DE3	TRANSISTOR		Q3901	8-729-907-00	TRANSISTOR DTC114EU		
2005		DE3	TRANSISTOR		Q3902	8-729-907-00	TRANSISTOR DTC114EU		
2006		DE3	TRANSISTOR		Q3903	8-729-907-00	TRANSISTOR DTC114EU		
2007		DE3	TRANSISTOR		Q3904	8-729-907-00	TRANSISTOR DTC114EU		
2008		DE3	TRANSISTOR		Q3905	8-729-907-00	TRANSISTOR DTC114EU		
2009		DE3	TRANSISTOR		Q3906	8-729-907-00	TRANSISTOR DTC114EU		
2010		DE3	TRANSISTOR		Q3907	8-729-907-00	TRANSISTOR DTC114EU		
2011		DE3	TRANSISTOR		Q3908	8-729-907-00	TRANSISTOR DTC114EU		
2012		DE3	TRANSISTOR		Q4401	8-729-422-27	TRANSISTOR 2SD601A-Q		
2013		DE3	TRANSISTOR		Q4403	8-729-422-27	TRANSISTOR 2SD601A-Q		
2014		DE3	TRANSISTOR		Q4404	8-729-422-27	TRANSISTOR 2SD601A-Q		
2015		DE3	TRANSISTOR		Q4405	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
2016		DE3	TRANSISTOR		Q4406	8-729-422-27	TRANSISTOR 2SD601A-Q		
2017		DE3	TRANSISTOR		Q4407	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
2018		DE3	TRANSISTOR		Q4408	8-729-422-27	TRANSISTOR 2SD601A-Q		
2019		DE3	TRANSISTOR		Q4409	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
2020		DE3	TRANSISTOR		Q4411	8-729-422-27	TRANSISTOR 2SD601A-Q		
2021		DE3	TRANSISTOR		Q4413	8-729-901-47	TRANSISTOR DTA143EK		
2022		DE3	TRANSISTOR		Q4414	8-729-422-27	TRANSISTOR 2SD601A-Q		
2023		DE3	TRANSISTOR		Q4415	8-729-422-27	TRANSISTOR 2SD601A-Q		
2024		DE3	TRANSISTOR		Q4417	8-729-422-27	TRANSISTOR 2SD601A-Q		
2025		DE3	TRANSISTOR		Q4418	8-729-027-56	TRANSISTOR DTC143TKA-T146		
2026		DE3	TRANSISTOR		Q4419	8-729-422-27	TRANSISTOR 2SD601A-Q		
2027		DE3	TRANSISTOR		Q4420	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
2028		DE3	TRANSISTOR		Q4421	8-729-422-27	TRANSISTOR 2SD601A-Q		
2029		DE3	TRANSISTOR		Q4422	8-729-422-27	TRANSISTOR 2SD601A-Q		
2030		DE3	TRANSISTOR		Q4423	8-729-422-27	TRANSISTOR 2SD601A-Q		
2031		DE3	TRANSISTOR		Q4424	8-729-422-27	TRANSISTOR 2SD601A-Q		
2032		DE3	TRANSISTOR		Q4425	8-729-422-27	TRANSISTOR 2SD601A-Q		
2033		DE3	TRANSISTOR		Q4426	8-729-027-23	TRANSISTOR DTA114EKA-T146		
2034		DE3	TRANSISTOR		Q4427	8-729-422-27	TRANSISTOR 2SD601A-Q		
2035		DE3	TRANSISTOR		Q4428	8-729-027-23	TRANSISTOR DTA114EKA-T146		
2036		DE3	TRANSISTOR		Q4429	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
2037		DE3	RESISTOR		R3403	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2038		DE3	RESISTOR		R3404	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2039		DE3	RESISTOR		R3405	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2040		DE3	RESISTOR		R3406	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2041		DE3	RESISTOR		R3408	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
2042		DE3	RESISTOR		R3409	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
2043		DE3	RESISTOR		R3410	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
2044		DE3	RESISTOR		R3411	1-218-965-11	RES-CHIP 10K 5% 1/16W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2045		DE3	RESISTOR		R3412	1-218-941-81	RES-CHIP 100 5% 1/16W		
2046		DE3	RESISTOR		R3413	1-218-941-81	RES-CHIP 100 5% 1/16W		
2047		DE3	RESISTOR		R3414	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2048		DE3	RESISTOR		R3415	1-218-941-81	RES-CHIP 100 5% 1/16W		
2049		DE3	RESISTOR		R3416	1-218-941-81	RES-CHIP 100 5% 1/16W		
2050		DE3	RESISTOR		R3419	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2051		DE3	RESISTOR		R3422	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2052		DE3	RESISTOR		R3423	1-218-990-11	SHORT CHIP 0		
2053		DE3	RESISTOR		R3425	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2054		DE3	RESISTOR		R3427	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2055		DE3	RESISTOR		R3428	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2056		DE3	RESISTOR		R3429	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2057		DE3	RESISTOR		R3437	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2058		DE3	RESISTOR		R3442	1-218-990-11	SHORT CHIP 0		
2059		DE3	RESISTOR		R3445	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2060		DE3	RESISTOR		R3446	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
2061		DE3	RESISTOR		R3447	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2062		DE3	RESISTOR		R3448	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
2063		DE3	RESISTOR		R3455	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2064		DE3	RESISTOR		R3456	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2065		DE3	RESISTOR		R3457	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2066		DE3	RESISTOR		R3458	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2067		DE3	RESISTOR		R3459	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2068		DE3	RESISTOR		R3460	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2069		DE3	RESISTOR		R3461	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2070		DE3	RESISTOR		R3462	1-218-990-11	SHORT CHIP 0		
2071		DE3	RESISTOR		R3463	1-218-990-11	SHORT CHIP 0		
2072		DE3	RESISTOR		R3464	1-218-937-11	RES-CHIP 47 5% 1/16W		
2073		DE3	RESISTOR		R3465	1-218-937-11	RES-CHIP 47 5% 1/16W		
2074		DE3	RESISTOR		R3466	1-218-941-81	RES-CHIP 100 5% 1/16W		
2075		DE3	RESISTOR		R3467	1-218-941-81	RES-CHIP 100 5% 1/16W		
2076		DE3	RESISTOR		R3468	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2077		DE3	RESISTOR		R3469	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2078		DE3	RESISTOR		R3470	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2079		DE3	RESISTOR		R3471	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2080		DE3	RESISTOR		R3473	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2081		DE3	RESISTOR		R3505	1-218-933-11	RES-CHIP 22 5% 1/16W		
2082		DE3	RESISTOR		R3506	1-218-990-11	SHORT CHIP 0		
2083		DE3	RESISTOR		R3507	1-218-990-11	SHORT CHIP 0		
2084		DE3	RESISTOR		R3509	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
2085		DE3	RESISTOR		R3510	1-218-981-11	RES-CHIP 220K 5% 1/16W		
2086		DE3	RESISTOR		R3511	1-208-920-81	METAL CHIP 24K 0.5% 1/16W		
2087		DE3	RESISTOR		R3512	1-208-927-11	METAL CHIP 47K 0.5% 1/16W		
2088		DE3	RESISTOR		R3513	1-240-247-91	RES, SQUARE TYPE CHIP 0.1		
2089		DE3	RESISTOR		R3514	1-240-247-91	RES, SQUARE TYPE CHIP 0.1		
2090		DE3	RESISTOR		R3601	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2091		DE3	RESISTOR		R3602	1-218-937-11	RES-CHIP 47 5% 1/16W		
2092		DE3	RESISTOR		R3603	1-218-933-11	RES-CHIP 22 5% 1/16W		
2093		DE3	RESISTOR		R3604	1-218-933-11	RES-CHIP 22 5% 1/16W		
2094		DE3	RESISTOR		R3605	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
2095		DE3	RESISTOR		R3606	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
2096		DE3	RESISTOR		R3607	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
2097		DE3	RESISTOR		R3608	1-220-205-11	RES-CHIP 75K 5% 1/16W		
2098		DE3	RESISTOR		R3609	1-216-864-11	SHORT CHIP 0		
2099		DE3	RESISTOR		R3701	1-218-990-11	SHORT CHIP 0		
2100		DE3	RESISTOR		R3702	1-218-990-11	SHORT CHIP 0		
2101		DE3	RESISTOR		R3705	1-218-933-11	RES-CHIP 22 5% 1/16W		
2102		DE3	RESISTOR		R3706	1-218-990-11	SHORT CHIP 0		
2103		DE3	RESISTOR		R3707	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2104		DE3	RESISTOR		R3708	1-218-990-11	SHORT CHIP 0		
2105		DE3	RESISTOR		R3709	1-218-990-11	SHORT CHIP 0		
2106		DE3	RESISTOR		R3710	1-218-990-11	SHORT CHIP 0		
2107		DE3	RESISTOR		R3711	1-218-989-11	RES-CHIP 1M 5% 1/16W		
2108		DE3	RESISTOR		R3712	1-218-941-81	RES-CHIP 100 5% 1/16W		
2109		DE3	RESISTOR		R3713	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2110		DE3	RESISTOR		R3801	1-218-941-81	RES-CHIP 100 5% 1/16W		
2111		DE3	RESISTOR		R3802	1-218-941-81	RES-CHIP 100 5% 1/16W		
2112		DE3	RESISTOR		R3803	1-218-941-81	RES-CHIP 100 5% 1/16W		
2113		DE3	RESISTOR		R3804	1-218-941-81	RES-CHIP 100 5% 1/16W		
2114		DE3	RESISTOR		R3805	1-218-941-81	RES-CHIP 100 5% 1/16W		
2115		DE3	RESISTOR		R3807	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2116		DE3	RESISTOR		R3808	1-218-990-11	SHORT CHIP 0		
2117		DE3	RESISTOR		R3809	1-216-833-11	METAL CHIP 10K 5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2118		DE3	RESISTOR		R3810	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2119		DE3	RESISTOR		R3811	1-218-990-11	SHORT CHIP 0		
2120		DE3	RESISTOR		R3812	1-218-990-11	SHORT CHIP 0		
2121		DE3	RESISTOR		R3813	1-218-937-11	RES-CHIP 47 5% 1/16W		
2122		DE3	RESISTOR		R3814	1-218-941-81	RES-CHIP 100 5% 1/16W		
2123		DE3	RESISTOR		R3815	1-218-941-81	RES-CHIP 100 5% 1/16W		
2124		DE3	RESISTOR		R3818	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2125		DE3	RESISTOR		R3819	1-218-990-11	SHORT CHIP 0		
2126		DE3	RESISTOR		R3820	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2127		DE3	RESISTOR		R3821	1-218-933-11	RES-CHIP 22 5% 1/16W		
2128		DE3	RESISTOR		R3822	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2129		DE3	RESISTOR		R3824	1-218-990-11	SHORT CHIP 0		
2130		DE3	RESISTOR		R3825	1-218-937-11	RES-CHIP 47 5% 1/16W		
2131		DE3	RESISTOR		R3826	1-218-937-11	RES-CHIP 47 5% 1/16W		
2132		DE3	RESISTOR		R3827	1-218-990-11	SHORT CHIP 0		
2133		DE3	RESISTOR		R3833	1-218-937-11	RES-CHIP 47 5% 1/16W		
2134		DE3	RESISTOR		R3834	1-218-937-11	RES-CHIP 47 5% 1/16W		
2135		DE3	RESISTOR		R3836	1-218-937-11	RES-CHIP 47 5% 1/16W		
2136		DE3	RESISTOR		R3840	1-218-937-11	RES-CHIP 47 5% 1/16W		
2137		DE3	RESISTOR		R3841	1-218-937-11	RES-CHIP 47 5% 1/16W		
2138		DE3	RESISTOR		R3842	1-218-937-11	RES-CHIP 47 5% 1/16W		
2139		DE3	RESISTOR		R3902	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2140		DE3	RESISTOR		R3903	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2141		DE3	RESISTOR		R3904	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2142		DE3	RESISTOR		R3905	1-218-933-11	RES-CHIP 22 5% 1/16W		
2143		DE3	RESISTOR		R3907	1-218-990-11	SHORT CHIP 0		
2144		DE3	RESISTOR		R3908	1-218-990-11	SHORT CHIP 0		
2145		DE3	RESISTOR		R3938	1-216-864-11	SHORT CHIP 0		
2146		DE3	RESISTOR		R3939	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2147		DE3	RESISTOR		R3940	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2148		DE3	RESISTOR		R3941	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2149		DE3	RESISTOR		R3944	1-216-864-11	SHORT CHIP 0		
2150		DE3	RESISTOR		R4002	1-218-941-81	RES-CHIP 100 5% 1/16W		
2151		DE3	RESISTOR		R4003	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2152		DE3	RESISTOR		R4004	1-218-941-81	RES-CHIP 100 5% 1/16W		
2153		DE3	RESISTOR		R4005	1-218-941-81	RES-CHIP 100 5% 1/16W		
2154		DE3	RESISTOR		R4008	1-218-990-11	SHORT CHIP 0		
2155		DE3	RESISTOR		R4011	1-218-990-11	SHORT CHIP 0		
2156		DE3	RESISTOR		R4012	1-218-990-11	SHORT CHIP 0		
2157		DE3	RESISTOR		R4015	1-218-941-81	RES-CHIP 100 5% 1/16W		
2158		DE3	RESISTOR		R4016	1-218-941-81	RES-CHIP 100 5% 1/16W		
2159		DE3	RESISTOR		R4019	1-218-990-11	SHORT CHIP 0		
2160		DE3	RESISTOR		R4023	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2161		DE3	RESISTOR		R4025	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2162		DE3	RESISTOR		R4026	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2163		DE3	RESISTOR		R4027	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2164		DE3	RESISTOR		R4029	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2165		DE3	RESISTOR		R4034	1-218-990-11	SHORT CHIP 0		
2166		DE3	RESISTOR		R4035	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2167		DE3	RESISTOR		R4036	1-218-990-11	SHORT CHIP 0		
2168		DE3	RESISTOR		R4037	1-218-990-11	SHORT CHIP 0		
2169		DE3	RESISTOR		R4039	1-218-990-11	SHORT CHIP 0		
2170		DE3	RESISTOR		R4101	1-218-990-11	SHORT CHIP 0		
2171		DE3	RESISTOR		R4122	1-216-809-11	METAL CHIP 100 5% 1/10W		
2172		DE3	RESISTOR		R4123	1-216-809-11	METAL CHIP 100 5% 1/10W		
2173		DE3	RESISTOR		R4201	1-218-990-11	SHORT CHIP 0		
2174		DE3	RESISTOR		R4202	1-218-990-11	SHORT CHIP 0		
2175		DE3	RESISTOR		R4203	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2176		DE3	RESISTOR		R4400	1-218-933-11	RES-CHIP 22 5% 1/16W		
2177		DE3	RESISTOR		R4401	1-218-933-11	RES-CHIP 22 5% 1/16W		
2178		DE3	RESISTOR		R4402	1-218-933-11	RES-CHIP 22 5% 1/16W		
2179		DE3	RESISTOR		R4403	1-218-933-11	RES-CHIP 22 5% 1/16W		
2180		DE3	RESISTOR		R4404	1-218-990-11	SHORT CHIP 0		
2181		DE3	RESISTOR		R4411	1-218-933-11	RES-CHIP 22 5% 1/16W		
2182		DE3	RESISTOR		R4412	1-216-801-11	METAL CHIP 22 5% 1/10W		
2183		DE3	RESISTOR		R4413	1-216-801-11	METAL CHIP 22 5% 1/10W		
2184		DE3	RESISTOR		R4414	1-218-933-11	RES-CHIP 22 5% 1/16W		
2185		DE3	RESISTOR		R4415	1-218-933-11	RES-CHIP 22 5% 1/16W		
2186		DE3	RESISTOR		R4417	1-218-933-11	RES-CHIP 22 5% 1/16W		
2187		DE3	RESISTOR		R4418	1-218-933-11	RES-CHIP 22 5% 1/16W		
2188		DE3	RESISTOR		R4419	1-218-933-11	RES-CHIP 22 5% 1/16W		
2189		DE3	RESISTOR		R4421	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2190		DE3	RESISTOR		R4424	1-218-990-11	SHORT CHIP 0		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2191		DE3	RESISTOR		R4428	1-218-941-81	RES-CHIP 100 5% 1/16W		
2192		DE3	RESISTOR		R4429	1-218-985-11	RES-CHIP 470K 5% 1/16W		
2193		DE3	RESISTOR		R4430	1-216-801-11	METAL CHIP 22 5% 1/10W		
2194		DE3	RESISTOR		R4431	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2195		DE3	RESISTOR		R4433	1-218-985-11	RES-CHIP 470K 5% 1/16W		
2196		DE3	RESISTOR		R4434	1-218-977-11	RES-CHIP 100K 5% 1/16W		
2197		DE3	RESISTOR		R4435	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2198		DE3	RESISTOR		R4436	1-216-801-11	METAL CHIP 22 5% 1/10W		
2199		DE3	RESISTOR		R4437	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2200		DE3	RESISTOR		R4438	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2201		DE3	RESISTOR		R4439	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2202		DE3	RESISTOR		R4440	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2203		DE3	RESISTOR		R4441	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2204		DE3	RESISTOR		R4442	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2205		DE3	RESISTOR		R4443	1-218-977-11	RES-CHIP 100K 5% 1/16W		
2206		DE3	RESISTOR		R4444	1-218-990-11	SHORT CHIP 0		
2207		DE3	RESISTOR		R4445	1-218-977-11	RES-CHIP 100K 5% 1/16W		
2208		DE3	RESISTOR		R4446	1-218-949-11	RES-CHIP 470 5% 1/16W		
2209		DE3	RESISTOR		R4447	1-218-941-81	RES-CHIP 100 5% 1/16W		
2210		DE3	RESISTOR		R4448	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2211		DE3	RESISTOR		R4449	1-218-937-11	RES-CHIP 47 5% 1/16W		
2212		DE3	RESISTOR		R4450	1-218-937-11	RES-CHIP 47 5% 1/16W		
2213		DE3	RESISTOR		R4452	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2214		DE3	RESISTOR		R4453	1-218-941-81	RES-CHIP 100 5% 1/16W		
2215		DE3	RESISTOR		R4454	1-218-933-11	RES-CHIP 22 5% 1/16W		
2216		DE3	RESISTOR		R4455	1-218-937-11	RES-CHIP 47 5% 1/16W		
2217		DE3	RESISTOR		R4456	1-218-937-11	RES-CHIP 47 5% 1/16W		
2218		DE3	RESISTOR		R4457	1-218-937-11	RES-CHIP 47 5% 1/16W		
2219		DE3	RESISTOR		R4458	1-218-937-11	RES-CHIP 47 5% 1/16W		
2220		DE3	RESISTOR		R4459	1-218-937-11	RES-CHIP 47 5% 1/16W		
2221		DE3	RESISTOR		R4460	1-218-941-81	RES-CHIP 100 5% 1/16W		
2222		DE3	RESISTOR		R4461	1-218-941-81	RES-CHIP 100 5% 1/16W		
2223		DE3	RESISTOR		R4462	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2224		DE3	RESISTOR		R4463	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2225		DE3	RESISTOR		R4464	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2226		DE3	RESISTOR		R4465	1-218-951-11	RES-CHIP 680 5% 1/16W		
2227		DE3	RESISTOR		R4466	1-218-989-11	RES-CHIP 1M 5% 1/16W		
2228		DE3	RESISTOR		R4467	1-218-937-11	RES-CHIP 47 5% 1/16W		
2229		DE3	RESISTOR		R4468	1-218-937-11	RES-CHIP 47 5% 1/16W		
2230		DE3	RESISTOR		R4469	1-218-933-11	RES-CHIP 22 5% 1/16W		
2231		DE3	RESISTOR		R4470	1-218-933-11	RES-CHIP 22 5% 1/16W		
2232		DE3	RESISTOR		R4471	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
2233		DE3	RESISTOR		R4472	1-218-941-81	RES-CHIP 100 5% 1/16W		
2234		DE3	RESISTOR		R4473	1-218-941-81	RES-CHIP 100 5% 1/16W		
2235		DE3	RESISTOR		R4474	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2236		DE3	RESISTOR		R4475	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2237		DE3	RESISTOR		R4476	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2238		DE3	RESISTOR		R4477	1-218-933-11	RES-CHIP 22 5% 1/16W		
2239		DE3	RESISTOR		R4479	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2240		DE3	RESISTOR		R4480	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2241		DE3	RESISTOR		R4481	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2242		DE3	RESISTOR		R4482	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2243		DE3	RESISTOR		R4483	1-218-937-11	RES-CHIP 47 5% 1/16W		
2244		DE3	RESISTOR		R4484	1-218-937-11	RES-CHIP 47 5% 1/16W		
2245		DE3	RESISTOR		R4485	1-218-937-11	RES-CHIP 47 5% 1/16W		
2246		DE3	RESISTOR		R4486	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2247		DE3	RESISTOR		R4487	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2248		DE3	RESISTOR		R4489	1-218-941-81	RES-CHIP 100 5% 1/16W		
2249		DE3	RESISTOR		R4490	1-218-941-81	RES-CHIP 100 5% 1/16W		
2250		DE3	RESISTOR		R4492	1-218-941-81	RES-CHIP 100 5% 1/16W		
2251		DE3	RESISTOR		R4493	1-218-937-11	RES-CHIP 47 5% 1/16W		
2252		DE3	RESISTOR		R4494	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2253		DE3	RESISTOR		R4495	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2254		DE3	RESISTOR		R4496	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2255		DE3	RESISTOR		R4497	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2256		DE3	RESISTOR		R4498	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2257		DE3	RESISTOR		R4499	1-218-937-11	RES-CHIP 47 5% 1/16W		
2258		DE3	RESISTOR		R4500	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2259		DE3	RESISTOR		R4501	1-218-937-11	RES-CHIP 47 5% 1/16W		
2260		DE3	RESISTOR		R4502	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2261		DE3	RESISTOR		R4503	1-218-937-11	RES-CHIP 47 5% 1/16W		
2262		DE3	RESISTOR		R4504	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2263		DE3	RESISTOR		R4505	1-218-953-11	RES-CHIP 1K 5% 1/16W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2264		DE3	RESISTOR		R4506	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2265		DE3	RESISTOR		R4507	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2266		DE3	RESISTOR		R4508	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2267		DE3	RESISTOR		R4509	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2268		DE3	RESISTOR		R4511	1-218-990-11	SHORT CHIP 0		
2269		DE3	RESISTOR		R4512	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2270		DE3	RESISTOR		R4513	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2271		DE3	RESISTOR		R4515	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2272		DE3	RESISTOR		R4516	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2273		DE3	RESISTOR		R4518	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2274		DE3	RESISTOR		R4521	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2275		DE3	RESISTOR		R4522	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2276		DE3	RESISTOR		R4523	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2277		DE3	RESISTOR		R4524	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2278		DE3	RESISTOR		R4525	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
2279		DE3	RESISTOR		R4526	1-216-839-11	METAL CHIP 33K 5% 1/10W		
2280		DE3	RESISTOR		R4527	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2281		DE3	RESISTOR		R4528	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2282		DE3	RESISTOR		R4529	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2283		DE3	RESISTOR		R4530	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2284		DE3	RESISTOR		R4531	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2285		DE3	RESISTOR		R4532	1-218-941-81	RES-CHIP 100 5% 1/16W		
2286		DE3	RESISTOR		R4533	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2287		DE3	RESISTOR		R4534	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2288		DE3	RESISTOR		R4535	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2289		DE3	RESISTOR		R4537	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2290		DE3	RESISTOR		R4538	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2291		DE3	RESISTOR		R4539	1-218-941-81	RES-CHIP 100 5% 1/16W		
2292		DE3	RESISTOR		R4540	1-218-941-81	RES-CHIP 100 5% 1/16W		
2293		DE3	RESISTOR		R4541	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2294		DE3	RESISTOR		R4542	1-218-941-81	RES-CHIP 100 5% 1/16W		
2295		DE3	RESISTOR		R4543	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2296		DE3	RESISTOR		R4544	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2297		DE3	RESISTOR		R4546	1-218-967-11	RES-CHIP 15K 5% 1/16W		
2298		DE3	RESISTOR		R4547	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2299		DE3	RESISTOR		R4549	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2300		DE3	RESISTOR		R4550	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2301		DE3	RESISTOR		R4551	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2302		DE3	RESISTOR		R4552	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2303		DE3	RESISTOR		R4553	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2304		DE3	RESISTOR		R4554	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2305		DE3	RESISTOR		R4555	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2306		DE3	RESISTOR		R4558	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2307		DE3	RESISTOR		R4559	1-218-977-11	RES-CHIP 100K 5% 1/16W		
2308		DE3	RESISTOR		R4560	1-216-817-11	METAL CHIP 470 5% 1/10W		
2309		DE3	RESISTOR		R4561	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2310		DE3	RESISTOR		R4562	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
2311		DE3	RESISTOR		R4563	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2312		DE3	RESISTOR		R4564	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2313		DE3	RESISTOR		R4565	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2314		DE3	RESISTOR		R4566	1-218-990-11	SHORT CHIP 0		
2315		DE3	RESISTOR		R4567	1-218-990-11	SHORT CHIP 0		
2316		DE3	RESISTOR		R4568	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2317		DE3	RESISTOR		R4569	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2318		DE3	RESISTOR		R4570	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2319		DE3	RESISTOR		R4572	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2320		DE3	RESISTOR		R4573	1-218-990-11	SHORT CHIP 0		
2321		DE3	RESISTOR		R4574	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2322		DE3	RESISTOR		R4575	1-218-990-11	SHORT CHIP 0		
2323		DE3	RESISTOR		R4576	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2324		DE3	RESISTOR		R4577	1-218-971-11	RES-CHIP 33K 5% 1/16W		
2325		DE3	RESISTOR		R4578	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2326		DE3	RESISTOR		R4579	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2327		DE3	RESISTOR		R4580	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2328		DE3	RESISTOR		R4583	1-218-990-11	SHORT CHIP 0		
2329		DE3	RESISTOR		R4584	1-218-990-11	SHORT CHIP 0		
2330		DE3	RESISTOR		R4585	1-218-990-11	SHORT CHIP 0		
2331		DE3	RESISTOR		R4586	1-218-990-11	SHORT CHIP 0		
2332		DE3	RESISTOR		R4587	1-218-990-11	SHORT CHIP 0		
2333		DE3	RESISTOR		R4588	1-218-990-11	SHORT CHIP 0		
2334		DE3	RESISTOR		R4589	1-218-990-11	SHORT CHIP 0		
2335		DE3	RESISTOR		R4592	1-218-990-11	SHORT CHIP 0		
2336		DE3	RESISTOR		R4593	1-218-967-11	RES-CHIP 15K 5% 1/16W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2337		DE3	RESISTOR		R4594	1-218-971-11	RES-CHIP 33K 5% 1/16W		
2338		DE3	RESISTOR		R4595	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2339		DE3	RESISTOR		R4597	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
2340		DE3	RESISTOR		R4598	1-218-990-11	SHORT CHIP 0		
2341		DE3	RESISTOR		R4599	1-218-990-11	SHORT CHIP 0		
2342		DE3	RESISTOR		R4600	1-218-990-11	SHORT CHIP 0		
2343		DE3	RESISTOR		R4601	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
2344		DE3	RESISTOR		R4602	1-218-941-81	RES-CHIP 100 5% 1/16W		
2345		DE3	RESISTOR		R4603	1-218-973-11	RES-CHIP 47K 5% 1/16W		
2346		DE3	RESISTOR		R4604	1-218-933-11	RES-CHIP 22 5% 1/16W		
2347		DE3	RESISTOR		R4605	1-218-941-81	RES-CHIP 100 5% 1/16W		
2348		DE3	RESISTOR		R4606	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
2349		DE3	RESISTOR		R4607	1-218-990-11	SHORT CHIP 0		
2350		DE3	RESISTOR		R4609	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2351		DE3	RESISTOR		R4610	1-218-941-81	RES-CHIP 100 5% 1/16W		
2352		DE3	RESISTOR		R4612	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2353		DE3	RESISTOR		R4614	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2354		DE3	RESISTOR		R4700	1-218-990-11	SHORT CHIP 0		
2355		DE3	RESISTOR		R4701	1-218-990-11	SHORT CHIP 0		
2356		DE3	RESISTOR		R4702	1-218-990-11	SHORT CHIP 0		
2357		DE3	RESISTOR		R4703	1-218-990-11	SHORT CHIP 0		
2358		DE3	NETWORK		RB3401	1-234-378-21	RES, NETWORK 10KX4 (1005)		
2359		DE3	NETWORK		RB3402	1-234-378-21	RES, NETWORK 10KX4 (1005)		
2360		DE3	NETWORK		RB3409	1-234-795-21	RES, NETWORK 0X4 (2010)		
2361		DE3	NETWORK		RB3410	1-234-795-21	RES, NETWORK 0X4 (2010)		
2362		DE3	NETWORK		RB3411	1-234-795-21	RES, NETWORK 0X4 (2010)		
2363		DE3	NETWORK		RB3412	1-234-795-21	RES, NETWORK 0X4 (2010)		
2364		DE3	NETWORK		RB3413	1-234-795-21	RES, NETWORK 0X4 (2010)		
2365		DE3	NETWORK		RB3414	1-234-795-21	RES, NETWORK 0X4 (2010)		
2366		DE3	NETWORK		RB3415	1-234-795-21	RES, NETWORK 0X4 (2010)		
2367		DE3	NETWORK		RB3416	1-234-795-21	RES, NETWORK 0X4 (2010)		
2368		DE3	NETWORK		RB3503	1-234-378-21	RES, NETWORK 10KX4 (1005)		
2369		DE3	NETWORK		RB3601	1-234-370-21	RES, NETWORK 22X4 (1005)		
2370		DE3	NETWORK		RB3602	1-234-370-21	RES, NETWORK 22X4 (1005)		
2371		DE3	NETWORK		RB3603	1-234-370-21	RES, NETWORK 22X4 (1005)		
2372		DE3	NETWORK		RB3604	1-234-370-21	RES, NETWORK 22X4 (1005)		
2373		DE3	NETWORK		RB3605	1-234-370-21	RES, NETWORK 22X4 (1005)		
2374		DE3	NETWORK		RB3606	1-234-370-21	RES, NETWORK 22X4 (1005)		
2375		DE3	NETWORK		RB3607	1-234-370-21	RES, NETWORK 22X4 (1005)		
2376		DE3	NETWORK		RB3608	1-234-370-21	RES, NETWORK 22X4 (1005)		
2377		DE3	NETWORK		RB3609	1-234-370-21	RES, NETWORK 22X4 (1005)		
2378		DE3	NETWORK		RB3610	1-234-370-21	RES, NETWORK 22X4 (1005)		
2379		DE3	NETWORK		RB3611	1-234-370-21	RES, NETWORK 22X4 (1005)		
2380		DE3	NETWORK		RB3612	1-234-370-21	RES, NETWORK 22X4 (1005)		
2381		DE3	NETWORK		RB3613	1-234-370-21	RES, NETWORK 22X4 (1005)		
2382		DE3	NETWORK		RB3614	1-234-370-21	RES, NETWORK 22X4 (1005)		
2383		DE3	NETWORK		RB3615	1-234-370-21	RES, NETWORK 22X4 (1005)		
2384		DE3	NETWORK		RB3616	1-234-371-21	RES, NETWORK 47X4 (1005)		
2385		DE3	NETWORK		RB3617	1-234-371-21	RES, NETWORK 47X4 (1005)		
2386		DE3	NETWORK		RB3618	1-234-371-21	RES, NETWORK 47X4 (1005)		
2387		DE3	NETWORK		RB3619	1-234-371-21	RES, NETWORK 47X4 (1005)		
2388		DE3	NETWORK		RB3620	1-234-371-21	RES, NETWORK 47X4 (1005)		
2389		DE3	NETWORK		RB3621	1-234-371-21	RES, NETWORK 47X4 (1005)		
2390		DE3	NETWORK		RB3622	1-234-371-21	RES, NETWORK 47X4 (1005)		
2391		DE3	NETWORK		RB3623	1-234-371-21	RES, NETWORK 47X4 (1005)		
2392		DE3	NETWORK		RB3624	1-234-371-21	RES, NETWORK 47X4 (1005)		
2393		DE3	NETWORK		RB3625	1-234-371-21	RES, NETWORK 47X4 (1005)		
2394		DE3	NETWORK		RB3626	1-234-371-21	RES, NETWORK 47X4 (1005)		
2395		DE3	NETWORK		RB3627	1-234-371-21	RES, NETWORK 47X4 (1005)		
2396		DE3	NETWORK		RB3628	1-234-371-21	RES, NETWORK 47X4 (1005)		
2397		DE3	NETWORK		RB3629	1-234-371-21	RES, NETWORK 47X4 (1005)		
2398		DE3	NETWORK		RB3630	1-234-371-21	RES, NETWORK 47X4 (1005)		
2399		DE3	NETWORK		RB3705	1-234-370-21	RES, NETWORK 22X4 (1005)		
2400		DE3	NETWORK		RB3706	1-234-370-21	RES, NETWORK 22X4 (1005)		
2401		DE3	NETWORK		RB3707	1-234-370-21	RES, NETWORK 22X4 (1005)		
2402		DE3	NETWORK		RB3708	1-234-370-21	RES, NETWORK 22X4 (1005)		
2403		DE3	NETWORK		RB3709	1-234-370-21	RES, NETWORK 22X4 (1005)		
2404		DE3	NETWORK		RB3710	1-234-370-21	RES, NETWORK 22X4 (1005)		
2405		DE3	NETWORK		RB3711	1-234-370-21	RES, NETWORK 22X4 (1005)		
2406		DE3	NETWORK		RB3712	1-234-370-21	RES, NETWORK 22X4 (1005)		
2407		DE3	NETWORK		RB3714	1-234-370-21	RES, NETWORK 22X4 (1005)		
2408		DE3	NETWORK		RB3801	1-234-372-21	RES, NETWORK 100X4 (1005)		
2409		DE3	NETWORK		RB3802	1-234-372-21	RES, NETWORK 100X4 (1005)		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2410		DE3	NETWORK		RB3803	1-234-372-21	RES, NETWORK 100X4 (1005)		
2411		DE3	NETWORK		RB3804	1-234-372-21	RES, NETWORK 100X4 (1005)		
2412		DE3	NETWORK		RB3805	1-234-372-21	RES, NETWORK 100X4 (1005)		
2413		DE3	NETWORK		RB3813	1-234-371-21	RES, NETWORK 47X4 (1005)		
2414		DE3	NETWORK		RB3814	1-234-371-21	RES, NETWORK 47X4 (1005)		
2415		DE3	NETWORK		RB3815	1-234-371-21	RES, NETWORK 47X4 (1005)		
2416		DE3	NETWORK		RB3816	1-234-371-21	RES, NETWORK 47X4 (1005)		
2417		DE3	NETWORK		RB3817	1-234-371-21	RES, NETWORK 47X4 (1005)		
2418		DE3	NETWORK		RB3818	1-234-371-21	RES, NETWORK 47X4 (1005)		
2419		DE3	NETWORK		RB4100	1-234-372-21	RES, NETWORK 100X4 (1005)		
2420		DE3	NETWORK		RB4101	1-234-372-21	RES, NETWORK 100X4 (1005)		
2421		DE3	SWITCH		S3402	1-572-921-11	SWITCH, KEY BOARD		
2422		DE3	CRYSTAL		X3401	1-813-070-21	PIEZOELECTRIC OSCILLATOR		
2423		DE3	CRYSTAL		X3701	1-813-071-21	VIBRATOR, CRYSTAL		
2424		DE3	CRYSTAL		X3801	1-795-739-22	CRYSTAL OSCILLATOR (SMD)		
2425		DE3	CRYSTAL		X4400	1-781-829-22	OSCILLATOR, CRYSTAL (SMD)		
2426		DE3	CRYSTAL		X4401	1-813-095-11	VIBRATOR, CRYSTAL		
2427		DIC2	CAPACITOR		C1000	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2428		DIC2	CAPACITOR		C1001	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2429		DIC2	CAPACITOR		C1002	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2430		DIC2	CAPACITOR		C1003	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2431		DIC2	CAPACITOR		C1004	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2432		DIC2	CAPACITOR		C1005	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2433		DIC2	CAPACITOR		C1006	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2434		DIC2	CAPACITOR		C1009	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2435		DIC2	CAPACITOR		C1010	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2436		DIC2	CAPACITOR		C1011	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
2437		DIC2	CAPACITOR		C1012	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2438		DIC2	CAPACITOR		C1013	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2439		DIC2	CAPACITOR		C1014	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2440		DIC2	CAPACITOR		C1015	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2441		DIC2	CAPACITOR		C1016	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2442		DIC2	CAPACITOR		C1017	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2443		DIC2	CAPACITOR		C1018	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2444		DIC2	CAPACITOR		C1019	1-164-941-11	CERAMIC CHIP 0.0047UF 10.00% 16V		
2445		DIC2	CAPACITOR		C1020	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2446		DIC2	CAPACITOR		C1021	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
2447		DIC2	CAPACITOR		C1029	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2448		DIC2	CAPACITOR		C1030	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2449		DIC2	CAPACITOR		C1031	1-164-941-11	CERAMIC CHIP 0.0047UF 10.00% 16V		
2450		DIC2	CAPACITOR		C1032	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2451		DIC2	CAPACITOR		C1033	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2452		DIC2	CAPACITOR		C1034	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2453		DIC2	CAPACITOR		C1038	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2454		DIC2	CAPACITOR		C1040	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2455		DIC2	CAPACITOR		C1041	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
2456		DIC2	CAPACITOR		C1042	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2457		DIC2	CAPACITOR		C1043	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2458		DIC2	CAPACITOR		C1045	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2459		DIC2	CAPACITOR		C1047	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
2460		DIC2	CAPACITOR		C1049	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2461		DIC2	CAPACITOR		C1051	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2462		DIC2	CAPACITOR		C1053	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2463		DIC2	CAPACITOR		C1055	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
2464		DIC2	CAPACITOR		C1057	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2465		DIC2	CAPACITOR		C1063	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2466		DIC2	CAPACITOR		C1200	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2467		DIC2	CAPACITOR		C1201	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
2468		DIC2	CAPACITOR		C1202	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2469		DIC2	CAPACITOR		C1203	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2470		DIC2	CAPACITOR		C1204	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2471		DIC2	CAPACITOR		C1205	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2472		DIC2	CAPACITOR		C1206	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2473		DIC2	CAPACITOR		C1207	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2474		DIC2	CAPACITOR		C1208	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2475		DIC2	CAPACITOR		C1209	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
2476		DIC2	CAPACITOR		C1210	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
2477		DIC2	CAPACITOR		C1211	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
2478		DIC2	CAPACITOR		C1212	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
2479		DIC2	CAPACITOR		C1213	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2480		DIC2	CAPACITOR		C1214	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2481		DIC2	CAPACITOR		C1215	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2482		DIC2	CAPACITOR		C1216	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2483		DIC2	CAPACITOR		C1217	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2484		DIC2	CAPACITOR		C1218	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2485		DIC2	CAPACITOR		C1219	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2486		DIC2	CAPACITOR		C1220	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2487		DIC2	CAPACITOR		C1221	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2488		DIC2	CAPACITOR		C1222	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2489		DIC2	CAPACITOR		C1223	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2490		DIC2	CAPACITOR		C1224	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2491		DIC2	CAPACITOR		C1226	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2492		DIC2	CAPACITOR		C1227	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2493		DIC2	CAPACITOR		C1228	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2494		DIC2	CAPACITOR		C1229	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2495		DIC2	CAPACITOR		C1230	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2496		DIC2	CAPACITOR		C1231	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2497		DIC2	CAPACITOR		C1232	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2498		DIC2	CAPACITOR		C1233	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2499		DIC2	CAPACITOR		C1234	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2500		DIC2	CAPACITOR		C1235	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2501		DIC2	CAPACITOR		C1236	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2502		DIC2	CAPACITOR		C1237	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2503		DIC2	CAPACITOR		C1238	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2504		DIC2	CAPACITOR		C1239	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2505		DIC2	CAPACITOR		C1240	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2506		DIC2	CAPACITOR		C1241	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2507		DIC2	CAPACITOR		C1242	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2508		DIC2	CAPACITOR		C1243	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2509		DIC2	CAPACITOR		C1244	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2510		DIC2	CAPACITOR		C1245	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2511		DIC2	CAPACITOR		C1246	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2512		DIC2	CAPACITOR		C1247	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2513		DIC2	CAPACITOR		C1248	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2514		DIC2	CAPACITOR		C1249	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2515		DIC2	CAPACITOR		C1250	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2516		DIC2	CAPACITOR		C1251	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2517		DIC2	CAPACITOR		C1252	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2518		DIC2	CAPACITOR		C1253	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2519		DIC2	CAPACITOR		C1254	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2520		DIC2	CAPACITOR		C1255	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2521		DIC2	CAPACITOR		C1256	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2522		DIC2	CAPACITOR		C1257	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2523		DIC2	CAPACITOR		C1258	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2524		DIC2	CAPACITOR		C1259	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2525		DIC2	CAPACITOR		C1260	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2526		DIC2	CAPACITOR		C1261	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2527		DIC2	CAPACITOR		C1262	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2528		DIC2	CAPACITOR		C1263	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2529		DIC2	CAPACITOR		C1264	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2530		DIC2	CAPACITOR		C1265	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2531		DIC2	CAPACITOR		C1266	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2532		DIC2	CAPACITOR		C1267	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2533		DIC2	CAPACITOR		C1268	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2534		DIC2	CAPACITOR		C1269	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2535		DIC2	CAPACITOR		C1270	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2536		DIC2	CAPACITOR		C1271	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2537		DIC2	CAPACITOR		C1272	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2538		DIC2	CAPACITOR		C1273	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2539		DIC2	CAPACITOR		C1400	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
2540		DIC2	CAPACITOR		C1401	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2541		DIC2	CAPACITOR		C1403	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2542		DIC2	CAPACITOR		C1405	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
2543		DIC2	CAPACITOR		C1406	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
2544		DIC2	CAPACITOR		C1407	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
2545		DIC2	CAPACITOR		C1408	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
2546		DIC2	CAPACITOR		C1409	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2547		DIC2	CAPACITOR		C1410	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2548		DIC2	CAPACITOR		C1411	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2549		DIC2	CAPACITOR		C1412	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2550		DIC2	CAPACITOR		C1413	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2551		DIC2	CAPACITOR		C1414	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2552		DIC2	CAPACITOR		C1415	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2553		DIC2	CAPACITOR		C1416	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2554		DIC2	CAPACITOR		C1417	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2555		DIC2	CAPACITOR		C1418	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2556		DIC2	CAPACITOR		C1419	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2557		DIC2	CAPACITOR		C1420	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2558		DIC2	CAPACITOR		C1421	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2559		DIC2	CAPACITOR		C1422	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2560		DIC2	CAPACITOR		C1423	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2561		DIC2	CAPACITOR		C1424	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2562		DIC2	CAPACITOR		C1425	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2563		DIC2	CAPACITOR		C1426	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2564		DIC2	CAPACITOR		C1427	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2565		DIC2	CAPACITOR		C1428	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2566		DIC2	CAPACITOR		C1429	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2567		DIC2	CAPACITOR		C1430	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2568		DIC2	CAPACITOR		C1431	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2569		DIC2	CAPACITOR		C1432	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2570		DIC2	CAPACITOR		C1433	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2571		DIC2	CAPACITOR		C1434	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2572		DIC2	CAPACITOR		C1435	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2573		DIC2	CAPACITOR		C1436	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2574		DIC2	CAPACITOR		C1437	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2575		DIC2	CAPACITOR		C1438	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2576		DIC2	CAPACITOR		C1439	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2577		DIC2	CAPACITOR		C1440	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2578		DIC2	CAPACITOR		C1441	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2579		DIC2	CAPACITOR		C1442	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2580		DIC2	CAPACITOR		C1443	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2581		DIC2	CAPACITOR		C1444	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2582		DIC2	CAPACITOR		C1445	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2583		DIC2	CAPACITOR		C1446	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2584		DIC2	CAPACITOR		C1447	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2585		DIC2	CAPACITOR		C1448	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2586		DIC2	CAPACITOR		C1449	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2587		DIC2	CAPACITOR		C1450	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2588		DIC2	CAPACITOR		C1451	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2589		DIC2	CAPACITOR		C1452	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2590		DIC2	CAPACITOR		C1453	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2591		DIC2	CAPACITOR		C1454	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2592		DIC2	CAPACITOR		C1455	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2593		DIC2	CAPACITOR		C1456	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2594		DIC2	CAPACITOR		C1457	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2595		DIC2	CAPACITOR		C1458	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2596		DIC2	CAPACITOR		C1459	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2597		DIC2	CAPACITOR		C1600	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2598		DIC2	CAPACITOR		C1601	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2599		DIC2	CAPACITOR		C1604	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2600		DIC2	CAPACITOR		C1605	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
2601		DIC2	CAPACITOR		C1606	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2602		DIC2	CAPACITOR		C1608	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2603		DIC2	CAPACITOR		C1609	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2604		DIC2	CAPACITOR		C1610	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2605		DIC2	CAPACITOR		C1612	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2606		DIC2	CAPACITOR		C1613	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2607		DIC2	CAPACITOR		C1614	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
2608		DIC2	CAPACITOR		C1615	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
2609		DIC2	CAPACITOR		C1616	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2610		DIC2	CAPACITOR		C1617	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2611		DIC2	CAPACITOR		C1618	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2612		DIC2	CAPACITOR		C1619	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2613		DIC2	CAPACITOR		C1620	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2614		DIC2	CAPACITOR		C1621	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2615		DIC2	CAPACITOR		C1622	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2616		DIC2	CAPACITOR		C1623	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2617		DIC2	CAPACITOR		C1624	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2618		DIC2	CAPACITOR		C1625	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2619		DIC2	CAPACITOR		C1626	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2620		DIC2	CAPACITOR		C1627	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2621		DIC2	CAPACITOR		C1628	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2622		DIC2	CAPACITOR		C1629	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2623		DIC2	CAPACITOR		C1630	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2624		DIC2	CAPACITOR		C1631	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2625		DIC2	CAPACITOR		C1632	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2626		DIC2	CAPACITOR		C1633	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2627		DIC2	CAPACITOR		C1634	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2628		DIC2	CAPACITOR		C1635	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2629		DIC2	CAPACITOR		C1636	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2630		DIC2	CAPACITOR		C1637	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2631		DIC2	CAPACITOR		C1638	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2632		DIC2	CAPACITOR		C1639	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2633		DIC2	CAPACITOR		C1640	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2634		DIC2	CAPACITOR		C1641	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2635		DIC2	CAPACITOR		C1643	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2636		DIC2	CAPACITOR		C1644	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2637		DIC2	CAPACITOR		C1645	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2638		DIC2	CAPACITOR		C1646	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2639		DIC2	CAPACITOR		C1647	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2640		DIC2	CAPACITOR		C1703	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2641		DIC2	CAPACITOR		C1704	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2642		DIC2	CAPACITOR		C1708	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2643		DIC2	CAPACITOR		C1710	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2644		DIC2	CAPACITOR		C1712	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2645		DIC2	CAPACITOR		C1713	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
2646		DIC2	CAPACITOR		C1714	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
2647		DIC2	CAPACITOR		C1715	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2648		DIC2	CAPACITOR		C1716	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2649		DIC2	CAPACITOR		C1717	1-165-643-21	ELECT CHIP 150UF 20% 4V		
2650		DIC2	CAPACITOR		C1723	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2651		DIC2	CAPACITOR		C1724	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2652		DIC2	CAPACITOR		C1726	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2653		DIC2	CAPACITOR		C1727	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2654		DIC2	CAPACITOR		C1728	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2655		DIC2	CAPACITOR		C1729	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2656		DIC2	CAPACITOR		C1730	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2657		DIC2	CAPACITOR		C1731	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2658		DIC2	CAPACITOR		C1732	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2659		DIC2	CAPACITOR		C1738	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2660		DIC2	CAPACITOR		C1739	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2661		DIC2	CAPACITOR		C1740	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2662		DIC2	CAPACITOR		C1741	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2663		DIC2	CAPACITOR		C1742	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2664		DIC2	CAPACITOR		C1743	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2665		DIC2	CAPACITOR		C1745	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2666		DIC2	CAPACITOR		C1746	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2667		DIC2	CAPACITOR		C1747	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2668		DIC2	CAPACITOR		C1748	1-164-854-11	CERAMIC CHIP 15PF 5.00% 50V		
2669		DIC2	CAPACITOR		C1749	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2670		DIC2	CAPACITOR		C1750	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2671		DIC2	CAPACITOR		C1751	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2672		DIC2	CAPACITOR		C1752	1-164-854-11	CERAMIC CHIP 15PF 5.00% 50V		
2673		DIC2	CAPACITOR		C1753	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2674		DIC2	CAPACITOR		C1754	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2675		DIC2	CAPACITOR		C1755	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2676		DIC2	CAPACITOR		C1756	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2677		DIC2	CAPACITOR		C1757	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2678		DIC2	CAPACITOR		C1758	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2679		DIC2	CAPACITOR		C1759	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2680		DIC2	CAPACITOR		C1760	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2681		DIC2	CAPACITOR		C1761	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2682		DIC2	CAPACITOR		C1762	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2683		DIC2	CAPACITOR		C1764	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2684		DIC2	CAPACITOR		C1765	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2685		DIC2	CAPACITOR		C1766	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2686		DIC2	CAPACITOR		C1767	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2687		DIC2	CAPACITOR		C1768	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2688		DIC2	CAPACITOR		C1769	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2689		DIC2	CAPACITOR		C1770	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2690		DIC2	CAPACITOR		C1771	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2691		DIC2	CAPACITOR		C1772	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2692		DIC2	CAPACITOR		C1773	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2693		DIC2	CAPACITOR		C1774	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2694		DIC2	CAPACITOR		C1775	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2695		DIC2	CAPACITOR		C1776	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2696		DIC2	CAPACITOR		C1777	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2697		DIC2	CAPACITOR		C1778	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2698		DIC2	CAPACITOR		C1779	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2699		DIC2	CAPACITOR		C1780	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2700		DIC2	CAPACITOR		C1781	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2701		DIC2	CAPACITOR		C1782	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2702		DIC2	CAPACITOR		C1783	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2703		DIC2	CAPACITOR		C1784	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2704		DIC2	CAPACITOR		C1785	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2705		DIC2	CAPACITOR		C1786	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2706		DIC2	CAPACITOR		C1787	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2707		DIC2	CAPACITOR		C1788	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2708		DIC2	CAPACITOR		C1789	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2709		DIC2	CAPACITOR		C1790	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2710		DIC2	CAPACITOR		C1791	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2711		DIC2	CAPACITOR		C1792	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2712		DIC2	CAPACITOR		C1793	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2713		DIC2	CAPACITOR		C1794	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2714		DIC2	CAPACITOR		C1795	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2715		DIC2	CAPACITOR		C1796	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2716		DIC2	CAPACITOR		C1797	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2717		DIC2	CAPACITOR		C1798	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2718		DIC2	CAPACITOR		C1799	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2719		DIC2	CAPACITOR		C1800	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2720		DIC2	CAPACITOR		C1801	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2721		DIC2	CAPACITOR		C1802	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2722		DIC2	CAPACITOR		C1803	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2723		DIC2	CAPACITOR		C1804	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
2724		DIC2	CAPACITOR		C1900	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2725		DIC2	CAPACITOR		C1902	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2726		DIC2	CAPACITOR		C1903	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2727		DIC2	CAPACITOR		C1904	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2728		DIC2	CAPACITOR		C1905	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
2729		DIC2	CAPACITOR		C1906	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2730		DIC2	CAPACITOR		C1907	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2731		DIC2	CAPACITOR		C1908	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
2732		DIC2	CAPACITOR		C1910	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2733		DIC2	CAPACITOR		C1911	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2734		DIC2	CAPACITOR		C1912	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2735		DIC2	CAPACITOR		C1915	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2736		DIC2	CAPACITOR		C1916	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2737		DIC2	CAPACITOR		C1917	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2738		DIC2	CAPACITOR		C1918	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2739		DIC2	CAPACITOR		C1919	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2740		DIC2	CAPACITOR		C1920	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2741		DIC2	CAPACITOR		C1921	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2742		DIC2	CAPACITOR		C1922	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
2743		DIC2	CAPACITOR		C1923	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2744		DIC2	CAPACITOR		C1924	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2745		DIC2	CAPACITOR		C1925	1-100-503-11	CERAMIC CHIP 4.7UF 10% 10V		
2746		DIC2	CAPACITOR		C1926	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2747		DIC2	CAPACITOR		C1927	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2748		DIC2	CAPACITOR		C1928	1-100-503-11	CERAMIC CHIP 4.7UF 10% 10V		
2749		DIC2	CAPACITOR		C1929	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2750		DIC2	CAPACITOR		C1930	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2751		DIC2	CAPACITOR		C1931	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2752		DIC2	CAPACITOR		C1932	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2753		DIC2	CAPACITOR		C1933	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2754		DIC2	CAPACITOR		C1934	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2755		DIC2	CAPACITOR		C1935	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2756		DIC2	CAPACITOR		C1936	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2757		DIC2	CAPACITOR		C1937	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
2758		DIC2	CAPACITOR		C1938	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
2759		DIC2	CAPACITOR		C1939	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
2760		DIC2	CAPACITOR		C1940	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2761		DIC2	DIODE		D1200	8-719-066-10	DIODE 1PS181-115		
2762		DIC2	DIODE		D1201	8-719-066-11	DIODE 1PS184-115		
2763		DIC2	DIODE		D1701	8-719-066-11	DIODE 1PS184-115		
2764		DIC2	DIODE		D1702	8-719-066-10	DIODE 1PS181-115		
2765		DIC2	DIODE		D1900	8-719-025-34	DIODE 02CZ6.8-TE85L		
2766		DIC2	DIODE		D1901	8-719-081-97	DIODE MMDL914T1		
2767		DIC2	DIODE		D1902	8-719-800-76	DIODE 1SS226		
2768		DIC2	DIODE		D1903	8-719-800-76	DIODE 1SS226		
2769		DIC2	FUSE	⚠	F1000	1-576-604-21	FUSE 1A 72V		
2770		DIC2	FUSE	⚠	F1001	1-576-604-21	FUSE 1A 72V		
2771		DIC2	FUSE	⚠	F1002	1-576-604-21	FUSE 1A 72V		
2772		DIC2	FERRITE BEAD		FB1000	1-414-228-11	FERRITE 0UH		
2773		DIC2	FERRITE BEAD		FB1001	1-414-228-11	FERRITE 0UH		
2774		DIC2	FERRITE BEAD		FB1002	1-414-228-11	FERRITE 0UH		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2775		DIC2	FERRITE BEAD		FB1003	1-414-228-11	FERRITE 0UH		
2776		DIC2	FERRITE BEAD		FB1004	1-414-228-11	FERRITE 0UH		
2777		DIC2	FERRITE BEAD		FB1005	1-414-228-11	FERRITE 0UH		
2778		DIC2	FERRITE BEAD		FB1200	1-414-234-22	FERRITE 0UH		
2779		DIC2	FERRITE BEAD		FB1701	1-414-445-11	FERRITE 0UH		
2780		DIC2	FERRITE BEAD		FB1703	1-414-445-11	FERRITE 0UH		
2781		DIC2	FILTER		FL1200	1-234-177-21	FERRITE 0UH		
2782		DIC2	FILTER		FL1201	1-234-560-21	FILTER, LOW PASS		
2783		DIC2	FILTER		FL1202	1-234-559-21	FILTER, LOW PASS		
2784		DIC2	FILTER		FL1203	1-234-559-21	FILTER, LOW PASS		
2785		DIC2	FILTER		FL1204	1-234-177-21	FERRITE 0UH		
2786		DIC2	FILTER		FL1205	1-234-177-21	FERRITE 0UH		
2787		DIC2	FILTER		FL1206	1-234-177-21	FERRITE 0UH		
2788		DIC2	FILTER		FL1207	1-234-177-21	FERRITE 0UH		
2789		DIC2	FILTER		FL1208	1-234-177-21	FERRITE 0UH		
2790		DIC2	IC		IC1000	6-701-680-01	IC PST3629NR		
2791		DIC2	IC		IC1001	6-701-680-01	IC PST3629NR		
2792		DIC2	IC		IC1002	8-759-677-29	IC TC74LVX125FT(EL)		
2793		DIC2	IC		IC1003	6-703-073-01	IC THC63LVDM83C-T		
2794		DIC2	IC		IC1006	8-759-677-29	IC TC74LVX125FT(EL)		
2795		DIC2	IC		IC1200	8-759-712-65	IC PQ070XZ01ZP		
2796		DIC2	IC		IC1201	6-705-529-01	IC LMH6658MMX/J5000172		
2797		DIC2	IC		IC1202	6-705-529-01	IC LMH6658MMX/J5000172		
2798		DIC2	IC		IC1203	8-752-425-02	IC CXD3802BQ		
2799		DIC2	IC		IC1204	6-703-430-01	IC MT48LC2M32B2TG-6-Y94W		
2800		DIC2	IC		IC1402	8-752-425-02	IC CXD3802BQ		
2801		DIC2	IC		IC1600	8-759-669-78	IC TLC2933IPWR-12		
2802		DIC2	IC		IC1602	8-759-676-70	IC MSM56V16160F-10TS-K		
2803		DIC2	IC		IC1603	8-752-422-52	IC CXD2097BQ		
2804		DIC2	IC		IC1702	6-700-120-01	IC IMISM560BZD		
2805		DIC2	IC		IC1703	6-704-992-01	IC CXD9707DGP		
2806		DIC2	IC		IC1704	6-703-430-01	IC MT48LC2M32B2TG-6-Y94W		
2807		DIC2	IC		IC1705	6-703-430-01	IC MT48LC2M32B2TG-6-Y94W		
2808		DIC2	IC		IC1900	6-702-688-01	IC M24C64-WMN6T(B)		
2809		DIC2	IC		IC1901	8-759-349-11	IC PST9145NL		
2810		DIC2	IC		IC1902	8-752-937-39	IC CXP964032-003R		
2811		DIC2	IC		IC1903	8-752-937-39	IC CXP964032-003R		
2812		DIC2	IC		IC1910	6-803-756-01	IC MB94P918PF-G-166A		
2813		DIC2	COIL		L1000	1-412-029-11	INDUCTOR 10UH		
2814		DIC2	COIL		L1003	1-412-058-11	INDUCTOR 10UH		
2815		DIC2	COIL		L1004	1-412-058-11	INDUCTOR 10UH		
2816		DIC2	COIL		L1200	1-469-555-21	INDUCTOR 10UH		
2817		DIC2	COIL		L1201	1-469-549-21	INDUCTOR 1UH		
2818		DIC2	COIL		L1202	1-469-549-21	INDUCTOR 1UH		
2819		DIC2	COIL		L1203	1-469-549-21	INDUCTOR 1UH		
2820		DIC2	COIL		L1204	1-469-549-21	INDUCTOR 1UH		
2821		DIC2	COIL		L1205	1-469-549-21	INDUCTOR 1UH		
2822		DIC2	COIL		L1206	1-412-029-11	INDUCTOR 10UH		
2823		DIC2	COIL		L1207	1-469-549-21	INDUCTOR 1UH		
2824		DIC2	COIL		L1208	1-469-549-21	INDUCTOR 1UH		
2825		DIC2	COIL		L1209	1-469-549-21	INDUCTOR 1UH		
2826		DIC2	COIL		L1210	1-469-549-21	INDUCTOR 1UH		
2827		DIC2	COIL		L1400	1-469-555-21	INDUCTOR 10UH		
2828		DIC2	COIL		L1401	1-412-029-11	INDUCTOR 10UH		
2829		DIC2	COIL		L1600	1-412-064-11	INDUCTOR 100UH		
2830		DIC2	COIL		L1601	1-412-064-11	INDUCTOR 100UH		
2831		DIC2	COIL		L1602	1-412-058-11	INDUCTOR 10UH		
2832		DIC2	COIL		L1603	1-469-549-21	INDUCTOR 1UH		
2833		DIC2	COIL		L1604	1-412-058-11	INDUCTOR 10UH		
2834		DIC2	COIL		L1605	1-469-549-21	INDUCTOR 1UH		
2835		DIC2	COIL		L1701	1-412-053-21	INDUCTOR 1.5UH		
2836		DIC2	COIL		L1702	1-412-053-21	INDUCTOR 1.5UH		
2837		DIC2	COIL		L1703	1-469-555-21	INDUCTOR 10UH		
2838		DIC2	COIL		L1704	1-469-549-21	INDUCTOR 1UH		
2839		DIC2	COIL		L1705	1-469-549-21	INDUCTOR 1UH		
2840		DIC2	COIL		L1706	1-469-549-21	INDUCTOR 1UH		
2841		DIC2	COIL		L1707	1-469-549-21	INDUCTOR 1UH		
2842		DIC2	COIL		L1708	1-469-549-21	INDUCTOR 1UH		
2843		DIC2	COIL		L1709	1-469-549-21	INDUCTOR 1UH		
2844		DIC2	COIL		L1900	1-412-058-11	INDUCTOR 10UH		
2845		DIC2	COIL		L1901	1-469-555-21	INDUCTOR 10UH		
2846		DIC2	COIL		L1902	1-469-555-21	INDUCTOR 10UH		
2847		DIC2	COIL		L1903	1-469-555-21	INDUCTOR 10UH		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2848		DIC2	TRANSISTOR		Q1000	8-729-117-73	TRANSISTOR 2SC4178-F14		
2849		DIC2	TRANSISTOR		Q1002	8-729-117-73	TRANSISTOR 2SC4178-F14		
2850		DIC2	TRANSISTOR		Q1003	8-729-117-73	TRANSISTOR 2SC4178-F14		
2851		DIC2	TRANSISTOR		Q1007	8-729-117-73	TRANSISTOR 2SC4178-F14		
2852		DIC2	TRANSISTOR		Q1008	8-729-117-73	TRANSISTOR 2SC4178-F14		
2853		DIC2	TRANSISTOR		Q1200	8-729-122-63	TRANSISTOR 2SA1226-E4		
2854		DIC2	TRANSISTOR		Q1201	8-729-122-63	TRANSISTOR 2SA1226-E4		
2855		DIC2	TRANSISTOR		Q1202	8-729-122-63	TRANSISTOR 2SA1226-E4		
2856		DIC2	TRANSISTOR		Q1203	8-729-030-53	TRANSISTOR MSD1819A-RT1		
2857		DIC2	TRANSISTOR		Q1204	8-729-117-73	TRANSISTOR 2SC4178-F14		
2858		DIC2	TRANSISTOR		Q1205	8-729-117-73	TRANSISTOR 2SC4178-F14		
2859		DIC2	TRANSISTOR		Q1206	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
2860		DIC2	TRANSISTOR		Q1208	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
2861		DIC2	TRANSISTOR		Q1209	8-729-030-53	TRANSISTOR MSD1819A-RT1		
2862		DIC2	TRANSISTOR		Q1400	8-729-122-63	TRANSISTOR 2SA1226-E4		
2863		DIC2	TRANSISTOR		Q1401	8-729-122-63	TRANSISTOR 2SA1226-E4		
2864		DIC2	TRANSISTOR		Q1403	8-729-030-53	TRANSISTOR MSD1819A-RT1		
2865		DIC2	TRANSISTOR		Q1407	8-729-030-53	TRANSISTOR MSD1819A-RT1		
2866		DIC2	TRANSISTOR		Q1600	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2867		DIC2	TRANSISTOR		Q1601	8-729-905-35	TRANSISTOR 2SC4081-R		
2868		DIC2	TRANSISTOR		Q1701	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
2869		DIC2	TRANSISTOR		Q1702	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
2870		DIC2	TRANSISTOR		Q1900	8-729-043-29	TRANSISTOR PDTC144EK-115		
2871		DIC2	TRANSISTOR		Q1901	8-729-030-54	TRANSISTOR MSB1218A-RT1		
2872		DIC2	TRANSISTOR		Q1903	8-729-030-54	TRANSISTOR MSB1218A-RT1		
2873		DIC2	TRANSISTOR		Q1904	8-729-028-97	TRANSISTOR DTC114TUA-T106		
2874		DIC2	TRANSISTOR		Q1905	8-729-030-54	TRANSISTOR MSB1218A-RT1		
2875		DIC2	TRANSISTOR		Q1906	8-729-030-54	TRANSISTOR MSB1218A-RT1		
2876		DIC2	TRANSISTOR		Q1907	8-729-030-53	TRANSISTOR MSD1819A-RT1		
2877		DIC2	TRANSISTOR		Q1908	8-729-030-53	TRANSISTOR MSD1819A-RT1		
2878		DIC2	RESISTOR		R1000	1-216-864-11	SHORT CHIP 0		
2879		DIC2	RESISTOR		R1003	1-218-990-11	SHORT CHIP 0		
2880		DIC2	RESISTOR		R1004	1-218-990-11	SHORT CHIP 0		
2881		DIC2	RESISTOR		R1005	1-218-990-11	SHORT CHIP 0		
2882		DIC2	RESISTOR		R1006	1-218-990-11	SHORT CHIP 0		
2883		DIC2	RESISTOR		R1007	1-218-990-11	SHORT CHIP 0		
2884		DIC2	RESISTOR		R1014	1-216-864-11	SHORT CHIP 0		
2885		DIC2	RESISTOR		R1016	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2886		DIC2	RESISTOR		R1017	1-218-990-11	SHORT CHIP 0		
2887		DIC2	RESISTOR		R1018	1-218-933-11	RES-CHIP 22 5% 1/16W		
2888		DIC2	RESISTOR		R1019	1-218-933-11	RES-CHIP 22 5% 1/16W		
2889		DIC2	RESISTOR		R1020	1-218-933-11	RES-CHIP 22 5% 1/16W		
2890		DIC2	RESISTOR		R1021	1-218-937-11	RES-CHIP 47 5% 1/16W		
2891		DIC2	RESISTOR		R1023	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2892		DIC2	RESISTOR		R1026	1-218-937-11	RES-CHIP 47 5% 1/16W		
2893		DIC2	RESISTOR		R1028	1-218-937-11	RES-CHIP 47 5% 1/16W		
2894		DIC2	RESISTOR		R1030	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2895		DIC2	RESISTOR		R1031	1-218-949-11	RES-CHIP 470 5% 1/16W		
2896		DIC2	RESISTOR		R1032	1-218-937-11	RES-CHIP 47 5% 1/16W		
2897		DIC2	RESISTOR		R1036	1-218-937-11	RES-CHIP 47 5% 1/16W		
2898		DIC2	RESISTOR		R1040	1-218-953-11	RES-CHIP 1K 5% 1/16W		
2899		DIC2	RESISTOR		R1041	1-218-949-11	RES-CHIP 470 5% 1/16W		
2900		DIC2	RESISTOR		R1049	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2901		DIC2	RESISTOR		R1050	1-218-941-81	RES-CHIP 100 5% 1/16W		
2902		DIC2	RESISTOR		R1051	1-218-941-81	RES-CHIP 100 5% 1/16W		
2903		DIC2	RESISTOR		R1052	1-218-941-81	RES-CHIP 100 5% 1/16W		
2904		DIC2	RESISTOR		R1053	1-218-941-81	RES-CHIP 100 5% 1/16W		
2905		DIC2	RESISTOR		R1056	1-216-864-11	SHORT CHIP 0		
2906		DIC2	RESISTOR		R1059	1-216-296-11	SHORT CHIP 0		
2907		DIC2	RESISTOR		R1060	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
2908		DIC2	RESISTOR		R1062	1-218-990-11	SHORT CHIP 0		
2909		DIC2	RESISTOR		R1063	1-216-296-11	SHORT CHIP 0		
2910		DIC2	RESISTOR		R1064	1-218-941-81	RES-CHIP 100 5% 1/16W		
2911		DIC2	RESISTOR		R1065	1-218-941-81	RES-CHIP 100 5% 1/16W		
2912		DIC2	RESISTOR		R1066	1-218-968-11	RES-CHIP 18K 5% 1/16W		
2913		DIC2	RESISTOR		R1068	1-216-864-11	SHORT CHIP 0		
2914		DIC2	RESISTOR		R1070	1-216-864-11	SHORT CHIP 0		
2915		DIC2	RESISTOR		R1076	1-218-941-81	RES-CHIP 100 5% 1/16W		
2916		DIC2	RESISTOR		R1077	1-218-990-11	SHORT CHIP 0		
2917		DIC2	RESISTOR		R1078	1-218-941-81	RES-CHIP 100 5% 1/16W		
2918		DIC2	RESISTOR		R1080	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
2919		DIC2	RESISTOR		R1081	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
2920		DIC2	RESISTOR		R1085	1-218-990-11	SHORT CHIP 0		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2921		DIC2	RESISTOR		R1088	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
2922		DIC2	RESISTOR		R1089	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
2923		DIC2	RESISTOR		R1200	1-216-864-11	SHORT CHIP 0		
2924		DIC2	RESISTOR		R1201	1-216-864-11	SHORT CHIP 0		
2925		DIC2	RESISTOR		R1202	1-220-174-11	METAL CHIP 200 5% 1/16W		
2926		DIC2	RESISTOR		R1203	1-208-874-81	METAL CHIP 300 0.5% 1/16W		
2927		DIC2	RESISTOR		R1204	1-208-874-81	METAL CHIP 300 0.5% 1/16W		
2928		DIC2	RESISTOR		R1205	1-220-174-11	METAL CHIP 200 5% 1/16W		
2929		DIC2	RESISTOR		R1206	1-208-874-81	METAL CHIP 300 0.5% 1/16W		
2930		DIC2	RESISTOR		R1207	1-208-874-81	METAL CHIP 300 0.5% 1/16W		
2931		DIC2	RESISTOR		R1208	1-218-941-81	RES-CHIP 100 5% 1/16W		
2932		DIC2	RESISTOR		R1209	1-218-941-81	RES-CHIP 100 5% 1/16W		
2933		DIC2	RESISTOR		R1210	1-218-941-81	RES-CHIP 100 5% 1/16W		
2934		DIC2	RESISTOR		R1211	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
2935		DIC2	RESISTOR		R1212	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
2936		DIC2	RESISTOR		R1214	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
2937		DIC2	RESISTOR		R1215	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
2938		DIC2	RESISTOR		R1216	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
2939		DIC2	RESISTOR		R1217	1-218-990-11	SHORT CHIP 0		
2940		DIC2	RESISTOR		R1218	1-218-990-11	SHORT CHIP 0		
2941		DIC2	RESISTOR		R1219	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W		
2942		DIC2	RESISTOR		R1220	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
2943		DIC2	RESISTOR		R1225	1-208-643-11	METAL CHIP 22 0.5% 1/16W		
2944		DIC2	RESISTOR		R1226	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
2945		DIC2	RESISTOR		R1227	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
2946		DIC2	RESISTOR		R1228	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2947		DIC2	RESISTOR		R1229	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
2948		DIC2	RESISTOR		R1230	1-218-979-11	RES-CHIP 150K 5% 1/16W		
2949		DIC2	RESISTOR		R1231	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
2950		DIC2	RESISTOR		R1232	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
2951		DIC2	RESISTOR		R1235	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
2952		DIC2	RESISTOR		R1236	1-218-941-11	METAL CHIP 100 5% 1/16W		
2953		DIC2	RESISTOR		R1238	1-218-951-11	RES-CHIP 680 5% 1/16W		
2954		DIC2	RESISTOR		R1239	1-216-864-11	SHORT CHIP 0		
2955		DIC2	RESISTOR		R1240	1-216-864-11	SHORT CHIP 0		
2956		DIC2	RESISTOR		R1241	1-218-990-11	SHORT CHIP 0		
2957		DIC2	RESISTOR		R1242	1-218-990-11	SHORT CHIP 0		
2958		DIC2	RESISTOR		R1243	1-218-941-11	METAL CHIP 100 5% 1/16W		
2959		DIC2	RESISTOR		R1244	1-216-864-11	SHORT CHIP 0		
2960		DIC2	RESISTOR		R1246	1-218-990-11	SHORT CHIP 0		
2961		DIC2	RESISTOR		R1247	1-216-864-11	SHORT CHIP 0		
2962		DIC2	RESISTOR		R1248	1-218-951-11	RES-CHIP 680 5% 1/16W		
2963		DIC2	RESISTOR		R1250	1-218-990-11	SHORT CHIP 0		
2964		DIC2	RESISTOR		R1251	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2965		DIC2	RESISTOR		R1252	1-218-990-11	SHORT CHIP 0		
2966		DIC2	RESISTOR		R1253	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2967		DIC2	RESISTOR		R1255	1-208-908-11	METAL CHIP 7.5K 0.5% 1/16W		
2968		DIC2	RESISTOR		R1256	1-208-692-11	METAL CHIP 2.4K 0.5% 1/16W		
2969		DIC2	RESISTOR		R1258	1-218-990-11	SHORT CHIP 0		
2970		DIC2	RESISTOR		R1259	1-218-990-11	SHORT CHIP 0		
2971		DIC2	RESISTOR		R1260	1-218-990-11	SHORT CHIP 0		
2972		DIC2	RESISTOR		R1263	1-218-990-11	SHORT CHIP 0		
2973		DIC2	RESISTOR		R1268	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2974		DIC2	RESISTOR		R1269	1-218-969-11	RES-CHIP 22K 5% 1/16W		
2975		DIC2	RESISTOR		R1270	1-218-937-11	RES-CHIP 47 5% 1/16W		
2976		DIC2	RESISTOR		R1271	1-218-937-11	RES-CHIP 47 5% 1/16W		
2977		DIC2	RESISTOR		R1272	1-218-990-11	SHORT CHIP 0		
2978		DIC2	RESISTOR		R1273	1-218-933-11	RES-CHIP 22 5% 1/16W		
2979		DIC2	RESISTOR		R1274	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2980		DIC2	RESISTOR		R1275	1-218-990-11	SHORT CHIP 0		
2981		DIC2	RESISTOR		R1276	1-218-990-11	SHORT CHIP 0		
2982		DIC2	RESISTOR		R1277	1-218-990-11	SHORT CHIP 0		
2983		DIC2	RESISTOR		R1278	1-218-990-11	SHORT CHIP 0		
2984		DIC2	RESISTOR		R1279	1-218-990-11	SHORT CHIP 0		
2985		DIC2	RESISTOR		R1280	1-218-990-11	SHORT CHIP 0		
2986		DIC2	RESISTOR		R1281	1-218-990-11	SHORT CHIP 0		
2987		DIC2	RESISTOR		R1282	1-218-937-11	RES-CHIP 47 5% 1/16W		
2988		DIC2	RESISTOR		R1283	1-218-937-11	RES-CHIP 47 5% 1/16W		
2989		DIC2	RESISTOR		R1284	1-218-990-11	SHORT CHIP 0		
2990		DIC2	RESISTOR		R1285	1-218-990-11	SHORT CHIP 0		
2991		DIC2	RESISTOR		R1286	1-218-990-11	SHORT CHIP 0		
2992		DIC2	RESISTOR		R1287	1-218-990-11	SHORT CHIP 0		
2993		DIC2	RESISTOR		R1288	1-218-990-11	SHORT CHIP 0		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2994		DIC2	RESISTOR		R1289	1-218-990-11	SHORT CHIP 0		
2995		DIC2	RESISTOR		R1290	1-218-933-11	RES-CHIP 22 5% 1/16W		
2996		DIC2	RESISTOR		R1291	1-216-864-11	SHORT CHIP 0		
2997		DIC2	RESISTOR		R1292	1-218-933-11	RES-CHIP 22 5% 1/16W		
2998		DIC2	RESISTOR		R1293	1-218-965-11	RES-CHIP 10K 5% 1/16W		
2999		DIC2	RESISTOR		R1294	1-218-990-11	SHORT CHIP 0		
3000		DIC2	RESISTOR		R1295	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3001		DIC2	RESISTOR		R1296	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3002		DIC2	RESISTOR		R1297	1-218-937-11	RES-CHIP 47 5% 1/16W		
3003		DIC2	RESISTOR		R1298	1-218-937-11	RES-CHIP 47 5% 1/16W		
3004		DIC2	RESISTOR		R1300	1-218-937-11	RES-CHIP 47 5% 1/16W		
3005		DIC2	RESISTOR		R1301	1-218-937-11	RES-CHIP 47 5% 1/16W		
3006		DIC2	RESISTOR		R1302	1-218-937-11	RES-CHIP 47 5% 1/16W		
3007		DIC2	RESISTOR		R1311	1-218-990-11	SHORT CHIP 0		
3008		DIC2	RESISTOR		R1312	1-218-990-11	SHORT CHIP 0		
3009		DIC2	RESISTOR		R1313	1-218-990-11	SHORT CHIP 0		
3010		DIC2	RESISTOR		R1314	1-218-990-11	SHORT CHIP 0		
3011		DIC2	RESISTOR		R1400	1-216-864-11	SHORT CHIP 0		
3012		DIC2	RESISTOR		R1404	1-218-933-11	RES-CHIP 22 5% 1/16W		
3013		DIC2	RESISTOR		R1411	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3014		DIC2	RESISTOR		R1412	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3015		DIC2	RESISTOR		R1413	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3016		DIC2	RESISTOR		R1416	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W		
3017		DIC2	RESISTOR		R1417	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
3018		DIC2	RESISTOR		R1419	1-218-990-11	SHORT CHIP 0		
3019		DIC2	RESISTOR		R1420	1-218-990-11	SHORT CHIP 0		
3020		DIC2	RESISTOR		R1422	1-208-643-11	METAL CHIP 22 0.5% 1/16W		
3021		DIC2	RESISTOR		R1426	1-218-979-11	RES-CHIP 150K 5% 1/16W		
3022		DIC2	RESISTOR		R1427	1-218-939-11	METAL CHIP 68 5% 1/16W		
3023		DIC2	RESISTOR		R1429	1-218-939-11	METAL CHIP 68 5% 1/16W		
3024		DIC2	RESISTOR		R1434	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3025		DIC2	RESISTOR		R1440	1-218-990-11	SHORT CHIP 0		
3026		DIC2	RESISTOR		R1443	1-218-990-11	SHORT CHIP 0		
3027		DIC2	RESISTOR		R1444	1-218-990-11	SHORT CHIP 0		
3028		DIC2	RESISTOR		R1446	1-208-908-11	METAL CHIP 7.5K 0.5% 1/16W		
3029		DIC2	RESISTOR		R1447	1-208-692-11	METAL CHIP 2.4K 0.5% 1/16W		
3030		DIC2	RESISTOR		R1449	1-218-990-11	SHORT CHIP 0		
3031		DIC2	RESISTOR		R1452	1-218-990-11	SHORT CHIP 0		
3032		DIC2	RESISTOR		R1453	1-218-937-11	RES-CHIP 47 5% 1/16W		
3033		DIC2	RESISTOR		R1454	1-218-937-11	RES-CHIP 47 5% 1/16W		
3034		DIC2	RESISTOR		R1455	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3035		DIC2	RESISTOR		R1456	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3036		DIC2	RESISTOR		R1457	1-218-990-11	SHORT CHIP 0		
3037		DIC2	RESISTOR		R1458	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3038		DIC2	RESISTOR		R1459	1-218-990-11	SHORT CHIP 0		
3039		DIC2	RESISTOR		R1460	1-218-990-11	SHORT CHIP 0		
3040		DIC2	RESISTOR		R1461	1-218-990-11	SHORT CHIP 0		
3041		DIC2	RESISTOR		R1462	1-218-941-81	RES-CHIP 100 5% 1/16W		
3042		DIC2	RESISTOR		R1463	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3043		DIC2	RESISTOR		R1464	1-218-990-11	SHORT CHIP 0		
3044		DIC2	RESISTOR		R1465	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3045		DIC2	RESISTOR		R1466	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3046		DIC2	RESISTOR		R1467	1-218-933-11	RES-CHIP 22 5% 1/16W		
3047		DIC2	RESISTOR		R1468	1-218-937-11	RES-CHIP 47 5% 1/16W		
3048		DIC2	RESISTOR		R1469	1-218-937-11	RES-CHIP 47 5% 1/16W		
3049		DIC2	RESISTOR		R1475	1-218-937-11	RES-CHIP 47 5% 1/16W		
3050		DIC2	RESISTOR		R1476	1-218-937-11	RES-CHIP 47 5% 1/16W		
3051		DIC2	RESISTOR		R1477	1-218-937-11	RES-CHIP 47 5% 1/16W		
3052		DIC2	RESISTOR		R1479	1-218-941-81	RES-CHIP 100 5% 1/16W		
3053		DIC2	RESISTOR		R1480	1-218-941-81	RES-CHIP 100 5% 1/16W		
3054		DIC2	RESISTOR		R1482	1-218-990-11	SHORT CHIP 0		
3055		DIC2	RESISTOR		R1483	1-218-990-11	SHORT CHIP 0		
3056		DIC2	RESISTOR		R1484	1-218-990-11	SHORT CHIP 0		
3057		DIC2	RESISTOR		R1600	1-218-945-11	RES-CHIP 220 5% 1/16W		
3058		DIC2	RESISTOR		R1601	1-218-947-11	RES-CHIP 330 5% 1/16W		
3059		DIC2	RESISTOR		R1602	1-218-941-81	RES-CHIP 100 5% 1/16W		
3060		DIC2	RESISTOR		R1603	1-218-990-11	SHORT CHIP 0		
3061		DIC2	RESISTOR		R1604	1-218-941-81	RES-CHIP 100 5% 1/16W		
3062		DIC2	RESISTOR		R1605	1-218-990-11	SHORT CHIP 0		
3063		DIC2	RESISTOR		R1606	1-218-985-11	RES-CHIP 470K 5% 1/16W		
3064		DIC2	RESISTOR		R1607	1-218-990-11	SHORT CHIP 0		
3065		DIC2	RESISTOR		R1608	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3066		DIC2	RESISTOR		R1609	1-218-945-11	RES-CHIP 220 5% 1/16W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3067		DIC2	RESISTOR		R1610	1-208-898-11	METAL CHIP 3K 0.5% 1/16W		
3068		DIC2	RESISTOR		R1612	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3069		DIC2	RESISTOR		R1614	1-216-295-91	SHORT CHIP 0		
3070		DIC2	RESISTOR		R1615	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
3071		DIC2	RESISTOR		R1617	1-218-985-11	RES-CHIP 470K 5% 1/16W		
3072		DIC2	RESISTOR		R1618	1-218-990-11	SHORT CHIP 0		
3073		DIC2	RESISTOR		R1619	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3074		DIC2	RESISTOR		R1621	1-218-937-11	RES-CHIP 47 5% 1/16W		
3075		DIC2	RESISTOR		R1622	1-218-937-11	RES-CHIP 47 5% 1/16W		
3076		DIC2	RESISTOR		R1623	1-218-942-11	RES-CHIP 120 5% 1/16W		
3077		DIC2	RESISTOR		R1624	1-218-942-11	RES-CHIP 120 5% 1/16W		
3078		DIC2	RESISTOR		R1625	1-218-935-11	RES-CHIP 33 5% 1/16W		
3079		DIC2	RESISTOR		R1626	1-218-937-11	RES-CHIP 47 5% 1/16W		
3080		DIC2	RESISTOR		R1627	1-218-935-11	RES-CHIP 33 5% 1/16W		
3081		DIC2	RESISTOR		R1628	1-218-941-81	RES-CHIP 100 5% 1/16W		
3082		DIC2	RESISTOR		R1629	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3083		DIC2	RESISTOR		R1630	1-218-941-81	RES-CHIP 100 5% 1/16W		
3084		DIC2	RESISTOR		R1631	1-218-941-81	RES-CHIP 100 5% 1/16W		
3085		DIC2	RESISTOR		R1632	1-218-941-81	RES-CHIP 100 5% 1/16W		
3086		DIC2	RESISTOR		R1633	1-218-937-11	RES-CHIP 47 5% 1/16W		
3087		DIC2	RESISTOR		R1634	1-216-295-91	SHORT CHIP 0		
3088		DIC2	RESISTOR		R1635	1-218-937-11	RES-CHIP 47 5% 1/16W		
3089		DIC2	RESISTOR		R1636	1-218-990-11	SHORT CHIP 0		
3090		DIC2	RESISTOR		R1704	1-218-990-11	SHORT CHIP 0		
3091		DIC2	RESISTOR		R1705	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
3092		DIC2	RESISTOR		R1707	1-218-990-11	SHORT CHIP 0		
3093		DIC2	RESISTOR		R1709	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3094		DIC2	RESISTOR		R1712	1-218-990-11	SHORT CHIP 0		
3095		DIC2	RESISTOR		R1715	1-218-935-11	RES-CHIP 33 5% 1/16W		
3096		DIC2	RESISTOR		R1716	1-218-990-11	SHORT CHIP 0		
3097		DIC2	RESISTOR		R1717	1-216-295-91	SHORT CHIP 0		
3098		DIC2	RESISTOR		R1719	1-218-935-11	RES-CHIP 33 5% 1/16W		
3099		DIC2	RESISTOR		R1730	1-218-990-11	SHORT CHIP 0		
3100		DIC2	RESISTOR		R1731	1-218-990-11	SHORT CHIP 0		
3101		DIC2	RESISTOR		R1732	1-218-933-11	RES-CHIP 22 5% 1/16W		
3102		DIC2	RESISTOR		R1733	1-218-933-11	RES-CHIP 22 5% 1/16W		
3103		DIC2	RESISTOR		R1734	1-218-937-11	RES-CHIP 47 5% 1/16W		
3104		DIC2	RESISTOR		R1736	1-218-990-11	SHORT CHIP 0		
3105		DIC2	RESISTOR		R1737	1-218-990-11	SHORT CHIP 0		
3106		DIC2	RESISTOR		R1738	1-218-990-11	SHORT CHIP 0		
3107		DIC2	RESISTOR		R1739	1-218-990-11	SHORT CHIP 0		
3108		DIC2	RESISTOR		R1740	1-218-933-11	RES-CHIP 22 5% 1/16W		
3109		DIC2	RESISTOR		R1741	1-218-990-11	SHORT CHIP 0		
3110		DIC2	RESISTOR		R1742	1-218-933-11	RES-CHIP 22 5% 1/16W		
3111		DIC2	RESISTOR		R1743	1-218-937-11	RES-CHIP 47 5% 1/16W		
3112		DIC2	RESISTOR		R1745	1-218-990-11	SHORT CHIP 0		
3113		DIC2	RESISTOR		R1747	1-218-990-11	SHORT CHIP 0		
3114		DIC2	RESISTOR		R1750	1-218-933-11	RES-CHIP 22 5% 1/16W		
3115		DIC2	RESISTOR		R1751	1-218-937-11	RES-CHIP 47 5% 1/16W		
3116		DIC2	RESISTOR		R1752	1-218-990-11	SHORT CHIP 0		
3117		DIC2	RESISTOR		R1753	1-218-933-11	RES-CHIP 22 5% 1/16W		
3118		DIC2	RESISTOR		R1754	1-218-990-11	SHORT CHIP 0		
3119		DIC2	RESISTOR		R1755	1-218-945-11	METAL CHIP 220 5% 1/16W		
3120		DIC2	RESISTOR		R1756	1-218-990-11	SHORT CHIP 0		
3121		DIC2	RESISTOR		R1758	1-218-990-11	SHORT CHIP 0		
3122		DIC2	RESISTOR		R1759	1-218-937-11	RES-CHIP 47 5% 1/16W		
3123		DIC2	RESISTOR		R1760	1-218-937-11	RES-CHIP 47 5% 1/16W		
3124		DIC2	RESISTOR		R1761	1-218-990-11	SHORT CHIP 0		
3125		DIC2	RESISTOR		R1762	1-218-990-11	SHORT CHIP 0		
3126		DIC2	RESISTOR		R1763	1-218-990-11	SHORT CHIP 0		
3127		DIC2	RESISTOR		R1764	1-218-990-11	SHORT CHIP 0		
3128		DIC2	RESISTOR		R1765	1-218-990-11	SHORT CHIP 0		
3129		DIC2	RESISTOR		R1766	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3130		DIC2	RESISTOR		R1767	1-218-990-11	SHORT CHIP 0		
3131		DIC2	RESISTOR		R1768	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3132		DIC2	RESISTOR		R1769	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3133		DIC2	RESISTOR		R1770	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3134		DIC2	RESISTOR		R1771	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3135		DIC2	RESISTOR		R1772	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3136		DIC2	RESISTOR		R1773	1-218-990-11	SHORT CHIP 0		
3137		DIC2	RESISTOR		R1774	1-218-990-11	SHORT CHIP 0		
3138		DIC2	RESISTOR		R1775	1-218-933-11	RES-CHIP 22 5% 1/16W		
3139		DIC2	RESISTOR		R1776	1-218-933-11	RES-CHIP 22 5% 1/16W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3140		DIC2	RESISTOR		R1777	1-218-933-11	RES-CHIP 22 5% 1/16W		
3141		DIC2	RESISTOR		R1779	1-218-990-11	SHORT CHIP 0		
3142		DIC2	RESISTOR		R1780	1-218-933-11	RES-CHIP 22 5% 1/16W		
3143		DIC2	RESISTOR		R1781	1-218-933-11	RES-CHIP 22 5% 1/16W		
3144		DIC2	RESISTOR		R1782	1-218-933-11	RES-CHIP 22 5% 1/16W		
3145		DIC2	RESISTOR		R1783	1-218-933-11	RES-CHIP 22 5% 1/16W		
3146		DIC2	RESISTOR		R1784	1-218-933-11	RES-CHIP 22 5% 1/16W		
3147		DIC2	RESISTOR		R1786	1-218-933-11	RES-CHIP 22 5% 1/16W		
3148		DIC2	RESISTOR		R1787	1-218-933-11	RES-CHIP 22 5% 1/16W		
3149		DIC2	RESISTOR		R1788	1-218-933-11	RES-CHIP 22 5% 1/16W		
3150		DIC2	RESISTOR		R1789	1-218-933-11	RES-CHIP 22 5% 1/16W		
3151		DIC2	RESISTOR		R1790	1-218-933-11	RES-CHIP 22 5% 1/16W		
3152		DIC2	RESISTOR		R1791	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3153		DIC2	RESISTOR		R1792	1-216-295-91	SHORT CHIP 0		
3154		DIC2	RESISTOR		R1793	1-216-295-91	SHORT CHIP 0		
3155		DIC2	RESISTOR		R1796	1-218-990-11	SHORT CHIP 0		
3156		DIC2	RESISTOR		R1797	1-218-990-11	SHORT CHIP 0		
3157		DIC2	RESISTOR		R1901	1-218-937-11	RES-CHIP 47 5% 1/16W		
3158		DIC2	RESISTOR		R1903	1-218-937-11	RES-CHIP 47 5% 1/16W		
3159		DIC2	RESISTOR		R1905	1-218-949-11	RES-CHIP 470 5% 1/16W		
3160		DIC2	RESISTOR		R1914	1-218-990-11	SHORT CHIP 0		
3161		DIC2	RESISTOR		R1915	1-218-941-81	RES-CHIP 100 5% 1/16W		
3162		DIC2	RESISTOR		R1918	1-218-941-81	RES-CHIP 100 5% 1/16W		
3163		DIC2	RESISTOR		R1919	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
3164		DIC2	RESISTOR		R1920	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3165		DIC2	RESISTOR		R1921	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
3166		DIC2	RESISTOR		R1923	1-218-977-11	RES-CHIP 100K 5% 1/16W		
3167		DIC2	RESISTOR		R1924	1-218-977-11	RES-CHIP 100K 5% 1/16W		
3168		DIC2	RESISTOR		R1925	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3169		DIC2	RESISTOR		R1926	1-218-990-11	SHORT CHIP 0		
3170		DIC2	RESISTOR		R1928	1-218-990-11	SHORT CHIP 0		
3171		DIC2	RESISTOR		R1929	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3172		DIC2	RESISTOR		R1930	1-218-941-81	RES-CHIP 100 5% 1/16W		
3173		DIC2	RESISTOR		R1931	1-218-941-81	RES-CHIP 100 5% 1/16W		
3174		DIC2	RESISTOR		R1932	1-218-941-81	RES-CHIP 100 5% 1/16W		
3175		DIC2	RESISTOR		R1935	1-218-941-81	RES-CHIP 100 5% 1/16W		
3176		DIC2	RESISTOR		R1938	1-218-947-11	RES-CHIP 330 5% 1/16W		
3177		DIC2	RESISTOR		R1939	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3178		DIC2	RESISTOR		R1944	1-216-295-91	SHORT CHIP 0		
3179		DIC2	RESISTOR		R1945	1-218-941-81	RES-CHIP 100 5% 1/16W		
3180		DIC2	RESISTOR		R1946	1-218-941-81	RES-CHIP 100 5% 1/16W		
3181		DIC2	RESISTOR		R1947	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3182		DIC2	RESISTOR		R1948	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3183		DIC2	RESISTOR		R1949	1-218-937-11	RES-CHIP 47 5% 1/16W		
3184		DIC2	RESISTOR		R1950	1-218-937-11	RES-CHIP 47 5% 1/16W		
3185		DIC2	RESISTOR		R1951	1-218-937-11	RES-CHIP 47 5% 1/16W		
3186		DIC2	RESISTOR		R1952	1-218-937-11	RES-CHIP 47 5% 1/16W		
3187		DIC2	RESISTOR		R1953	1-218-990-11	SHORT CHIP 0		
3188		DIC2	RESISTOR		R1954	1-218-990-11	SHORT CHIP 0		
3189		DIC2	RESISTOR		R1955	1-218-989-11	RES-CHIP 1M 5% 1/16W		
3190		DIC2	RESISTOR		R1956	1-218-989-11	RES-CHIP 1M 5% 1/16W		
3191		DIC2	RESISTOR		R1957	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3192		DIC2	RESISTOR		R1958	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
3193		DIC2	RESISTOR		R1959	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3194		DIC2	RESISTOR		R1960	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
3195		DIC2	RESISTOR		R1961	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
3196		DIC2	RESISTOR		R1962	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
3197		DIC2	RESISTOR		R1963	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
3198		DIC2	RESISTOR		R1964	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
3199		DIC2	RESISTOR		R1965	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
3200		DIC2	RESISTOR		R1966	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
3201		DIC2	RESISTOR		R1967	1-218-971-11	RES-CHIP 33K 5% 1/16W		
3202		DIC2	RESISTOR		R1968	1-218-971-11	RES-CHIP 33K 5% 1/16W		
3203		DIC2	RESISTOR		R1969	1-208-689-11	METAL CHIP 1.8K 0.5% 1/16W		
3204		DIC2	RESISTOR		R1970	1-208-689-11	METAL CHIP 1.8K 0.5% 1/16W		
3205		DIC2	RESISTOR		R1971	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3206		DIC2	RESISTOR		R1972	1-218-937-11	RES-CHIP 47 5% 1/16W		
3207		DIC2	RESISTOR		R1973	1-218-937-11	RES-CHIP 47 5% 1/16W		
3208		DIC2	RESISTOR		R1974	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3209		DIC2	NETWORK		RB1204	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3210		DIC2	NETWORK		RB1205	1-234-795-21	RES, NETWORK 0X4 (2010)		
3211		DIC2	NETWORK		RB1206	1-234-372-21	RES, NETWORK 100X4 (1005)		
3212		DIC2	NETWORK		RB1207	1-234-372-21	RES, NETWORK 100X4 (1005)		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3213		DIC2	NETWORK		RB1208	1-234-372-21	RES, NETWORK 100X4 (1005)		
3214		DIC2	NETWORK		RB1209	1-234-795-21	RES, NETWORK 0X4 (2010)		
3215		DIC2	NETWORK		RB1210	1-234-372-21	RES, NETWORK 100X4 (1005)		
3216		DIC2	NETWORK		RB1211	1-234-795-21	RES, NETWORK 0X4 (2010)		
3217		DIC2	NETWORK		RB1212	1-234-372-21	RES, NETWORK 100X4 (1005)		
3218		DIC2	NETWORK		RB1213	1-234-372-21	RES, NETWORK 100X4 (1005)		
3219		DIC2	NETWORK		RB1214	1-234-372-21	RES, NETWORK 100X4 (1005)		
3220		DIC2	NETWORK		RB1215	1-234-372-21	RES, NETWORK 100X4 (1005)		
3221		DIC2	NETWORK		RB1216	1-234-369-21	RES, NETWORK 10X4 (1005)		
3222		DIC2	NETWORK		RB1217	1-234-369-21	RES, NETWORK 10X4 (1005)		
3223		DIC2	NETWORK		RB1218	1-234-369-21	RES, NETWORK 10X4 (1005)		
3224		DIC2	NETWORK		RB1219	1-234-369-21	RES, NETWORK 10X4 (1005)		
3225		DIC2	NETWORK		RB1221	1-234-371-21	RES, NETWORK 47X4 (1005)		
3226		DIC2	NETWORK		RB1222	1-234-371-21	RES, NETWORK 47X4 (1005)		
3227		DIC2	NETWORK		RB1223	1-234-371-21	RES, NETWORK 47X4 (1005)		
3228		DIC2	NETWORK		RB1224	1-234-371-21	RES, NETWORK 47X4 (1005)		
3229		DIC2	NETWORK		RB1225	1-234-371-21	RES, NETWORK 47X4 (1005)		
3230		DIC2	NETWORK		RB1226	1-234-372-21	RES, NETWORK 100X4 (1005)		
3231		DIC2	NETWORK		RB1400	1-234-702-11	RES, NETWORK 68X4 (1005)		
3232		DIC2	NETWORK		RB1401	1-234-702-11	RES, NETWORK 68X4 (1005)		
3233		DIC2	NETWORK		RB1402	1-234-702-11	RES, NETWORK 68X4 (1005)		
3234		DIC2	NETWORK		RB1403	1-234-702-11	RES, NETWORK 68X4 (1005)		
3235		DIC2	NETWORK		RB1404	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3236		DIC2	NETWORK		RB1405	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3237		DIC2	NETWORK		RB1406	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3238		DIC2	NETWORK		RB1407	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3239		DIC2	NETWORK		RB1408	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3240		DIC2	NETWORK		RB1409	1-234-369-21	RES, NETWORK 10X4 (1005)		
3241		DIC2	NETWORK		RB1410	1-234-369-21	RES, NETWORK 10X4 (1005)		
3242		DIC2	NETWORK		RB1411	1-234-369-21	RES, NETWORK 10X4 (1005)		
3243		DIC2	NETWORK		RB1412	1-234-369-21	RES, NETWORK 10X4 (1005)		
3244		DIC2	NETWORK		RB1418	1-234-371-21	RES, NETWORK 47X4 (1005)		
3245		DIC2	NETWORK		RB1419	1-234-371-21	RES, NETWORK 47X4 (1005)		
3246		DIC2	NETWORK		RB1420	1-234-371-21	RES, NETWORK 47X4 (1005)		
3247		DIC2	NETWORK		RB1421	1-234-371-21	RES, NETWORK 47X4 (1005)		
3248		DIC2	NETWORK		RB1422	1-234-371-21	RES, NETWORK 47X4 (1005)		
3249		DIC2	NETWORK		RB1423	1-234-372-21	RES, NETWORK 100X4 (1005)		
3250		DIC2	NETWORK		RB1424	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3251		DIC2	NETWORK		RB1425	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3252		DIC2	NETWORK		RB1426	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3253		DIC2	NETWORK		RB1427	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3254		DIC2	NETWORK		RB1428	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3255		DIC2	NETWORK		RB1429	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3256		DIC2	NETWORK		RB1430	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3257		DIC2	NETWORK		RB1431	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3258		DIC2	NETWORK		RB1600	1-234-372-21	RES, NETWORK 100X4 (1005)		
3259		DIC2	NETWORK		RB1601	1-234-372-21	RES, NETWORK 100X4 (1005)		
3260		DIC2	NETWORK		RB1602	1-234-372-21	RES, NETWORK 100X4 (1005)		
3261		DIC2	NETWORK		RB1603	1-234-372-21	RES, NETWORK 100X4 (1005)		
3262		DIC2	NETWORK		RB1604	1-234-372-21	RES, NETWORK 100X4 (1005)		
3263		DIC2	NETWORK		RB1605	1-234-372-21	RES, NETWORK 100X4 (1005)		
3264		DIC2	NETWORK		RB1606	1-234-372-21	RES, NETWORK 100X4 (1005)		
3265		DIC2	NETWORK		RB1607	1-234-372-21	RES, NETWORK 100X4 (1005)		
3266		DIC2	NETWORK		RB1608	1-234-372-21	RES, NETWORK 100X4 (1005)		
3267		DIC2	NETWORK		RB1609	1-234-372-21	RES, NETWORK 100X4 (1005)		
3268		DIC2	NETWORK		RB1610	1-234-372-21	RES, NETWORK 100X4 (1005)		
3269		DIC2	NETWORK		RB1700	1-234-370-21	RES, NETWORK 22X4 (1005)		
3270		DIC2	NETWORK		RB1701	1-234-370-21	RES, NETWORK 22X4 (1005)		
3271		DIC2	NETWORK		RB1702	1-234-370-21	RES, NETWORK 22X4 (1005)		
3272		DIC2	NETWORK		RB1703	1-234-370-21	RES, NETWORK 22X4 (1005)		
3273		DIC2	NETWORK		RB1704	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3274		DIC2	NETWORK		RB1705	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3275		DIC2	NETWORK		RB1706	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3276		DIC2	NETWORK		RB1707	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3277		DIC2	NETWORK		RB1708	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3278		DIC2	NETWORK		RB1709	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3279		DIC2	NETWORK		RB1710	1-234-370-21	RES, NETWORK 22X4 (1005)		
3280		DIC2	NETWORK		RB1711	1-234-370-21	RES, NETWORK 22X4 (1005)		
3281		DIC2	NETWORK		RB1900	1-234-371-21	RES, NETWORK 47X4 (1005)		
3282		DIC2	NETWORK		RB1901	1-234-371-21	RES, NETWORK 47X4 (1005)		
3283		DIC2	CRYSTAL		X1200	1-795-951-21	QUARTZ CRYSTAL OSCILLATOR(SMD)		
3284		DIC2	CRYSTAL		X1700	1-795-951-21	QUARTZ CRYSTAL OSCILLATOR(SMD)		
3285		DIC2	CRYSTAL		X1702	1-813-114-21	VIBRATOR, CRYSTAL		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3286		DIC2	CRYSTAL		X1900	1-781-945-21	VIBRATOR, CERAMIC		
3287		DIC2	CRYSTAL		X1901	1-795-244-11	VIBRATOR, CERAMIC		
3288		DIC2	CRYSTAL		X1902	1-795-244-11	VIBRATOR, CERAMIC		
3289		J1	CONNECTOR		CN1801	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD)4P		
3290		J1	CONNECTOR		CN1803	1-695-915-11	TAB (CONTACT)		
3291		J1	CONNECTOR		CN1809	1-785-318-11	PIN, CONNECTOR (STRAIGHT) 6P		
3292		J1	CONNECTOR		CN1810	1-785-326-11	PIN, CONNECTOR (STRAIGHT) 14P		
3293		J1	CONNECTOR	*	CN1811	1-573-768-21	PIN, CONNECTOR (1.5MM) (SMD)5P		
3294		J1	CONNECTOR		CN1813	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD)4P		
3295		J1	CONNECTOR		CN1814	1-695-889-21	PIN, CONNECTOR (PC BOARD) 10P		
3296		J1	LEAD PIN	*	CP1802	4-042-408-02	PIN(45), WIRE		
3297		J1	RESISTOR		R1805	1-216-864-11	SHORT CHIP 0		
3298		J1	RESISTOR		R1806	1-216-864-11	SHORT CHIP 0		
3299		J1	RESISTOR		R1807	1-216-864-11	SHORT CHIP 0		

Sony EMCS Corporation
Ichinomiya TEC

English
2005HL08-Data
Made in Japan
© 2005. 8

9-878-205-02